


WITCH TO THE EUTUR

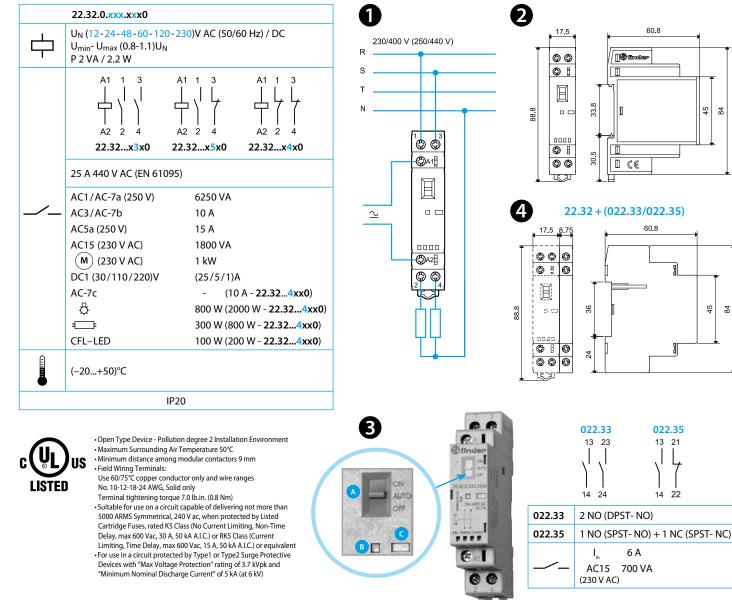

ENGLISH

60.8

60.8

022.35

13 21

14 22

28

45 84

22.32 MODULAR CONTACTORS 25 A

Contact gap \geq 3 mm for NO contacts only; NC contacts \geq 1.5 mm. Compliant with EN 61095: 2009. AC/DC silent coil (with varistor protection).

CONNECTION DIAGRAM

2 OUTLINE DRAWINGS

B FRONT VIEW

A = Selector (22.32.0.xxx.xx40)

The three-position manual selector has the following functions:

ON position

The contacts are latched in the operated state (NO contacts closed and NC contacts - open), the mechanical indicator is visible in its window, the LED is not illuminated.

AUTO position

The state of contacts, mechanical indicator and LED follow the coil supply voltage.

OFF position

Even if terminals A1 - A2 are supplied with rated voltage, the coil is not energized, and so the contacts remain in the non-operated state, the mechanical indicator is not visible and the LED is not illuminated.

$\mathbf{B} = \mathbf{LED}$

C = Mechanical indicator

- Auxiliary contact module available, "Quick assembly" with the main contactor 022.33/022.35

- It is not possible to assembly the auxiliary module on 22.32.0.xxx.x4x0 (2 NC versions)

OTHER DATA

It is suggested an air gap of 9 mm between adjacent relays for installations and working conditions close to the limit (that is, ambient temperature > 40°C, coil operated for a prolonged period of time, all contacts loaded with current > 20 A).

(1) finder

Utility Model - IB2232001 - 09/17 - FINDER S.p.A. - 10040 ALMESE (TO) - ITALY