





# Installation Instructions for Bulletin 194R Operating Handle

(Cat 194R-NHR1, -NHR1M, -NHR2, -NHR2M, -HM4-NFPA1, -HM4-NFPA3)



**WARNING:** To prevent electrical shock, disconnect from power source before installing or servicing.




## 194R-NHR1, -NHR1M, -NHR2, -NHR2M


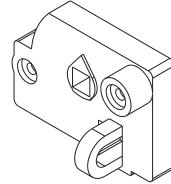
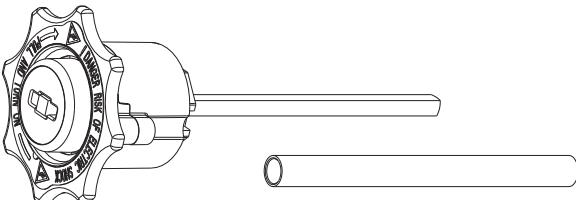



194R-PLA1

1

Disconnect	A	B
194R-N30-__	$\geq 165 \text{ mm}$ 6.5 in	
194R-B20-__ 194R-B32-__ 194R-C30-__ 194R-F25-__ 194R-F32-__ 194R-J30-__	$\geq 190 \text{ mm}$ 7.5 in	155 mm 6.0 in
194R-N60-__	$\geq 180 \text{ mm}$ 7.0 in	
194R-B63-__ 194R-D32-__ 194R-D63-__ 194R-F63-__ 194R-H30-__ 194R-H60-__ 194R-J60-__	$\geq 205 \text{ mm}$ 8.0 in	170 mm 6.75 in

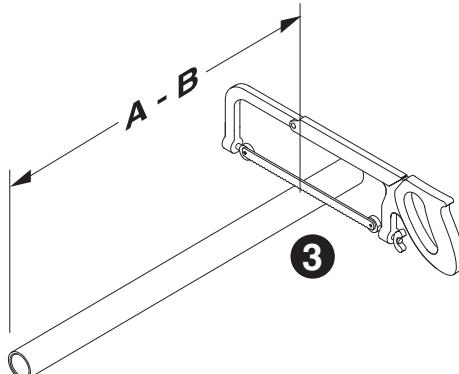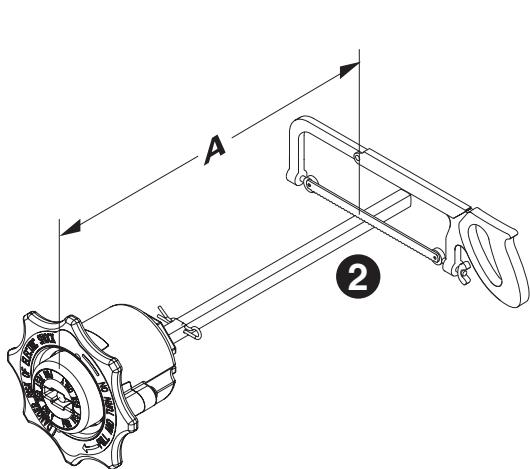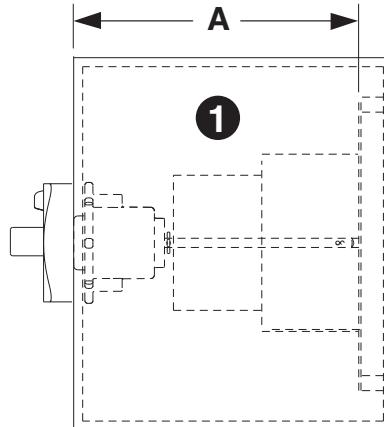

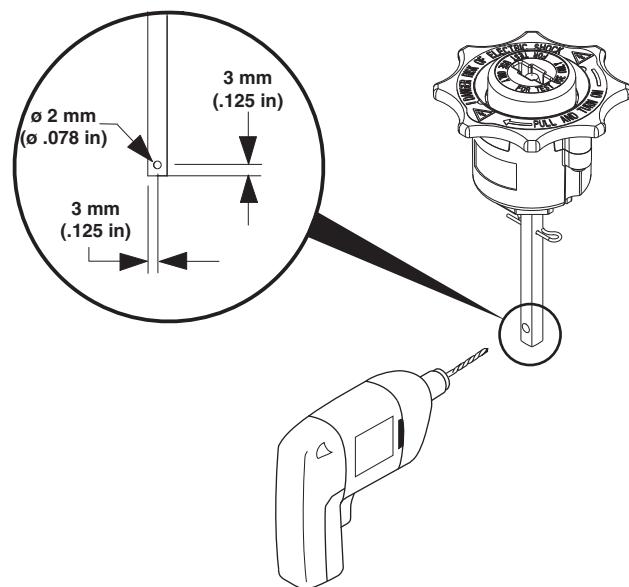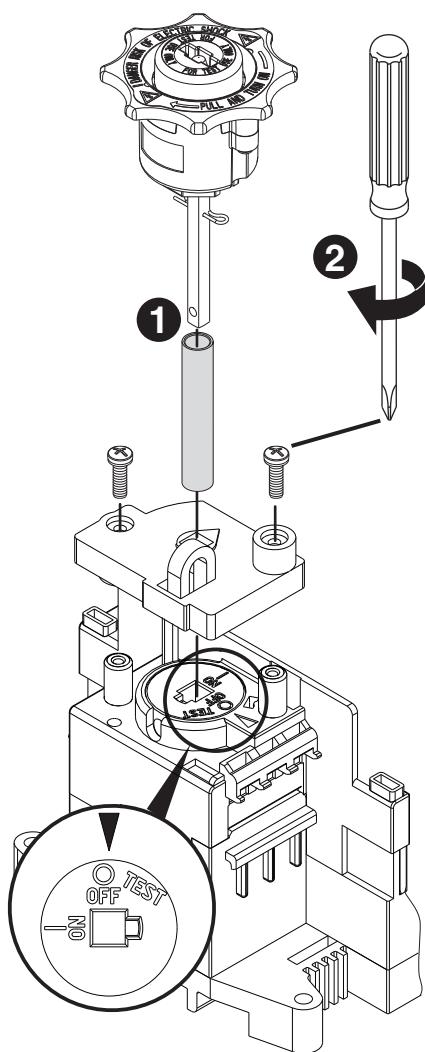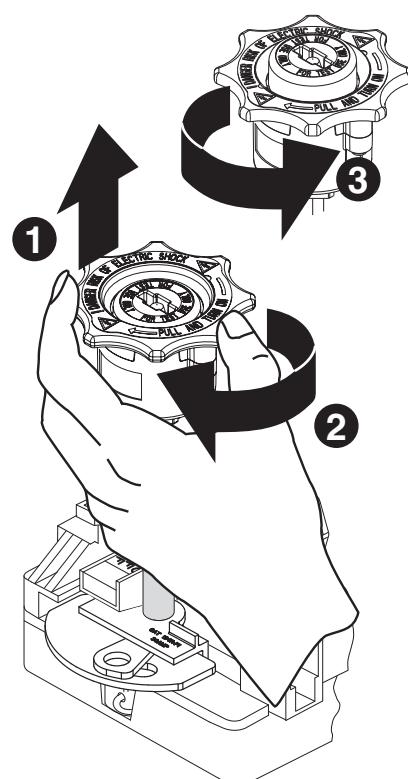
**2****3****4**

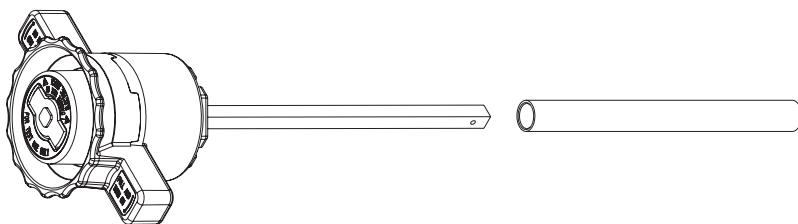

**1**



**194R-NU100-175\***  
**194R-NU200-175\***

**194R-NU400-175\***

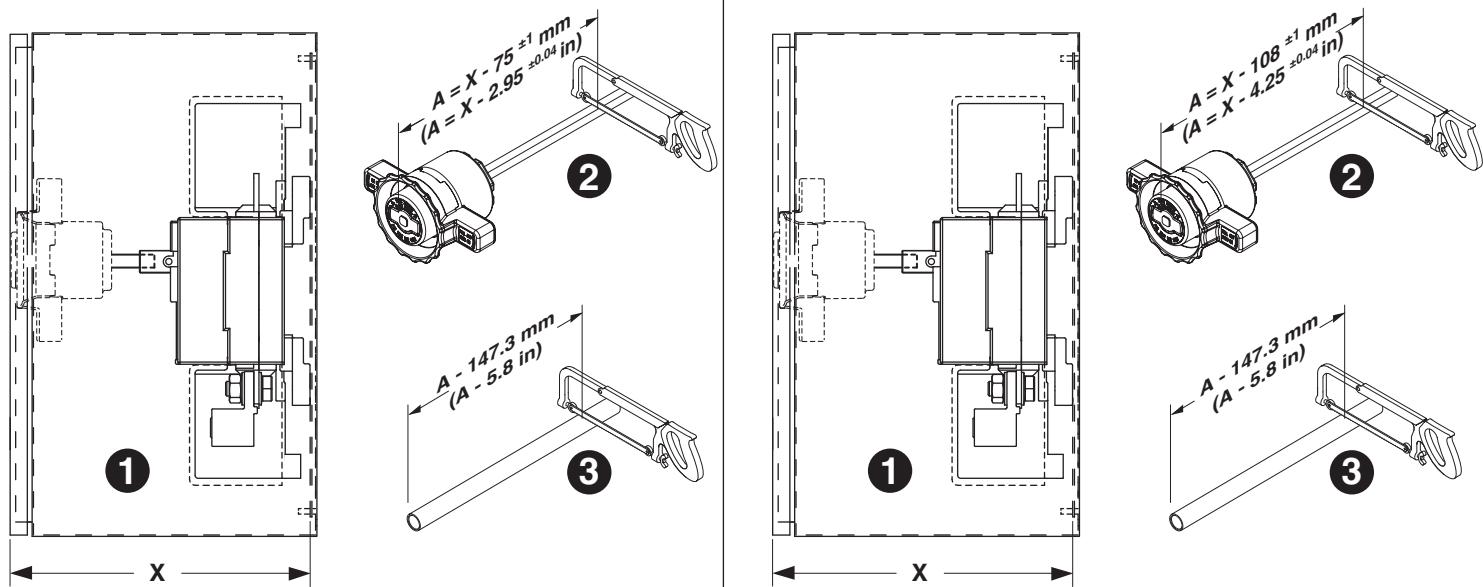

**194R-NE-125-175\***  
**194R-NE-160-175\***  
**194R-NE-250-175\***



**194R-NE-400-175\***  
**194R-NE-630-175\***

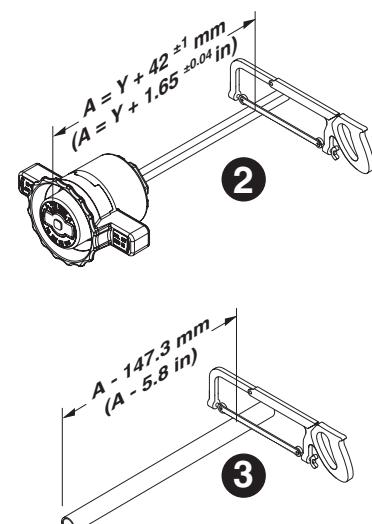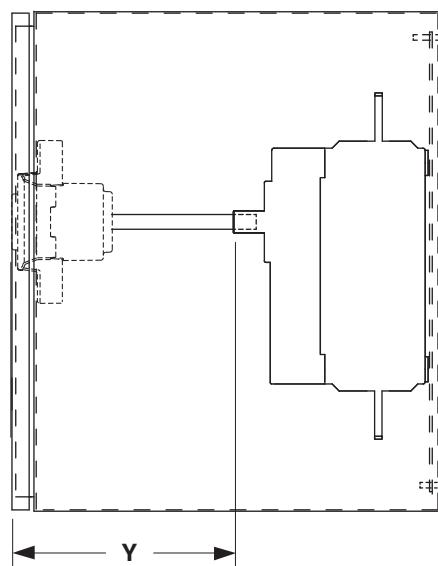


## 1 (Cont'd)

194R-B100-1753    194R-B400-1753    194R-D400-1753  
194R-B160-1753    194R-D125-1753    194R-J100-1753  
194R-B200-1753    194R-D160-1753    194R-J200-1753  
194R-B250-1753    194R-D250-1753


194R-J400-1753

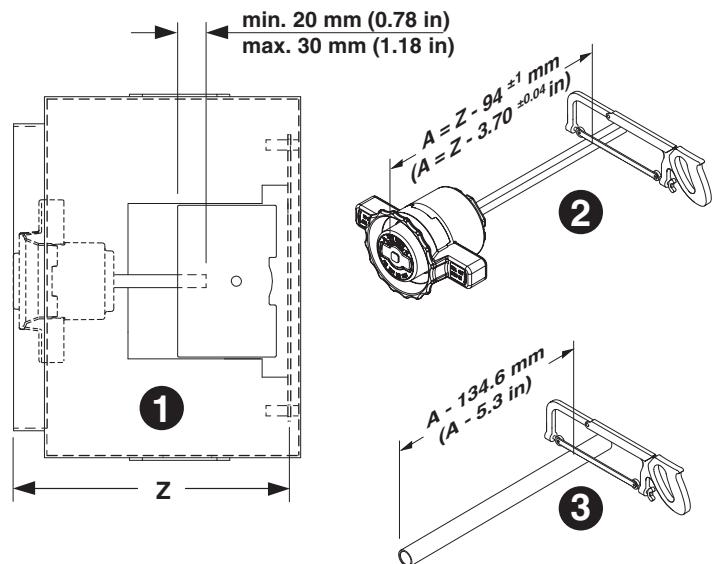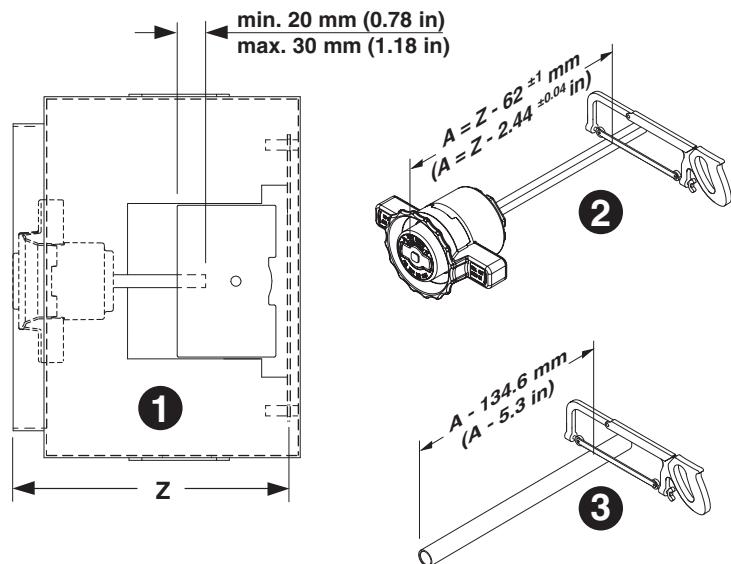

2

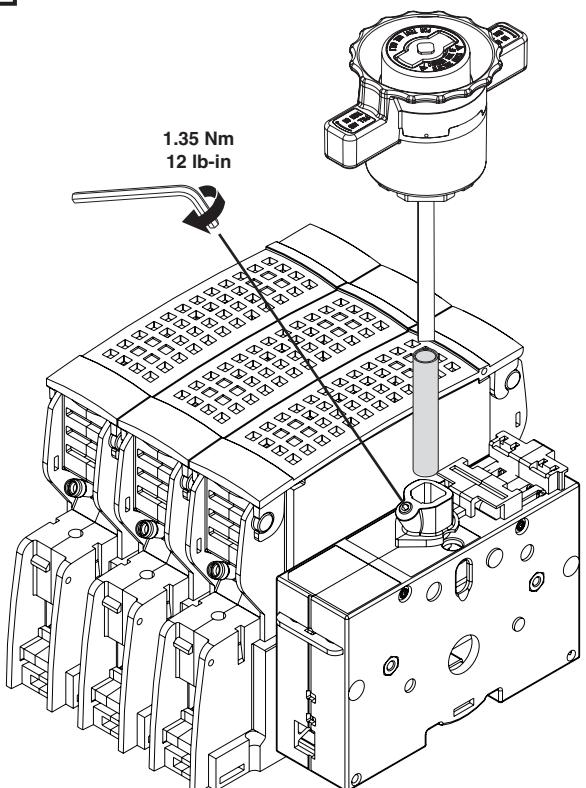

3

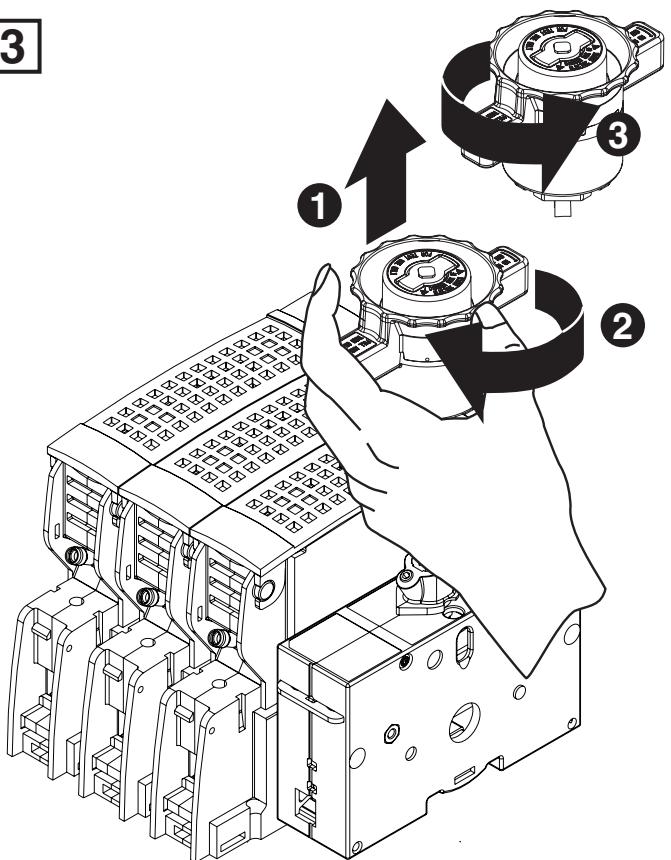

PN-156411

DIR 10000284710 (Version 01)

Publication 194R-IN017B-EN-P

Printed in U.S.A.

**Rockwell  
Automation**