User Manual

Original Instructions



Guardmaster[®] Safety Relays (GSR)

Catalog Numbers 440R-S13R2, 440R-S12R2, 440R-D22R2, 440R-D22S2, 440R-EM4R2, 440R-EM4R2D





Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



Labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

Preface	Who Should Use This Manual?	7
	Additional Resources	7
	Definitions	8
	Chapter 1	
Overview	Hardware Features	9
	Multi-position Switches	9
	Removable Terminal Blocks	9
	Status Indicators	0
	Optical Communication Bus 10	0
	CI Safety Relay 10	0
	DI Safety Relay 10	0
	DIS Safety Relay 10	0
	EM Safety Relay 1	1
	EMD Safety Relay1	1
	SI Safety Relay 1	1
	Chapter 2	
Installation	Mounting Dimensions 12	2
mstandton	DIN Rail Mounting and Removal	2
	Removal	2
	Snacing 14	4
	Removable Terminals	4
	Enclosure Considerations 14	4
	Prevent Excessive Heat	5
	Chanter 3	
Power Ground and Wire		7
rower, dround, and whe		/7
	Wire Size	/ 7
	Terminal Assignments	8
	Ground the Relay	9
	Connect a Power Supply	9
	Safety Inputs	0
	Devices with Mechanical Contacts 20	0
	Safety Devices with OSSD Outputs	1
	Safety Mats	3
	Safety Outputs	4
	Electromechanical Outputs	4
	OSSD Outputs	4
	Surge Suppressors. 22	5
	Single Wire Safety Input and Output	6
	Auxiliary Output	/
	Reset and Monitor Input	/
	Automatic/Manual Reset	7
	Monitored Reset	ð o
	Retriggerable Input 29	ブの
	log Input 2	י מ
	Jog mput	1

	Chapter 4
Configuration	Switch Adjustment31DI and DIS Safety Relays32EMD Safety Relay32Configuration Process331. Prepare the Switches332. Apply Power333. Adjust the Switches344. Verify the Settings345. Cycle the Power34
	Chapter 5
Status Indicators and Troubleshooting	Indicators During Powerup35Indicators During Normal Operation35Indicators During Diagnostics36
	Chapter 6
Pulse Testing Functions	Pulse Testing for Inputs.37Pulse Testing for OSSD Outputs38
	Chapter 7
EMD Safety Relay Timing Functions	Off Delay, Non-retriggerable 39 Case 1 39 Case 2 40 Case 3 40 Off Delay, Retriggerable 40 Case 1 40 Case 2 41 On Delay. 41 Case 2 41 Jog 42 Case 1 42 Case 2 43
	Chapter 8
Internal Circuit Block Diagrams	CI Safety Relay.45DI Safety Relay.45DIS Safety Relay45EM Safety Relay.46EMD Safety Relay.46SI Safety Relay46

	Chapter 9	
Application and Wiring Examples	CI Safety Relay.	47
	DI Safety Relay	48
	DIS Safety Relay	49
	EM Safety Relay	50
	EMD Safety Relay	51
	SI Safety Relay	52
	Chapter 10	
Ethernet Communication	Web Page	54
	RSLogix AOP	54
	Appendix A	
Specifications	General	55
	Environmental	55
	Safety Inputs IN, IN1, and IN2	56
	Reset Input	56
	B1 Input.	57
	Safety Outputs	57
	Auxiliary Output.	58
	Single wire Safety	20
	Appendix B	
Regulatory Approvals	Agency Certifications	59
	Compliance to European Union Directives	59
	EMC Directive	59
	Machine Safety Directive	59 60
	Performance Level/Category	60
Index	Index	61
IIIII	1100x	01

Notes:

This manual is a reference guide for the family of Guardmaster[®] Safety Relays (GSR). It describes the procedures that you use to install, wire, and troubleshoot your relay. This manual also gives an overview of the operation of safety relays.

Who Should Use This Manual?

Use this manual if your responsibilities include design, installation, programming, or troubleshooting of control systems that use safety relays, including catalog numbers:

- 440R-S13R2 (CI)
- 440R-D22R2 (DI)
- 440R-D22S2 (DIS)
- 440R-EM4R2 (EM)
- 440R-EM4R2D (EMD)
- 440R-S12R2 (SI)

You must have a basic understanding of electrical circuitry and familiarity with safety-related control systems. If you do not have this knowledge, obtain the proper training before using this product.

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

Resource	Description
Guardmaster EtherNet/IP Network Interface User Manual, publication <u>440R-UM009</u>	Describes procedures that you use to install, wire, configure, troubleshoot, and use EtherNet/IP modules.
Industrial Automation Wiring and Grounding Guidelines, publication <u>1770-4.1</u>	Provides general guidelines for installing a Rockwell Automation® industrial system.
Product Certifications website, <u>http://</u> <u>www.rockwellautomation.com/global/certification/</u> <u>overview.page</u>	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at

<u>http://www.rockwellautomation.com/global/literature-library/overview.page</u>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

Definitions

Publication <u>AG-7.1</u> contains a glossary of terms and abbreviations that are used by Rockwell Automation to describe industrial automation systems. The following is a list of specific terms and abbreviations used in this manual.

- N.C. (Normally Closed) An electrical contact whose normal state is in the closed position.
- N.O. (Normally Open) An electrical contact whose normal state is in the open position.
- **PLC** A programmable logic controller or a programmable automation controller.
- **Reaction Time** The time between the true states of one input to the ON state of the output.
- **Recovery Time** The time that is required for the input to be in the LO state before returning to the HI state.
- **Reset** Safety relays offer two types of reset: monitored manual and automatic/manual.
 - Monitored Manual The safety relay performs a reset function when the reset signal goes from OFF to ON and then back to OFF in a prescribed time-period. The reset occurs on the trailing edge.
 - Automatic/Manual The safety relay performs a reset function if the reset input is ON. If the reset input is connected directly to 24V, the reset function is executed immediately when the inputs become closed or active. If a contact (push button or equivalent device) is used in the reset input, the reset function is executed on the leading edge of the reset signal (if the inputs are closed or active).
- **Response Time** Describes the time between the trigger of one input to the OFF state of the output. Throughout this manual, the safety outputs are described as turning off immediately. This means that the safety outputs turn off within the response time.
- OSSD (Output Signal Switching Device) Typically a pair of solidstate signals that are pulled up to the DC source supply. The signals are tested for short circuits to the DC power supply, short circuits to the DC common and shorts circuits between the two signals.
- Single Wire Safety (SWS) A unique, safety-rated signal that is sent over one wire to indicate a safety status. The SWS can be used in safety systems that require Category 4, Performance Level e, per ISO 13849-1 and Safety Integrity Level (SIL) 3, per IEC 62061 and IEC 61508. When an SWS signal is present, this publication describes this state as ACTIVE or ON. This signal is also referred to as the logic link signal.

Overview

The Guardmaster safety relay (GSR) family is a group of advanced generalpurpose and special-purpose safety relays. This user manual addresses the CI, DI, DIS, EM, EMD, and SI safety relays from this family of relays.



Hardware Features

Multi-position Switches

Most safety relays are configured by adjusting multi-position switches to set their functionality⁽¹⁾. The switches are on the front face of the relay so you can see the set position during, and after, configuration. During the configuration process, status indicators on the front face of the relay confirm the switch settings.

Removable Terminal Blocks

Each relay module is only 22.5 mm (0.9 in.) wide with four removable terminal blocks (two on top and two on bottom). The terminal blocks are keyed to confirm that they are installed in their proper slots.

(1) The EM safety relay does not require configuration.

Status Indicators

Multiple status indicators provide status and diagnostics. Under fault conditions, the PWR/Fault status indicator blinks in specific patterns to help diagnose the fault.

Optical Communication Bus

The DI, DIS, EM, EMD, and SI safety relays have an optical communications bus that delivers status and diagnostics to the catalog number 440R-ENETR EtherNet/IP[™] module (not shown in Figure 1) without additional wiring. For additional information, see Ethernet Communication on page 53.

Safety relays uses single wire safety (SWS) signals that allow multiple safety relays to work in coordination with one another in small to medium size safety systems. The SWS feature allows safety relays to communicate the highest safety-rated control signal from one safety system to another over one wire (plus a common ground connection). The wire must be less than 30 meters (98.4 feet) long.

CI Safety Relay	The CI safety relay has one dual-channel input with three electromechanical relay outputs. The CI safety relay can be configured for automatic or monitored manual reset by adjusting the switch on the front. The CI safety relay has an SWS output, but does not support SWS input.
	The CI safety relay is compatible to the MSR127 safety monitoring relay. The CI safety relay has the same number of inputs and outputs, the same width, and the same terminal locations as the MSR127 relay.
DI Safety Relay	The DI safety relay has two dual-channel inputs and two electromechanical relay outputs. In addition, the DI safety relay has an SWS input and output. The DI safety relay can be set for automatic or monitored manual reset by adjusting the switch on the front panel. The configuration switch also sets the AND/OR logic applied to the inputs.
DIS Safety Relay	The DIS safety relay has two dual-channel inputs and four solid-state outputs. Two of the four solid-state outputs are designed to operate with high- capacitance loads. In addition, the DIS safety relay has an SWS input and output. The DIS safety relay can be set for automatic or monitored manual reset by adjusting the switch on the front panel. The configuration switch also sets the AND/OR logic applied to the inputs.

EM Safety Relay	The EM safety relay is an expansion module with four immediately operated electromechanical relay outputs. The only input to the EM safety relay is an SWS input. The EM safety relay is designed to expand the outputs of the GSR family of host relays. The EM safety relay also has an SWS output for further expansion.
EMD Safety Relay	 The EMD safety relay is an expansion module with delayed electromechanical relay outputs. The EMD safety relay can be configured for one of the following functions: On delay Off delay Jog
	The settings of the two switches on the front face of the relay configure the functionality and duration of the delay and jog.
	The main input to the EMD safety relay is the single wire safety input. With the SWS signal, the EMD safety relay is designed to expand the outputs of the GSR family of host relays. The EMD safety relay also has an SWS output for further expansion.
	An additional input is used with the jog function or to set the off delay as retriggerable. See <u>EMD Safety Relay Timing Functions on page 39</u> for detailed descriptions on the EMD safety relay timing functions.
SI Safety Relay	The SI safety relay has one dual-channel input with two electromechanical relay outputs. The SI safety relay can be configured for automatic or monitored manual reset by adjusting the switch on the front. The SI safety relay also has an SWS output.
	The SI safety relay is similar in functionality to the MSR126 safety monitoring relay.

Notes:

Installation

All safety relays in this manual have the same dimensions (Figure 2).

Mounting Dimensions

DIN Rail Mounting and Removal

Figure 2 - Dimensions [mm (in.)]



Safety relays mount onto 35 mm DIN rails: 35x7.5x1 mm (EN 50022-35x7.5).

- 1. Hold the top at an angle (<u>Figure 3</u>).
- 2. Slide down until the housing catches the rail.
- 3. Swing the bottom down and push until the latch clips onto the rail.

Figure 3 - DIN Rail Mounting



Removal

To remove a safety relay, use a flat blade screwdriver to pry the DIN rail latch downwards until it is in the unlatched position. Then, swing the module up.

Spacing

Safety relays can be mounted directly next to other safety relays. When the EtherNet/IP module is used, the safety relay must be mounted within 10 mm (0.4 in.) of its neighboring module to maintain effective communications.

Maintain a space of 50.8 mm (2 in.) above, below, and in front of the relay for adequate ventilation.

Removable Terminals

Safety relays have removable terminals to ease wiring and replacement.

Figure 4 - Removable Terminals



- 1. Insert the tip of a small flat-blade screwdriver into the slot near the terminal screws.
- 2. Rotate the screwdriver to unlock the terminal block.

The terminal block can then be removed from the housing.

Enclosure Considerations

Most applications require installation in an industrial enclosure to reduce the effects of electrical interference and environmental exposure. Pollution Degree 2 is an environment where normally only non-conductive pollution occurs except that occasionally temporary conductivity that is caused by condensation shall be expected. Overvoltage Category II is the load level section of the electrical distribution system. At this level, transient voltages are controlled and do not exceed the impulse voltage capability of the product insulation.

This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in IEC 60664-1), at altitudes up to 2000 m (6562 ft) without derating. This equipment is considered Group 1, Class A industrial equipment according to IEC/CISPR 11. Without appropriate precautions, there may be difficulties with electromagnetic compatibility in residential and other environments due to conducted and radiated disturbances. This equipment is supplied as open-type equipment. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that are present and appropriately designed to prevent personal injury as a result of accessibility to live parts. The enclosure must have suitable flame-retardant properties to prevent or minimize the spread of flame, in compliance with a flame spread rating of 5VA, V2, V1, V0 (or equivalent) if non-metallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication contain additional information regarding specific enclosure-type ratings that are required to comply with certain product safety certifications.

For more informations, see:

- Industrial Automation Wiring and Grounding Guidelines, Rockwell Automation publication <u>1770-4.1</u>, for additional installation requirements.
- NEMA Standard 250 and IEC 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosure.

Prevent Excessive Heat For most applications, normal convective cooling keeps the relay within the specified operating range. Verify that the specified temperature range is maintained. Proper spacing of components within an enclosure is usually sufficient for heat dissipation.

In some applications, other equipment inside or outside the enclosure can produce a substantial amount of heat. In this case, place blower fans inside the enclosure to help with air circulation and to reduce "hot spots" near the controller.

Additional cooling provisions are necessary when high ambient temperatures are encountered. Do not bring in unfiltered outside air. Place the controller in an enclosure to help protect it from a corrosive atmosphere. Harmful contaminants or dirt could cause improper operation or damage to components. In extreme cases, you may need to use air conditioning to help protect against heat buildup within the enclosure.

Notes:

Power, Ground, and Wire

Wiring Requirements and Recommendation



ATTENTION: Before you install and wire any device, disconnect power to the system.



ATTENTION: Calculate the maximum possible current in each power and common wire. Observe all electrical codes that dictate the maximum current allowable for each wire size. Current above the maximum rating causes wiring to overheat, which can cause damage.

- Allow for at least 50 mm (2 in.) between I/O wire ducts or terminal strips and the relay.
- Route incoming power to the relay by a path separate from the device wiring. Where paths must cross, their intersection should be perpendicular.
- Do not run signal or communications wiring and power wiring in the same conduit. Route wires with different signal characteristics by separate paths.
- Separate wiring by signal type. Bundle wiring with similar electrical characteristics together.
- Separate input wiring from output wiring.
- Label wiring to all devices in the system. Use tape, shrink-tubing, or other more dependable means to label wire. In addition to labels, use colored insulation to identify wiring based on signal characteristics. For example, use blue for DC wiring and red for AC wiring.

Wire Size

Each terminal can accommodate copper wire with size from 0.2...2.5 mm² (24...14 AWG). Use copper that withstands 60...75 °C (140...167 °F).

Terminal Torque

Torque terminals to 0.4 N·m (4 lb·in).

Terminal Assignments

Safety relays have four terminals: two on the top and two on the bottom. As shown in Figure 5, the X2 and X4 terminal markings apply to the rear terminals. The X1 and X3 terminals apply to the front terminals.

Figure 5 - Terminal Identification



<u>Figure 6</u> shows the front face markings of each of the safety relays, including the terminal and status indicator identifications.

Figure 6 - Relay Face Markings

	6660				
13 23 33 41	S12 S22 S32 S42	S12 S22 S32 S42	33 34 43 44	37 38 47 48	S12 S22
A1 S11 S12 L11	A1 A2 S11 S12	A1 A2 S11 S12	A1 A2 S11 S12	A1 A2 B1 B2	A1 A2 S11 S12
O PWR/Fault	O PWR/Fault	DO PWR/Fault	DO PWR/Fault	DO PWR/Fault	O PWR/Fault
OIN	O IN1	O IN1		OB1	OIN
	O IN2	O IN2		0	
	O Logic IN	O Logic IN	O Logic IN	O Logic IN	
OOUT	OOUT	OOUT	O OUT	OOUT	OOUT
RESET _0				RANGE1	RESET 0
AM TO			33 34 43 44		AM TO
13 23 33 41	⁶ 5 ⁴	⁻ 7 [•] ⁴ ₆ 5 [•] 4	/-/-/-	7 6 5 4	[™] MM
1,1,1,1,6		<u>A1</u>			
\ <u>`````</u>		44		9	\Box
\\\\\\-\-\-Z	\f\f\]	╎┍╇╦╡┦╵	<u> \`-\`-\` </u>	°7'6	$\gamma \gamma \gamma \gamma \gamma \gamma \gamma$
14 24 34 42	13 14 23 24	34 44 14 24	13 14 23 24	0 0	13 14 23 24
C	DI	DIS	EM	EMD	SI
S21 S22 S34 A2	L12 L11 Y32 S34	L12 L11 Y32 S34	L12 L11 X32	L12 L11 X32	L11 Y32 S34
<u>14 24 34 42</u>	13 14 23 24	34 44 14 24	13 14 23 24	17 18 27 28	13 14 23 24

<u>Table 1</u> lists the terminal functions. Many of the terminals perform common functions on multiple relays.

Terminal	Function	Applies To
A1	+24V Supply (+10%, -15%)	All
A2	24V Common	All
S11	Pulse Test Output for Channel 1	CI, DI, DIS, and SI
S21	Pulse Test Output for Channel 2	CI, DI, DIS, and SI
S12	Safety Input for IN1 Channel 1	CI, DI, DIS, and SI
S22	Safety Input for IN1 Channel 2	CI, DI, DIS, and SI
\$32	Safety Input for IN2 Channel 1	DI and DIS
S42	Safety Input for IN2 Channel 2	DI and DIS
S44	Reset Input	CI, DI, DIS, and SI
Y32	Auxiliary Non-safety Output	CI, DI, DIS, and SI
X32	Auxiliary Non-safety Output	EM and EMD
B1	Jog Input	EMD
B2	Re-trigger Input	EMD
L11	Single Wire Safety Output	All
L12	Single Wire Safety Input	DI, DIS, EM, and EMD
13/14, 23/24	Safety Outputs - electromechanical relay	CI, DI, EM, and SI
33/34, 43/44	Safety Outputs - electromechanical relay	EM
14, 24	Safety Outputs - OSSD	DIS
34, 44	Safety Outputs - OSSD for capacitive loads	DIS
17/18, 27/28, 37/38, 47/48	Safety Outputs, Delayed - electromechanical relay	EMD

Table 1 - Terminal Assignments and Functions

There are no special grounding requirements. Terminal A2 must be connected to the common of a 24V supply.

Connect a Power Supply

Ground the Relay

An external 24V DC power supply source must provide power for safety relays.

To comply with the CE (European) Low Voltage Directive (LVD), a DC source compliant with safety extra low voltage (SELV) or protected extra low voltage (PELV) must power the safety relays. Bulletin 1606 power supplies are SELV- and PELV-compliant.

Figure 7 shows the power supply connections. The DI, DIS, EM, EMD, and SI safety relays have the power supply connections at the top. The CI safety relay, which is designed to be backward compatible with the MSR127 monitoring safety relay, has A1 at the top and A2 at the bottom.

Figure 7 - Power Supply Connections



Safety Inputs

Devices with Mechanical Contacts

The GSR family of safety relays can be connected to safety devices that have mechanical contacts. The relays can accommodate either 1 N.C. or 2 N.C. circuits. <u>Table 2</u> shows some of the devices that can be connected to safety relays.

Safety Device	Example Rockwell Products	Contact Availability
E-stop Push Buttons	800F, 800T	1 N.C., 2 N.C., self-monitoring
Tongue Operated Interlock Switches	Trojan™, MT-GD2, Cadet™, Elf™	1 N.C., 2 N.C.
Guard Locking Interlock Switches	440G-LZ, TLS-Z, TLS-GD2, Atlas™	1 N.C., 2 N.C.
Noncontact Switches with Reed Relays	Ferrogard™, Sipha™, magnetically coded	1 N.C., 2 N.C.
Hinge Operated Interlock Switches	Rotacam™, Ensign, Sprite	1 N.C., 2 N.C.
Limit Switches	440P, 802T	1 N.C., 2 N.C.
Trapped Key Interlocks with Electrical Contacts	440T	1 N.C., 2 N.C.
Cable Pull Switches	Lifeline™	1 N.C., 2 N.C.
Enabling Devices	GripSwitch	1 N.C., 2 N.C.
Interposing Relays	700-HPS	1 N.C., 2 N.C.

Table 2 - Safety Devices With Mechanical Contacts

Figure 8 shows the typical connections for devices with 2 N.C. mechanical contacts. One side of each contact is connected to a pulse-testing outputs S11 and S21. The other side is connected to an input terminal. The CI and SI safety relays only have one set of input terminals. The DI and DIS safety relays have two sets of input terminals. The DI and DIS safety relays can operate with only one device connected to either input or with devices connected to both inputs.



Figure 9 shows the typical connections for devices with 1 N.C. mechanical contact. One side of the contact is connected to a pulse-testing output S11. The other side is connected to two input terminals. The CI and SI safety relays only have one set of input terminals. The DI and DIS safety relays have two sets of input terminals. The DI and DIS safety relays can operate with only one device connected or with devices connected to both inputs.





Safety Devices with OSSD Outputs

Devices, such as the GuardShield[™] safety light curtains, SafeZone[™] laser scanners, SensaGuard[™], TLS-Z and 440G-LZ guard locking switches, and Bulletin 442G Multifunction Access Box (MAB) have current-sourcing PNP semiconductor outputs (OSSD), which send their own pulse-tested safety signals through their outputs. These devices do not need to be connected to the safety relay pulse-testing outputs. These devices must have a common power supply reference (24V Com). <u>Figure 10</u> shows a typical example of the connections for devices, like light curtains or laser scanners, with non-cascadable OSSD outputs.





- **TIP** OSSD1 can be connected to either S12 or S22 and OSSD2 can be connected to either S12 or S22.
 - The safeguarding devices must have the same voltage supply reference (24V Com) as the safety relay.

Figure 11 shows an example of a wiring configuration that includes noncascadable and cascade-able devices. The non-cascadable devices (Devices 1 and 2) must always start the cascade. Many cascadable devices (Devices 3...6 or more) can be included in the input circuit. All devices must have the same voltage supply reference (for instance, 24V Com) as the safety relay.

Examples of non-cascadable devices include GuardShield light curtains, SafeZone laser scanners, and safety sensors. Examples of cascadable devices include SensaGuard interlocks, and the TLS-ZR and 440G-LZ guard locking interlocks.



ATTENTION: You must consider the cumulative response time of all cascaded devices and the relay and output devices to verify that the safety function is fulfilled within the required time determined by the risk assessment.



Figure 11 - Example Connections to Device with Cascaded and a Non-cascaded OSSD Devices

Safety Mats

Guardmaster (and similar) safety mats can be connected to safety relays. These mats use parallel metal-plate technology. Stepping on the mat shorts the top metal plate to the bottom metal plate. With the proper connections, safety relays detect the presence of an object on the mat and turn off their outputs. With no presence on the mat, safety relays turn on their outputs.

<u>Figure 12</u> shows the typical connections for safety mats. You notice the reverse of the wiring between a device with 2 N.C. contacts and the safety mat.

When a safety mat is used, safety relays cannot detect short circuits between the inputs or between the inputs and 24V DC. These conditions must be tested during validation.

IMPORTANT When using safety mats, the DI and DIS safety relays must be set for AND logic. If only one mat is used, the second input must be connected with jumpers or to another safety device. If another safety device is connected to the second input, the outputs of the safety device must be ON during configuration and during power-up.

Figure 12 - Example Connections to Safety Mats



CI and SI

DI and DIS

Safety Outputs

Electromechanical Outputs

Internally, the CI, DI, EM, EMD, and SI safety relays have two positive-guided relays that are connected in series to form the safety outputs. One side of the contact must be connected to a voltage supply (see <u>Specifications on page 55</u> for appropriate ratings). The other side of the contact must be connected to a load.





OSSD Outputs

The DIS safety relay has OSSD safety outputs on terminals 14, 24, 34 and 44. Terminals 34 and 44 have a series diode; these terminals are intended for devices with high capacitance. Output terminals 14 and 24 are pulse tested and can only tolerate a load capacitance up to 1.6 μ F. Output terminals 34 and 44 are pulse tested and capacitance up to 9 μ F.

The pulse-tested outputs check for short circuits:

- Between each terminal
- Between each terminal and the 24V supply
- Between each terminal and 24V common.

The load must be connected to the same voltage reference as terminal A2.

Figure 14 - OSSD Output Connections



DIS

Surge Suppressors

Because of the potentially high current surges that occur when switching inductive load devices, such as motor starters and solenoids, the use of some type of surge suppression to help protect and extend the operating life of the relays is required. By adding a suppression device directly across the coil of an inductive device, you prolong the life of the outputs. You also reduce the effects of voltage transients and electrical noise from radiating into adjacent systems.

<u>Figure 15</u> shows an output with a suppression device. We recommend that you locate the suppression device as close as possible to the load device.

For outputs that use 24V DC, we recommend 1N4001 (50V reverse voltage) to 1N4007(1000V reverse voltage) diodes for surge suppression for the OSSD safety outputs (<u>Figure 15</u>). The diode should be connected as close as possible to the load coil.

For outputs that use 120V AC or 240V AC, we recommend metal oxide varistors.

Figure 15 - Surge Suppressors



Example surge suppressors include the following catalog numbers:

- 100-FSD250 for Bulletin 100S Contactors
- 1492-LD4DF terminal block with built-in 1N4007 diode
- 1492-JD3SS terminal block with built-in varistor

Single Wire Safety Input and Output

The Single Wire Safety (SWS) feature allows a safety relay to expand the safety function to additional safety relays using a single wire, provided all safety relays have the same voltage supply reference.

The CI and SI safety relays only have SWS outputs (terminal L11). The DI, DIS, EM, and EMD safety relays have both SWS inputs (terminal L12) and SWS outputs (terminal L11).

There can be many variations and combinations of series and parallel connections of the SWS. Each L11 terminal can be connected to up to ten L12 terminals.

IMPORTANT Do not connect two or more L11 terminals together.

Figure 16 shows an example wiring diagram with SWS input from a DI safety relay and SWS output connection to a EM safety relay in parallel with a DIS safety relay. The safety relays must have a common power reference (24V common). In this example, the safety function started by the CI or SI safety relay is expanded to the DI safety relay. The safety functions monitored by the DI safety relay are expanded to the EM and DIS safety relays. The safety functions monitored by the DIS safety relay are expanded to the EM and DIS safety relays. The safety relay.



ATTENTION: You must consider the additional response time of each SWS connection when calculating the safety distance. See <u>Specifications on page 55</u> for the response time for each relay.

Figure 16 - Example SWS Connections



<u>Figure 17</u> shows the characteristics of SWS signal when it is active. It starts with a 1 ms pulse, followed 600 μ s later by a 600 μ s pulse. This waveform is repeated every 4 ms. When inactive, the SWS is 0V.

Figure 17 - SWS Waveform



Auxiliary Output

Each safety relay has an auxiliary output. The auxiliary output is not a safety rated output; it is a low current output that is designed to indicate that the safety output status is OFF. The auxiliary output is in the opposite state of the safety outputs. When the safety outputs are ON, the auxiliary output is OFF. When the safety outputs are OFF, the auxiliary output is ON.

The DI, DIS, EM, EMD, and SI safety relays have a solid-state transistor auxiliary output. The SI safety relay has an electromechanical output. <u>Table 3</u> summarizes the terminal connections of the auxiliary output.

Table 3 - Auxiliary Outputs

Relay	Type of Output	Terminal Connections
Cl	Electromechanical	41/42
DI, DIS, SI	Transistor	Y32
EM, EMD	Transistor	Х32

Reset and Monitor Input

The CI, DI, DIS, and SI safety relays have a reset/monitoring input (terminal S34). The expansion relays (EM and EMD) do not have a reset input.

The reset action can be configured for either automatic or monitored reset. With automatic reset, the safety relay outputs turn ON as soon as the safety inputs are closed. With monitored reset, the safety relay outputs turn ON after the inputs are closed and then the reset input is cycled from OFF to ON and then back OFF again.

Monitoring of external devices, like safety control relays and safety contactors, can be accomplished by adding normally closed contacts in series with the reset signal.

Automatic/Manual Reset

Use automatic reset when the risk assessment does not require additional manual intervention to reset the safety system. Automatic reset is often used with partial body access, or where an additional control is implemented in the machine control system to start the hazardous portion of the machine after the safety inputs are closed.

When automatic reset is desired, the S34 input must be connected to 24V DC. <u>Figure 18</u> shows three possibilities:

- a. A direct connection
- b. A connection through some monitoring contacts
- c. A connection through a normally open push button.

Connection through a monitoring contact and push button can be combined. When a push button is used, the reset occurs when the circuit is closed (not when it is released).



Figure 18 - Automatic/Manual Reset Connections

Monitored Reset

Monitored reset requires a specific signal to turn on the safety outputs. The safety inputs and single wire safety input (if used) must be closed before the reset. The reset signal must cycle from 0V to 24V and back to 0V within a duration of 250...3000 ms, as shown in Figure 19. The reset occurs on the trailing edge.

Monitored reset must be used in applications that have full-body access to the hazard. Monitored reset can also be used in applications that require partial body access.

Figure 19 - Monitored Reset Signal Duration



The signal can be created with a momentary push button or programmatically created with logic controller. Figure 20 shows example wiring connections for the reset. The schematic also shows an example monitoring the mechanically linked, normally closed contacts of two contactors.

TIP When using a PLC to generate the reset signal, set the duration to 260...2990 ms for a more reliable reset.





Monitor with Expansion Relays

Monitoring of the expansion relays is recommended. This feature is especially useful when the expansion relay is turning on loads (for example, solenoid-operated valves) that do not have monitoring contacts. The auxiliary output of the expansion relay must be the 24V DC source of the reset and monitoring input. Figure 21 shows an example of the connections for a monitored reset with additional contactor monitoring. This type of connection can also be used for automatic reset applications.





Retriggerable Input

The EMD safety relay has a retriggerable input. Retriggerable operation only works in off-delay applications. Retriggerable operation is accomplished by connecting a jumper from terminal B1 to B2. <u>Table 4</u> describes the off-delay operation.

Table 4 - Retriggerable Operation

Configuration	Jumper	Action
Retriggerable	B1-B2	If the safety input is triggered and cleared within the duration of the time delay, then the timing request is ignored and the safety output contacts remain closed. The B1 indicator is ON.
Non- retriggerable	None	The full-time delay lapses and the safety output contacts open before the relay can be reset. The B1 indicator is OFF.

Jog Input

When the EMD safety relay is configured for the Jog functions, terminal B1 must be connected to +24V DC.

Notes:

Configuration

Switch Adjustment

These safety relays have multi-position switches on their front face. Use a small slotted screwdriver to set the switches to the desired setting.

TIP Make note of the location of the mechanical stops.



IMPORTANT Adjust the switches gently and do not turn past the mechanical stops.

CI and SI safety relays have a single 3-position RESET switch. This switch determines whether the relay uses a monitored manual reset or an automatic/ manual switch (see <u>Definitions on page 8</u>).

Table 5 - CI and SI Logic Switch

Position	Function
0	Start configuration
MM	Monitored manual reset
AM	Automatic/manual reset

DI and DIS Safety Relays

The DI and DIS safety relays have a 10-position switch and use only the first nine positions. As shown in <u>Table 6</u>, this switch configures the relay for its reset and logic functionality.

Table 6 - DI and DIS Logic Switch

Position	Reset	Function
0	Not applicable	Start configuration
1		(IN1 OR IN2) OR L12
2	Monitored Manual	(IN1 AND IN2) OR L12
3		(IN1 OR IN2) AND L12
4		(IN1 AND IN2) AND L12
5		(IN1 OR IN2) OR L12
6	Automatic/Manual	(IN1 AND IN2) OR L12
7		(IN1 OR IN2) AND L12
8		(IN1 AND IN2) AND L12

• Example 1

Logic setting 1 or 5: If any of the inputs (IN1, IN2, or L12) are ON, then the safety relay refers to the reset logic.

• Example 2

Logic setting 4 or 8: If all three of the inputs (IN1, IN2, and L12) are ON, then the safety relay refers to the reset logic.

EMD Safety Relay

The EMD safety relay has two switches. The combination of the switch settings determines the functionality and the duration. During configuration, the Time switch determines the duration of the Range switch. Figure 23 shows the setting options for the Range and Time switch. Table 7 shows the same information.

With the Time switch set to 1 at the start of the configuration process, the duration of the Range switch is the shorter range.

With the Time switch set to 10 at the start of the configuration process, the duration of the Range switch is the longer range.

Figure 23 - EMD Range and Time



Position	Function	Range (Time 1) [s]	Range (Time 10) [s]
0	Start Configuration	—	—
1		0.11	10100
2	Off Dolay	110	1001000
3	UII Delay	330	3003000
4		30300	—
5		0.33	30300
6	On Delay	330	3003000
7		30300	—
8	logging	0.110	1001000
9	Jogging	330	3003000

Table 7 - EMD Range and Time Settings

Configuration Process

The configuration process requires the wiring to be completed and the inputs closed. During the configuration process, safety relays send out test pulses to determine how they are wired and then configures the internal parameters to match the application.

Safety relays are configured in five steps:

- 1. With the power OFF, prepare the switches.
- 2. Apply power.
- 3. Adjust the switches to desired functionality.
- 4. Verify the settings by counting the blink rates of the status indicators.
- 5. Cycle the power to store the settings.

The details for each step are described in the following sections.

1. Prepare the Switches

- DI/DIS safety relay: Set the Logic switch to position 0.
- CI/SI safety relay: Set the Reset switch to position 0.
- EMD safety relay: Set the Range switch to position 0 and set Time switch to 1 (for shorter timing range) or 10 (for longer timing range).
- EM safety relay: No switches. No action necessary.

2. Apply Power

After a short wait, the PWR/Fault status indicator flashes red continuously at a 1 Hz rate (0.5 seconds ON, 0.5 seconds OFF). The prior configuration in the EEPROM is erased, and the device now prepared for a new configuration.

3. Adjust the Switches

Adjust the Logic, Reset, Time, and Range switch settings for your application.

TIP You can change the switch settings during Step 3 and 4. The power status indicator momentarily flashes red again.

4. Verify the Settings

<u>Table 8</u> shows the status indicator that flashes to show the switch setting for each relay.

Table 8 - Configuration Confirmation

Relay	Status Indicator	Switch Setting
CI	IN	Reset
DI	IN 1	Logic
DIS	IN 1	Logic
EMD	B1	Range
LIND	Logic IN	Time
SI	IN	Reset

Figure 24 shows an example of the blinking patterns for the EMD relay. The status indicators flash for 0.5 seconds to indicate the switch settings. The number of flashes is equal to the switch setting. The blinking pattern repeats after a 2-second pause.

Figure 24 - Example of the EMD Indicators Flashing During Configuration Mode

B1 - Indicates that the RANGE Switch is set to 3.



5. Cycle the Power

After power-up, the current switch settings are compared to the values in the EEPROM (to make sure that the switches were not changed while power was off), and the input and output circuits are checked. Upon successful completion of the internal checks, the relays are ready for operation.

Status Indicators and Troubleshooting

Indicators During Powerup

The status indicators provide operating status and diagnostic information.

Indicators During Normal Operation

Status Indicator	Models	State	Description
Status multator	Models	Solid Croop	Normal eneration
		Blinking Red	Norrecoverable fault. See <u>Table 10 on page 36</u> . Correct fault and cycle power
PWR/Fault	All	Green with Blinking Red	Recoverable fault. See <u>Table 10 on page 36</u> . Correct fault and press Reset.
		Solid Red	Internal Fault. Cycle power.
IN or IN 1		ON	Input circuits at \$12 and \$22 are closed.
	כו, טו, טוס, סו	OFF	Input circuits at S12 and S22 are open.
IN 2	אות ות	ON	Input circuits at \$32 and \$42 are open.
111 2	0,05	OFF	Input circuits at \$32 and \$42 are open.
R1	EMD	ON	Input circuit at B1 is closed.
DI	LIVID	OFF	Input circuit at B1 is open.
		ON	Logic IN signal (Single Wire Safety) at L12 is ON.
LOGIC IN	טו, טוס, בואו, בואוט	OFF	Logic IN signal at L12 is OFF.
	EMD	Flashing	Timing cycle is in process.
	A II	ON	L11 is ON.
	7.11	OFF	L11 is OFF.
	CI	ON	13/14, 23/24, 33/34 closed (41/42 open).
		OFF	13/14, 23/24, 33/34 open (41/42 closed).
		Flashing	Safety input is closed, waiting for the reset input.
		ON	13/14, 23/24 closed (Y32 OFF).
	DI	OFF	13/14, 23/24 open (Y32 ON).
		Flashing	Safety inputs are closed, waiting for the reset input.
OUT		ON	14, 24, 34, 44 ON (Y32 OFF).
001	DIS	OFF	14, 24, 34, 44 OF (Y32 ON).
		Flashing	Safety inputs are closed, waiting for the reset input.
	EM	ON	13/14, 23/24, 33/34, 43/44 closed (X32 OFF).
	LIVI	OFF	13/14, 23/24, 33/34, 43/44 open (X32 ON).
	EMD	ON	17/18, 27/28, 37/38, 47/48 closed (X32 OFF).
	LIVID	OFF	17/18, 27/28, 37/38, 47/48 open (X32 ON).
		ON	13/14, 23/24 closed (Y32 OFF).
	SI	OFF	13/14, 23/24 open (Y32 ON).
		Flashing	Safety input is closed, waiting for reset input

Table 9 - Status Indicators (Normal Operation)

Indicators During Diagnostics

Table 10 - Statu	s Indicators	(Diagnostics)
------------------	--------------	---------------

Power / Status Indicator	Status/Faults
Solid red	An undeclared fault has occurred. Momentary power interruption. CI, DI, DIS, and SI: Short circuit has occurred, or is present, from A1 to S11 or S21 or from A2 to S11 or S21. DIS: Short circuit has occurred or is present from A1 to 14 or 24. Check the wiring. Cycle power to clear the fault and return the safety relay to an operational state.
Flashing red 1 time	The safety relay is in configuration mode. Continue with the configuration process. Rotate the switches to the desired positions and cycle power.
Green with flashing red 2 times	The configuration does not agree with the EEPROM. One or more of the rotary switches have changed during operation. The safety relay continues to operate, and the switches can be returned to their original position, while powered.
Green with flashing red 3 times	EMD: B2 is connected to B1, after configuration. Remove connection and fault is cleared automatically.
Green with flashing red 4 times	EMD: Set for non-retriggerable and Logic IN input is turned off and then back ON before the time expired. Cycle the Logic IN input signal to clear the fault or let the timer expire and the fault automatically clears. A connection was made from terminals B1 to B2, after configuration. Repeat the configuration process; the B1-B2 connection must be made before configuration.
Flashing red 2 times	Invalid configuration. Upon power-up, one or more of the rotary switch settings do not agree with the value stored in the EEPROM. Connections at S11 and S21 were swapped after configuration. Return the switches/wiring to their proper settings/terminals and cycle power; or reconfigure the relay.
Flashing red 3 times	Invalid configuration on DI or DIS safety relays. During configuration, the Logic switch is set for IN1 OR IN2 (position 1, 3, 5, or 7), but the inputs are wired for safety mats. If the inputs are not closed during configuration, the DI and DIS safety relays show this fault on the next power cycle if the inputs are closed. Reconfigure the relays for IN1 AND IN2 (position 2, 4, 6 or 8).
Flashing red 4 times	Cross fault. CI, DI, DIS, and SI : A short circuit has occurred or is present from S11 to S21. Check the wiring. Remove the short circuit and cycle the power.
Flashing red 5 times	Output test failed on L11. CI: A short circuit has occurred, or is present, from A1 or S11 to L11. A short circuit has occurred, or is present, from A2 to L11when L11 is ON. DI and DIS: Short circuit from L11 to L12. Short circuit from L11 to A1 on the next downstream relay. The 24V common connection to the downstream relay may have temporarily disconnected. Correct the fault and cycle power to the safety relays.
Flashing red 6 times	DIS: Output test failed on 14, 24. External cross fault. High capacitance load. Check wiring. Remove fault or move high capacitance output connections to 34, 44. Cycle power to clear the fault.

Pulse Testing Functions

Safety relays use pulse testing of inputs and outputs to verify the safety function is performed when called upon. Pulse testing for the inputs should be used with devices with mechanical contacts like E-stop push buttons, tongue operated interlock switches, limit switches, and so on. The pulse testing cannot be turned on or off and cannot be changed.

The test pulses are used to detect three short circuit conditions:

- Between the input terminals and +24V.
- Between the input terminals and 24V common.
- Between the two input terminals.

Pulse Testing for Inputs

Pulse testing for the inputs is generated on terminals S11 and S21 of the CI, DI, DIS, and SI safety relays. The EM and EMD do not use pulse testing.

Figure 25 shows the pulse testing associated with the CI safety relay. The pulse widths are 2.5 ms wide. The pulse testing on S11 and S21 are offset by 1 ms. The pulses are repeated every 14 ms.





<u>Figure 26</u> shows the pulse test sequence for the DI, DIS, and SI safety relays. The sequence is repeated every 13.6 ms.

Figure 26 - Pulse Test Sequence for DI, DIS, and SI Safety Relays



Pulse Testing for OSSD Outputs

The DIS safety relay has OSSD transistor outputs. One main transistor supplies current to four individual transistors, as shown in <u>Figure 27</u>. When the main transistor is pulse tested, the pulse appears on all outputs. When the individual transistors are tested, the pulse only appears on that transistor.

Figure 27 - Output Transistor Arrangement



The pulse test pattern is shown in Figure 28. The pulse widths vary from $50...150 \,\mu$ s. The pulse pattern on terminal 14 is identical to terminal 34, and the pulse pattern on 24 is identical to 44. The pattern is repeated every 3.371 seconds.





Although pulse tests appear on terminals 34 and 44, the DIS safety relay does not detect faults from A1 to 34, 44 or between 34 and 44 when the outputs are ON.

EMD Safety Relay Timing Functions

The EMD safety relay has three functions that use timing:

- Off delay
- On delay
- Jog

The off-delay timing depends on whether the function is retriggerable.

During the timing cycle, the Logic IN status indicator flashes.

Off Delay, Non-retriggerable

With input B1 open, the off-delay function is not retriggerable. The off-delay timer starts when the logic link signal at terminal L12 turns off. Once started, the off-delay timer runs for its full duration. Figure 29 shows three cases of the timing sequences that can occur with this configuration.



Figure 29 - Off-Delay, Non-retriggerable Timing Diagram

- 1. The logic link signal at terminal L12 turns on, and the safety outputs turn on immediately (that is, within the specified reaction time).
- 2. The logic link signal turns off and the off-delay timer starts.
- 3. The off-delay time has elapsed, and the safety outputs turn off.

Case 2

- 4. The logic link signal at terminal L12 turns on, and the safety outputs turn on within the specified reaction time.
- 5. The logic link signal turns off, and the off-delay timer starts.
- 6. During off-delay time, the logic link signal turns off. A recoverable fault occurs. The PWR/Fault indicator is green and flashing red four times.
- 7. The off-delay time has elapsed, and the safety outputs turn off.
- 8. The logic link signal turns off.
- 9. Shortly after the logic link turns off, the fault is automatically cleared. The PWR/Fault indicator is solid green.

Case 3

- 10. The logic link signal at terminal L12 turns on, and the safety outputs turn on within the specified reaction time.
- 11. The logic link signal turns off and the off-delay timer starts.
- 12. During off-delay time, the logic link signal turns off. A recoverable fault occurs. The PWR/Fault indicator is green and flashing red four times.
- 13. The logic link turns back off. The fault continues to exist.
- 14. The off-delay time has elapsed; the safety outputs turn off; and the fault is automatically cleared.

Off Delay, Retriggerable

To use the retriggerable off-delay function, input terminal B1 must be connected to terminal B2 before the configuration process. The off-delay timer starts when the logic link signal at terminal L12 turns off. During the timing cycle, the off-delay timer is automatically reset to zero when the logic link turns back on. Figure 30 shows two cases of the timing sequences that can occur with this configuration.

Figure 30 - Off-delay, Retriggerable Timing Diagram



- 1. The logic link signal at terminal L12 turns on, and the safety outputs turn on immediately (that is, within the specified reaction time).
- 2. The logic link signal turns off, and the off-delay timer starts.
- 3. The off-delay time has elapsed, and the safety outputs turn off.

Case 2

- 4. The logic link signal at terminal L12 turns on, and the safety outputs turn on within the specified reaction time.
- 5. The logic link signal turns off, and the off-delay timer starts.
- 6. During off-delay time, the logic link signal turns on. The off-delay timer is set back to zero, and the safety outputs remain on. No fault occurs.
- 7. The logic link signal turns off, and the off-delay timer starts.
- 8. The off-delay time has elapsed, and the safety outputs turn off.

On Delay

To use the on-delay function, terminal B1 must be an open connection. The on-delay timer starts when the logic link signal at terminal L12 turns on. The safety outputs turn on after the delay time expires and remain on until the logic link signal turns off. If the logic link signal turns off during the timing cycle, the safety outputs turn off immediately. Figure 31 shows two cases of the timing sequences that can occur with this configuration.

Figure 31 - On-Delay Timing Diagram

	Case 1			Cas	e 2		
L12							
Safety Outputs				İ			
	t ¥ 1	→ * 2	* 3	t – ¥ 4	→ t ** 5 6	→ * 7	∀ 8

Case 1

- 1. The logic link signal at terminal L12 turns on, and the on-delay timer starts.
- 2. The on-delay timer elapses, and the safety outputs turn on.
- 3. When the logic link signal turns off, the safety outputs turn off.

- 4. The logic link signal at terminal L12 turns on, and the on-delay timer starts.
- 5. The logic link signal turns off before the on-delay time elapses. The ondelay timer is reset to zero. No fault occurs.
- 6. After a brief interruption (even as short as 100 ms), the logic link signal turns back on. The on-delay timer starts from zero.
- 7. The on-delay timer elapses, and the safety outputs turn on.
- 8. When the logic link signal turns off, the safety outputs turn off.

Jog

The jog function has two timers: an on-timer and an off-timer. The Range and Time switch settings set the on-timer during configuration. The on-timer starts when both the B1 terminal is connected to 24V DC and the logic link signal at terminal L12 is on. The order in which these two signals turn on is not relevant. When both signals are on, the safety outputs turn on during the on-timer. After the on-timer expires, the safety outputs turn off and the off-timer starts. The off-timer is fixed at 500 ms. After the safety outputs turn off, they will remain off unit the off-timer elapses. Then the jog can be restarted. Figure 32 shows three cases of timing sequences.

During the on-timer cycle, the Logic IN indicator flashes at a 1 Hz rate. During the off-timer cycle, the Logic IN indicator flashes at an 8 Hz rate.





Case 1

- 1. The logic link signal at terminal L12 turns on.
- 2. The B1 terminal turns on. The jog on-timer starts, and the safety outputs turn on.
- 3. The jog on-timer elapses, and the safety outputs turn off. The jog offtimer starts.
- 4. After 500 ms, the jog function is complete.
- 5. The B1 inputs turn off.
- 6. With the logic link input still on, the jog function is repeated when the B1 signal turns on.
- 7. The logic link signal turns off.
 - **TIP** The L12 and B1 signals are interchangeable. The B1 signal can remain on and the L12 turns on and off to execute the jog function.

- 8. The B1 signal turns on before the logic link signal.
- 9. The logic link signal turns on. The jog on-timer starts, and the safety outputs turn on.
- 10. The B1 signal turns off before on-timer elapses. The safety outputs turn off immediately and the off-timer starts.

- 11. The off-timer elapses. The logic link signal turns off to end Case 2.
 - **TIP** The L12 and B1 signals are interchangeable. If the B1 signal remains on and the L12 turns off before the on-timer elapses, the safety outputs turn off immediately.

- 12. The logic link signal at terminal L12 is on. The B1 signal turns on. The jog on-timer starts, and the safety outputs turn on.
- 13. The on-timer elapses and the safety outputs turn off. The off-timer starts.
- 14. During the off-timer cycle, the B1 signal is turned off and then quickly back on. The safety outputs remain off.
- 15. The B1 signal must turn off before a new jog cycle can begin.
 - **TIP** The L12 and B1 signals are interchangeable. At least one of these two signals must remain off throughout the off-timer cycle before a new jog cycle begins.

Notes:

Internal Circuit Block Diagrams

The figures in this chapter show the internal circuit block diagrams of each safety relay.

Figure 33 - CI Safety Relay Circuit Diagram



DI Safety Relay

CI Safety Relay

Figure 34 - DI Safety Relay Circuit Diagram



DIS Safety Relay

Figure 35 - DIS Safety Relay Circuit Diagram



EM Safety Relay

Figure 36 - EM Safety Relay Circuit Diagram



EMD Safety Relay

Figure 37 - EMD Safety Relay Circuit Diagram



SI Safety Relay

Figure 38 - SI Safety Relay Circuit Diagram



Application and Wiring Examples

The application and wiring examples in this chapter show you how to put the inputs and outputs together to create an operating safety system. These circuit diagrams are examples; many features are interchangeable between relays.

Publication <u>SAFETY-WD001</u> provides additional application and wiring diagrams.

CI Safety Relay

In Figure 39, the CI safety relay is monitoring a device (an E-stop push button) with mechanically operated contacts. The CI safety relay is configured for monitored manual (MM) reset. The output turns on if the E-stop is released and the reset push button is pressed and released between 0.25...3 seconds. The CI safety relay monitors the status of the two output contactors, K1 and K2. If either fails to close their N.C. contacts, the CI safety relay does not reset. An auxiliary signal, terminals 41/42, is sent to the PLC when the E-stop is pressed.



Figure 39 - Mechanical Contacts with Monitored Manual Reset

Figure 40 shows a CI relay monitoring a light curtain with two OSSD outputs. The CI is set to automatic/manual reset (AM). The auxiliary signal (terminals 41/41) informs the PLC that the safety system is OFF or ON. The CI outputs connect to AC voltage loads. When the CI safety relay is ON, the PLC can then turn on the K1 and K2 contactors.



Figure 40 - With Device Using OSSD outputs, Automatic Reset, AC Load Voltage

DI Safety Relay

The DI safety relay in Figure 41 monitors two devices having mechanical contacts and is set for monitored manual reset. With the two devices closed, the operator presses the reset button to energize contactors K1 and K2. The DI safety relay verifies that contactors K1 and K2 are off by monitoring the mechanically linked normally closed contacts in the reset circuit. When the DI safety relay is off, the auxiliary signal at terminal Y32 turns on, reporting the status to a PLC.



Figure 41 - With Two Devices with Mechanical Contacts and Monitored Manual Reset

In Figure 42, a DI safety relay monitors a safety mat and non-contact interlock with OSSD outputs. Make note of the specific wiring for the mat. Also, during configuration and for each power-up, the mat must be clear and the interlock closed. The DI safety relay must be configured for AND logic for the two inputs. The DI safety relay logic setting is 6: (IN1 AND IN2) OR L12 with automatic reset. The DI safety relay verifies that contactors K1 and K2 are off by monitoring the mechanically linked normally closed contacts in the S34 circuit. When the DI safety relay is off, the auxiliary signal at terminal Y32 turns on, reporting the status to a PLC.



Figure 42 - With a Safety Mat and Device with OSSD Outputs, Automatic Reset, AC Loads

DIS Safety Relay

Figure 43 shows the DIS safety relay with only 1 device. The DIS and DI safety relay can monitor one device by configuring the relay for OR logic. The DIS safety relay logic setting is 1: (IN1 OR IN2) OR L12 with monitored manual reset. The second input (terminals S32 and S42) requires no connection. With solid-state outputs, the contactors K1 and K2 must be 24V DC powered coils. The DIS safety relay verifies that contactors K1 and K2 are off by monitoring the mechanically linked normally closed contacts in the S34 circuit. When the DIS safety relay is off, the auxiliary signal at terminal Y32 turns on, reporting the status to a PLC.





The DIS safety relay monitors two devices with OSSD outputs in Figure 44 The DIS safety relay logic setting is 6: (IN1 AND IN2) OR L12 with automatic reset. The output terminals 34 and 44 are designed to tolerate higher capacitance loads (but lower resistive load) as compared to terminals 14 and 24.





EM Safety Relay

The EM safety relay in Figure 45 expands the number of outputs of the DI safety relay. The single wire safety signal from terminal L11 to L12 instructs the EM safety relay to turn on and off. The EM safety relay outputs mimic the DI safety relay outputs. The DI safety relay monitors contactors K1...K6 and the status of the EM safety relay by sourcing the reset signal from the X32 terminal on the EM safety relay.

Figure 45 - Expansion of Immediate Safety Outputs



EMD Safety Relay

The EMD safety relay in Figure 46 is configured for a 5 second off-delay. The single wire safety signal from terminals L11 to L12 instructs the EMD safety relay to turn on and off. When the E-stop is pressed, the CI safety relay turns off immediately and the EMD safety relay turns off 5 seconds later. The CI safety relay monitors contactors K1...K6 and the status of the EMD safety relay by sourcing the reset signal from the X32 terminal on the EMD safety relay.

In this example, the jumper from B1 to B2 makes the EMD safety relay retriggerable. If the E-stop is released and the reset is pressed within the 5 second delay time, the outputs of the EMD safety relay do not turn off, because the internal timer is retriggered.





Figure 47 shows the EMD safety relay configured for a 2.1 second on-delay. The single wire safety signal from terminals L11 to L12 instructs the EMD safety relay to turn on and off. When the reset button is pressed, the DIS safety relay outputs turn on immediately. After a 2.1 second delay, the EMD safety relay outputs turn on.

The DIS safety relay monitors contactors K1...K4 and the status of the EMD safety relay by sourcing the reset signal from the X32 terminal on the EMD safety relay.





The EMD safety relay in Figure 48 is configured for a maximum of a 100second jog. The single wire safety signal from terminals L11 to L12 enables the EMD safety relay. When enabled, the jog switch can be pressed and held closed to turn on the EMD safety relay outputs. If the jog button is released before the 100 second time, the EMD safety relay outputs turn off. If the jog button is held longer than 100 seconds, the EMD safety relay outputs only turn on for 100 seconds.



SI Safety Relay

The SI safety relay monitors a gate interlock with mechanical contacts in <u>Figure 49</u>. The SI safety relay is configured for automatic reset. When the gate is closed, the SI safety relay outputs turn on if contactors K1 and K2 are already off. The Start button can then be pressed to turn on contactors K1 and K2.

Figure 49 - SI Example



Ethernet Communication

The DI, DIS, EM, EMD, and SI safety relays are equipped with optical communication via an optical link. With an optical link, diagnostic data can be read from these relays and transferred to other devices over EtherNet/IP with the catalog number 440R-ENETR EtherNet/IP module. The CI safety relay does not have an optical link.

The catalog number 440R-ENETR EtherNet/IP module must be in the leftmost position (<u>Figure 50</u>). See publication <u>440R-UM009</u> for further details on the EtherNet/IP module. The safety relays must be Series A 200 or later.



Figure 50 - Arrangement of EtherNet/IP Module and Safety Relays

Web Page

The catalog number 440R-ENETR EtherNet/IP module maintains its own web page (Figure 51). To access the web page, connect an Ethernet cable to your computer and type in the Ethernet address.

Figure 51 - ENETR Web Page

Rockwell 440R-ENETR	×	Type the IP Address of the ENETR module			
e Edit view Pavorites	Downloads Project Documents	[*] ∰ + ⊠ + ⊡ ⊕ + P	age 🕶 Safety 🕶 Tools 🕶 🔞 🖛 🗊 🛙		
Allen-Bradley 4	40R-ENETR		Rockwe Automatic		
Expand Minimize	Home				
Browse LSR devices	440R-ENETR				
Administive Settings	Revision	1.4			
Network Configuration	Device IP address	192.168.2.32			
E-mail enfiguration	Ethernet address (MAC)	E4:90:69:CB:C0:1F			
	Serial number	A01E91EE			
	Status				
	GSR connection status	OK (2 GSRs running)	Resources		
Cli I I I	GSR faults	OK (no faults reported)	Visit <u>ab.com</u> for additional information		
Click to browse	Rotary switch status	OK (999)			
the safety relays	Interface connection status	No class 1 connection open-			
	Software versions				
	EtherNet/IP FW revision	1.8.2-244			
	Controller FW revision	1.4.0-1			
	Configuration				
	Switch setting (startup/current)	999/999			
	Secon	ds Between Refresh: 15 Disable Ref	fresh with 0.		

RSLogix AOP

The catalog number 440R-ENETR EtherNet/IP module includes the RSLogix[™] Add-on Profile (AOP) for the DI, DIS, EM, EMD, and SI safety relays. The AOP allows you to view the status of the relays, including open and closed inputs, outputs ON and OFF, waiting for reset, and fault information. Figure 52 shows an example of the AOP for the DI safety relay.

See publication <u>440R-UM009</u> for further details on the EtherNet/IP module.

Figure 52 - AOP for the DI Safety Relay

Scope:	GSREIP - Show: Al Tags	
Name		:2]
- G	SR_ENETR:I	
	GSR_ENETR:I.Slot1_GSR_DI_IN01	
	GSR_ENETR:I.Skt1_GSR_DI_IN02	
	GSR_ENETR:I.Slot1_GSR_DI_SingleWireSafetyIn	
	GSR_ENETR:I.Slot1_GSR_DI_ResetRequired	
	GSR_ENETR:I.Slot1_GSR_DI_CrossLoopOK	
	GSR_ENETR1.Slot1_GSR_DI_SafetyOutput	
	GSR_ENETRI.Slot1_GSR_DI_RecoverableFault	
	GSR_ENETR:I.Slot1_GSR_DI_NonRecoverableFault	
	GSR_ENETR1.Slot1_GSR_DI_S12	
1111	GSR_ENETR.I.Slot1_GSR_DI_S22	
	GSR_ENETR:I.Slot1_GSR_DI_S32	
	GSR_ENETR:I.Slot1_GSR_DI_S42	
	GSR_ENETR1.Skt1_GSR_DI_L12	
	GSR_ENETR1.Slot1_GSR_DI_S34	
	GSR_ENETR:I.Slot1_GSR_DI_NonRecoverableFault_A	
÷	GSR_ENETRI.Skt1_GSR_DI_NonRecoverableFault_B	
	GSR_ENETR: I.Slot 1_GSR_DI_S12OpenWire	
1	GSR_ENETR:I.Slot1_GSR_DI_S22OpenWire	
	GSR_ENETR:I.Slot1_GSR_DI_S32OpenWire	
	GSR_ENETRI.Slot1_GSR_DI_S42OpenWire	
1	GSR_ENETR I Slot 1_GSR_DI_CrossLoopFault	
100	GSR_ENETR:I.Slot1_GSR_DI_InvalidSwitchSetting	
	GSR_ENETR:I.Slot1_GSR_DI_ResetHeldOn	

Specifications

General

Table 11 - General Specifications

	CI	DI	DIS	EM	EMD	SI
Dimensions, HxWxD [mm (in)]		119	.14 x 22.5 x 113.0	6 (0.88 x 4.69 x 4	.47)	
Shipping weight, approx. [g (lb)]	225 (0.5) 180 (0.4) 50 (0.33) 225 (0.5) 220 (0.49) 150					
Wire Size [mm ² (AWG)]			0.22.5	(2414)		
Wiring Category		Co	opper that withst	ands 75 °C (167 °	°F)	
Terminal Screw Torque [N·m (Ib·in)]	0.4 (4)					
Power Supply Voltage Range		24V D	C PELV/SELV, 0.8	51.1 x rated v	oltage	
Power On Delay [s]			5	.5		
Power Consumption [W]	3.5	2.5	2	3.5	3.5	2.5
Case Material			Polyami	de PA 6.6		
Terminal Protection		IP20				
Enclosure Protection	IP40 (NEMA 1)					
Mounting		35 mm DIN	rail in enclosure	rated to a minim	num of IP54	

Environmental

Table 12 - Environmental Specifications

	CI	DI	DIS	EM	EMD	SI	
Temperature, Operating [°C (°F)]	-5+55 (23131)						
Relative Humidity	90%						
Vibration	1055 Hz, 0.35 mm						
Shock	10 g, 16 ms						
Pollution Level	2						
Installation Group	Overvoltage Category III, VDE 0110-1						
Impulse Withstand Voltage			250	00V			

Safety Inputs IN, IN1, and IN2 Table 13 - Safety Inputs IN, IN1 and IN2 Specifications

		CI	DI	DIS	EM	EMD	SI
Inputs		1 NC, 1 PNP (OSSD)	1 NC, 1 PNP (OSSD) 2 NC, 2 PNP (OSSD) 2 NC, 2 PNP (OSSD) (OSSD) (OSSD)		_	_	1 NC, 1 PNP (OSSD)
Wiring Termin	als	S12, S22	S12, S22 and S32, S42	S12, S22 and S32, S42	_	_	S12, S22
ON Voltago	Max [V]		26.4			—	26.4
ON VOILage	Min [V]		11		—	—	11
OFF Voltage, N	lax [V]		5		—	—	5
OFF Current, N	lax [mA]		2		—	—	2
ON Current,	At 24V DC [mA]		11.0		_	_	11.0
Max	At 26.4V DC [mA]		11.1			_	11.1
Galvanic Isolation: I/O from Logic		No			_	_	No
Overvoltage Protection		Yes			—	—	Yes
Test Out	Duration [µs]		≤850			_	≤850
ruise	Period [ms]	17			—	—	17
Off Pulse accepted for OSSD setting without	Off Pulse accepted for OSSD setting Max [µs]		0		_	_	0
declaring the input as OFF	Min [µs]	850			_	_	850
Reverse Voltag	erse Voltage Protection Yes			—	—	Yes	
Input Capacita	nce [nF]		10		—	—	10
Input Simultar	neity		Infinite			_	Infinite
Max allowable resistance (Ω)	input		900		—	—	900
Safety Mat, m	ax size [m ²]	23	3	5		—	35

Reset Input

Table 14 - Reset Input Specifications

		CI	DI	DIS	EM	EMD	SI
Wiring Terminal		\$34			—	—	S34
ON Voltago	Max [V]		26.4		—	—	26.4
UN VUILAGE	Min [V]		11		—	—	11
OFF Voltage, N	lax [V]	5			—	—	5
OFF Current, N	OFF Current, Max [mA]		2			—	2
ON Current, Max	At 24V DC [mA]	11.0			_	_	11.0
	At 26.4V DC [mA]	11.1			_	—	11.1
Galvanic Isolation: I/O from Logic		No			—	—	No
Overvoltage Protection		Yes			—	—	Yes
Input Capacitance [nF]		10			—	—	10
Duration [s]			0.53.0			_	0.53.0

B1 Input

Table 15 - B1 Input Specifications

		CI	DI	DIS	EM	EMD	SI
Wiring Termin	al	—	—	—	—	B1	—
ON Voltage	Max [V]	—	—	_	—	26.4	—
UN VUILAGE	Min [V]	—	—	_	—	11	—
OFF Voltage, N	Max [V]	—	—	_	—	5	—
OFF Current, Max [mA]		—	—	—	—	2	—
ON Current, Max	At 24V DC [mA]	_	_	_	_	11.0	_
	At 26.4V DC [mA]	_	_	_	_	11.1	_
Galvanic Isolation: 1/0 from Logic		_	_	_	_	No	_
Overvoltage Protection		—	—	_	—	Yes	—
Input Capacita	ance [nF]	—	—	_	—	10	—

Safety Outputs

Table 16 - Safety Outputs Specifications

		CI	DI	DIS	EM	EMD	SI
Wiring Terminal		13/14, 23/24, 33/34	13/14, 23/24	14, 24, 34, 44	13/14, 23/24, 33/34, 43/44	17/18, 27/28, 37/38, 47/48	13/14, 23/24
Output Type		3 N.O.	2 N.O.	4 PNP	4 N.O.	4 N.O. delayed	2 N.O.
Thermic Curren	t I _{th}	1 x	6 A			1 x 6 A	•
Fuses output (e	xternal)	6 A slow 10 A qu	blow or ick blow	_	6 A slow	v blow or 10 A qu	ick blow
Switched Curre	nt, Min [mA]	1	0	—		10	
Switched Volta	ge, Min [V]	1	0			10	
Mechanical Life		10,000,0	00 cycles			10,000,000 cycle	S
Rating		UL: (AC-15: 1.5 DC13: 2 A / 24	C300 A / 250V AC AV DC (0.1 Hz)	14, 24: 1.5 A each 34, 44: 0.5 A each	UL: B300 AC-1 AC-15: 1.5 A / 250V AC 25 DC13: 2 A / 24V DC (0.1 Hz) 2 A /		UL: C300 AC-15: 1.5 A/ 250V AC DC13: 2 A / 24V DC (0.1 Hz)
Capacitance		-	_	14, 24: 1.6 μF each 34, 44: 9 μF each	_		
Contact materia	al	AgNi	AgNi + 0.2 μ Au	_		AgNi	
Reaction Time	L12		45	35			
Safety Output	Inputs	150	35	25	100	150	150
[ms]	Mat Operation		40	30			
Reaction Time	L12		35	35			—
Single Wire Safety Output	Inputs	25	25	25	0 150		25
[ms]	Mat Operation	30	30	30			30
Response	Inputs	35	35	25			35
Safety Output [ms]	Mat Operation	45	40	30	35		45
Response	Inputs	25	25	25			25
Lime Single Wire	Mat Operation	35	30	30	,	15	35
Safety Output [ms]	Single-wire Fault	45	45	45	25		45
Recovery Time	[ms]	100	100	100	150	150	100

Auxiliary Output

Table 17 - Auxiliary Output Specifications

	CI	DI	DIS	EM	EMD	SI
Wiring Terminal	—	Y32		X32		Y32
Output Type	1 N.C.	1 PNP, 50 mA max				

Single Wire Safety

Table 18 - Single Wire Safety (SWS) Specifications

	CI	DI	DIS	EM	EMD	SI	
Wiring Terminal	Output - L11 Input - L12						
Continuous Output Current, Max [mA]			5	0			
ON State Voltage Drop (P/S to +), Max [V]			0.	.2			
Surge Output Current, Max [mA]			70	00			
Surge Output Current Duration, Max [ms]	5						
Load Capacitance, Max [µF]			1	1			
Off State Leakage Current, Max [mA]	< 0.1						
Short Circuit Detection			Ν	0			
Short Circuit Protection	Yes						
Galvanic Isolation: I/O from Logic	No						
Fanout (Max number of connections to L11)	10						
Cable length between L11 and L12 [m]			3	0			

Regulatory Approvals

Agency Certifications

• UL Listed Industrial Control Equipment, certified for US and Canada.

- CE marked for all applicable directives
- C-Tick marked for all applicable acts
- CCC Mark
- S-Mark

Compliance to European Union Directives

This product has the CE marking and is approved for installation within the European Union and EEA regions. It has been designed and tested to meet the following directives.

EMC Directive

This product is designed and tested to meet the European Council Directive 2004/108/EC on Electromagnetic Compatibility (EMC) and the following standards:

- EN 61000-6-4: Generic Standards Emission Standard for Industrial Environments
- EN 61000-6-2: Generic Standards Immunity for Industrial Environments

This product is intended for use in an industrial environment.

Machine Safety Directive

This product is designed and tested to meet the European Council Directive 2006/42/EC on machinery and the following standards.

- IEC/EN 61508 Functional safety of electrical/electronic/ programmable electronic safety-related systems
- IEC/EN 62061 Safety of machinery Functional safety of safetyrelated electrical, electronic, and programmable electronic control systems
- EN ISO 13849-1 Safety of machinery -- Safety-related parts of control systems -- Part 1: General principles for design

This product is intended for use in an industrial environment.

The performance of the safety function is dependent on the structure of all devices that comprise the safety function. <u>Table 19</u> and <u>Table 20</u> provide the data that must be used to represent safety relays when calculating the Safety Integrity Level (SIL) or the Performance Level (PL).

Safety relays can be used in safety circuits according to DIN EN 60204-1/VDE 0113 part 1. The below mentioned safety requirements are achievable in maximum based on the operation mode and wiring.

Specifications are applicable only if the safety function is demanded at least once within 6 months. All diagnostic tests are conducted at least before next demand. At mission time (TM), the proof test interval (PTI) is assumed. Components failure rates are according to SN29500.

SIL Rating

Safety relays meet the requirements in <u>Table 19</u> in accordance with IEC/EN 61508 and IEC 62061.

Table 19 - SIL Rating

	CI	DI	DIS	EM	EMD	SI
PFH (1/h)	4.26 E-09	4.35 E-09	4.39 E-09	1.81 E-09	4.40 E-09	3.98 E-09
Safety Integrity Level Claim Limit	3					
Mode of Operation	High demand					
Hardware Fault Tolerance	1					
Safe Failure Fraction	99%					

Performance Level/Category

Safety relays can be used in safety systems that meet up to Category 4 and Performance Level PLe in accordance with ISO 13849-1

Table 20 - Performance Level/Category

	CI	DI	DIS	EM	EMD	SI	
MTTFd	164	355	484	190	165	262	
Category			Up	to 4			
Performance Level	Up to e						
DC avg	99%						
Mission Time	20 years						
Days of Operation	365 days						
Hours of Operation	24 hr						
T cycle	8 hr / 8.28 s						

A

add-on profile RSLogix 54 adjust switches 34 adjustment switch 31 agency certifications 59 AOP RSLogix 54 application examples 47 CI safety relay 47 DI safety relay 48 DIS safety relay 49 EM safety relay 50 EMD safety relay 51 SI safety relay 52 apply power 33 approvals regulatory 59 assignments terminal 18 automatic reset 27 auxiliary output 27 specifications 58

В

B1 input specifications 57

C

category 60 certifications agency 59 **CI** safety relay overview 10 circuit block diagram 45, 46 communication Ethernet 53 compliance EU directives 59 **European Union directives 59** configuration 31 process 33 connect power supply 19 considerations enclosure 14 cycle power 34

D

devices mechanical contacts 20 safety, OSSD outputs 21 DI safety relay overview 10 switch adjustment 32 diagnostics indicators 36 diagram internal circuit block 45 CI safety relay 45 DI safety relay 45 DIS safety relay 45 EM safety relay 46 EMD safety relay 46 SI safety relay 46 dimensions mounting 13 DIN rail 13 mounting 13 removal 13 directive EMC 59 machine safety 59 **DIS safety relay** overview 10 switch adjustment 32

Ε

electromechanical outputs 24 EM safety relay overview 11 EMC directive 59 **EMD** safety relay overview 11 switch adjustment 32 timing functions 39 enclosure considerations 14 environmental specifications 55 Ethernet communication 53 EU directives compliance 59 **European Union directives** compliance 59

examples application 47 CI safety relay 47 DI safety relay 48 DIS safety relay 49 EM safety relay 50 EMD safety relay 51 SI safety relay 52 wiring 47 CI safety relay 47 DI safety relay 48 DIS safety relay 49 EM safety relay 50 EMD safety relay 51 SI safety relay 52 excessive heat prevent 15 expansion relays monitor 29

F

features hardware 9 functions pulse testing 37

G

general specifications 55 ground 17 relay 19 Guardmaster safety relay Cl 10, 45, 47 Dl 10, 32, 45, 48 DIS 10, 32, 45, 48 EM 11, 46, 50 EMD 11, 32, 39, 46, 51 Sl 11, 46, 52

Η

hardware features 9 heat prevent excessive 15

indicators diagnostics 36 normal operation 35 power-up 35 status 35 input jog 29 monitor 27 reset 27 retriggerable 29 single wire safety 26 SWS 26 inputs pulse testing 37 . safety 20 installation 13 internal circuit block diagram 45 CI safety relay 45 DI safety relay 45 DIS safety relay 45 EM safety relay 46 EMD safety relay 46 SI safety relay 46 J

jog 42 input 29

М

machine safety directive 59 manual reset 27 mats safety 23 mechanical contacts devices 20 monitor expansion relays 29 input 27 monitored reset 28 mounting dimensions 13 DIN rail 13 multi-position switch 9

Ν

non-retriggerable off delay 39 normal operation indicators 35

0

off delay non-retriggerable 39 retriggerable 40 on delay 41 optical communication bus 10 **OSSD outputs** 24 pulse testing 38 safety devices 21 output auxiliary 27 single wire safety 26 SWS 26 outputs electromechanical 24 **OSSD 24** safety 24 overview 9 CI safety relay 10 DI safety relay 10 DIS safety relay 10 EM safety relay 11 EMD safety relay 11 SI safety relay 11

P

performance level 60 power 17 apply 33 cycle 34 power supply connect 19 power-up indicators 35 prepare switches 33 prevent excessive heat 15 process configuration 33 pulse testing functions 37 inputs 37 **OSSD outputs 38**

R

rating SIL 60 recommendation wiring 17 regulatory approvals 59 relay ground 19 removable rerminals 14 terminal blocks 9 removal 13 requirements wiring 17 rerminals removable 14 reset automatic 27 input 27 input, specifications 56 manual 27 monitored 28 retriggerable input 29 off delay 40 RSLogix add-on profile 54 AOP 54

S

safety inputs 20 mats 23 outputs 24 safety inputs IN, IN1, and IN2 specifications 56 safety outputs specifications 57 safety relay CI 10, 45, 47 DI 10, 32, 45, 48 DIS 10, 32, 45, 49 EM 11, 46, 50 EMD 11, 32, 39, 46, 51 SI 11, 46, 52 settings verify 34 SI safety relay overview 11 SIL rating 60 single wire safety input 26 output 26 specifications 58 spacing 14

specifications 55 auxiliary output 58 B1 input 57 environmental 55 general 55 reset input 56 safety inputs IN, IN1, and IN2 56 safety outputs 57 single wire safety 58 SWS 58 status indicators 10, 35 diagnostics 36 normal operation 35 power-up 35 suppressors surge 25 surge suppressors 25 switch adjustment 31 DI safety relay 32 DIS safety relays 32 EMD safety relay 32 multi-position 9 switches adjust 34 prepare 33 SWS input 26 output 26 specifications 58

Т

terminal assignments 18 torque 17 terminal blocks removable 9 timing functions EMD safety relay 39 torque terminal 17 troubleshooting 35

V

verify settings 34

W

web page 54 wire 17 size 17 wiring examples 47 Cl safety relay 47 Dl safety relay 48 DIS safety relay 49 EM safety relay 50 EMD safety relay 51 Sl safety relay 52 recommendation 17 requirements 17

Rockwell Automation Support

Use the following resources to access support information.

Technical Support Center Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates. State		https://rockwellautomation.custhelp.com/		
Local Technical Support Phone Numbers	Locate the phone number for your country.	http://www.rockwellautomation.com/global/support/get-support-now.page		
Direct Dial Codes	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	http://www.rockwellautomation.com/global/support/direct-dial.page		
Literature Library	Installation Instructions, Manuals, Brochures, and Technical Data.	http://www.rockwellautomation.com/global/literature-library/overview.page		
Product Compatibility and Download Center (PCDC)	Get help determining how products interact, check features and capabilities, and find associated firmware.	http://www.rockwellautomation.com/global/support/pcdc.page		

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-e.pdf.

Rockwell Automation maintains current product environmental information on its website at http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page.

Allen-Bradley, Atlas, Cadet, Elf, Ferrogard, Guardmaster, GuardShield, Lifeline, RSLogix, SafeZone, SensaGuard, Sipha, Rockwell Automation, Rockwell Software, Rotacam, and Trojan are trademarks of Rockwell Automation, Inc. EtherNet/IP is a trademark of ODVA. Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444 Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640 Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846