
### 5 Port Solenoid Valve

New

18 mm

Plug-in Type

Thanks to the flow increase, valve size can be reduced! Saves energy and space

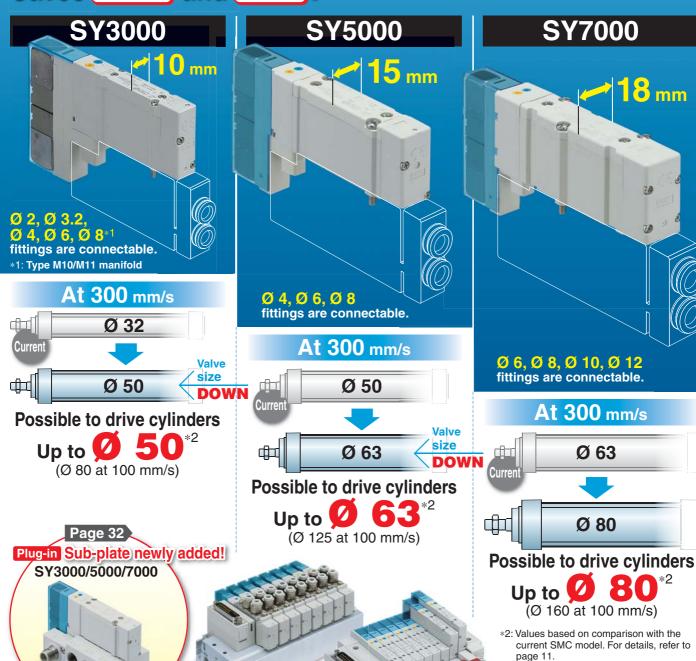

Vacuum Release Valve with Restrictor
 Dual port EX600 EtherNet/IP™ product

- EX500 Gateway Decentralised System 2
- SUP Stop Valve Spacer (With Residual Pressure Release Valve)
- With Residual Pressure Release Valve (SY7000)

\*: Refer to page 2. **U\_1 W**(With power saving circuit) 35 w(Standard) Rubber seal (Service life: 70 million cycles) Metal seal (Service life: 200 million cycles) \*: According to SMC life test conditions


**Power consumption** 

Series SY3000/5000/7000




#### 5 Port Solenoid Valve



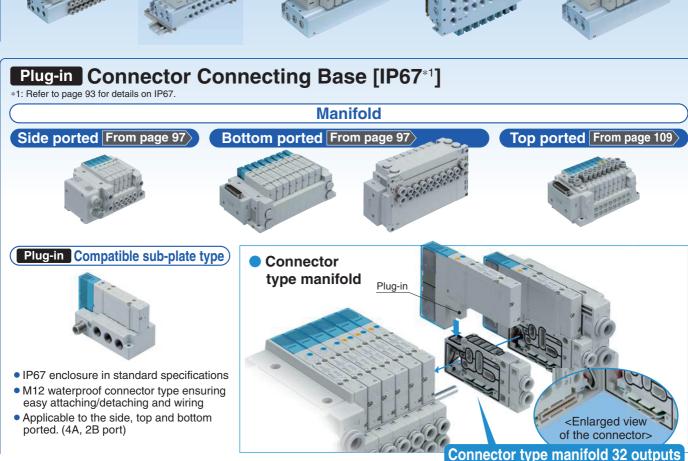


#### Wiring

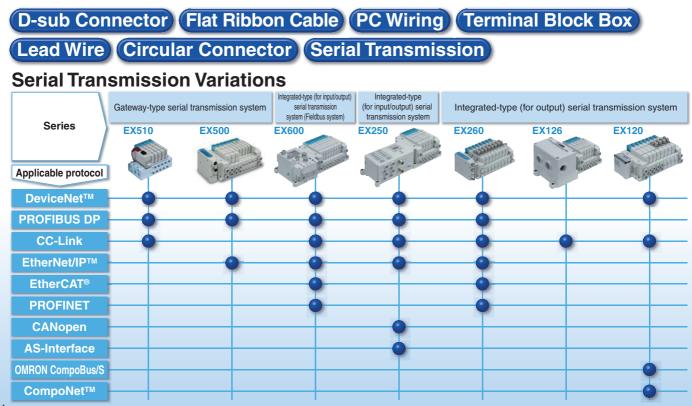

### **Power Saving**

### Power Consumption

O-1 w O-35 w
With power saving circuit Standard

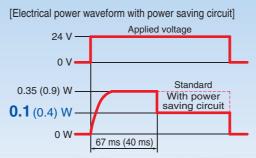


### Power consumption is reduced by power saving circuit.


Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energised state. (Effective energizing time is over 67 ms at 24 V DC.) Refer to the electrical power waveform as shown on the left.

The value in ( ) are for the quick response and high pressure types.

### **Space Saving / Improved Operability**

# Wiring, piping and operation are integrated on one side. Multiple layer type is available as an option. This saves space in the lateral direction. Can be operated from the top.

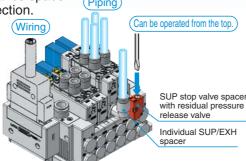

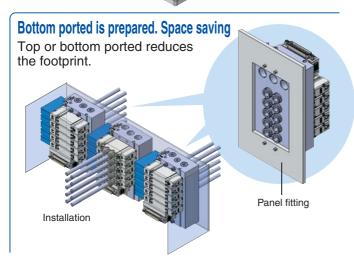


serial units

#### 4-position dual 3-port valve available


(Only rubber seal type)

• Two 3-port valves built into one body

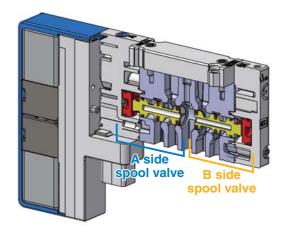

- 3-port valves on the A and B sides can operate independently.
- When used as a 3-port valve, only half the number of stations is required.
- Can also be used as a 4-position, 5-port valve.
- 4-position dual 3-port valve with back pressure check valve is available.
- Combination examples

Series	A side	B side
SY□A <sub>3</sub> 0	N.C. valve	N.C. valve
SY□B <sub>3</sub> 0	N.O. valve	N.O. valve
SY□C <sub>3</sub> 0	N.C. valve	N.O. valve

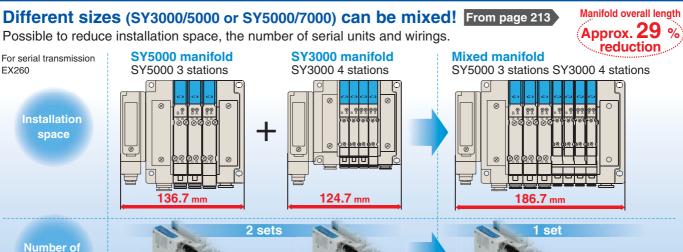



#### 5 Port Solenoid Valve

### Improved Safety

#### **Back Pressure Check Valve**

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.\*1

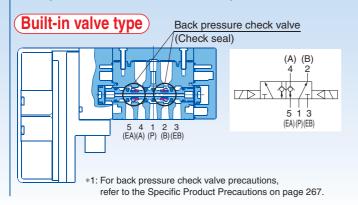

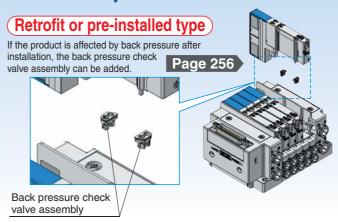



#### With residual pressure release valve (SY5000/7000) Page 23


#### IP67 compliant

For residual pressure release of the 3-position closed centre valve

- ·The pressure of the 4 (A) and 2 (B) ports is also exhausted automatically at the same when the pressure of the 1 (P) port is exhausted.
- ·The pressure can be visualised using the indicator (red).
- ·Since this valve is not a spacer type, the flow rate is equivalent to that of the normal closed centre valve.

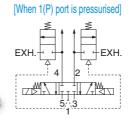


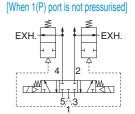

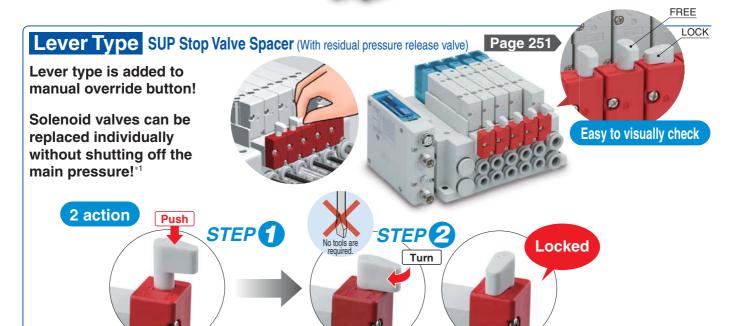

#### Air for solenoid valves can be shut off individually!

The operation of an actuator can be checked by shutting off the air for the solenoid valves on the base individually, while the main air is being supplied during a trial operation.

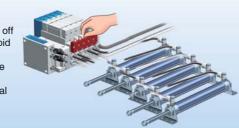

#### Solenoid valves can be replaced individually!

The solenoid valves can be replaced individually without stopping the equipment during maintenance.

#### <Application example>

Air operated valves, such as sanitary valve and automatic valve



\*1: This product is only for internal pilot specifications, as the external pilot air cannot be shut off.


### **Improved Safety**


#### **Slotted Type**

SUP Stop Valve Spacer (With residual pressure release valve) Page 251

Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.

#### Button for manual release of residual pressure

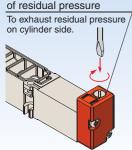


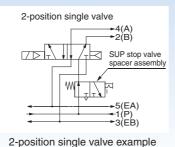


#### Slotted Type


Double Check Spacer (With residual pressure release valve) Page 251


Long time of intermediate stop and position holding are possible.

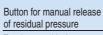

To exhaust residual pressure on cylinder side

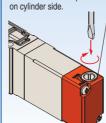

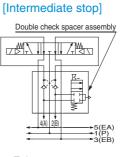

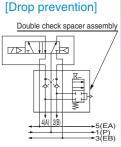



Exhaust centre 2-position single/double

#### With slide locking manual override

ON/OFF operation and locking can be performed with the manual slide.



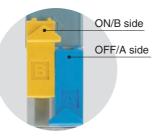

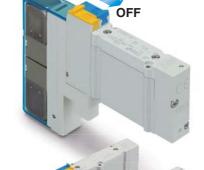

ON/OFF state can be checked at a glance.

#### With safety slide locking manual override SY3000/5000/7000-X13 Page 31

Double action manual override prevents incorrect operation!

#### Double action operation


Before operation The slide manual overrides cannot be turned ON with the safety slide cover. (OFF status: Locked)





SY7000-X13



The slide manual overrides Operation 2 can be operated.

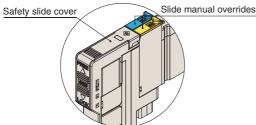

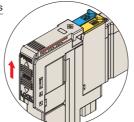

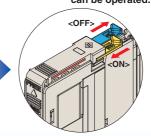

<Vertical sliding>


<Horizontal sliding> \*: The safety slide cover cannot be locked when the slide manual override is turned ON.

#### Visual check

Red lines in three directions can be checked whether the safety slide cover is unlocked (FREE).




Safety slide covers can be checked from their raised and lowered positions.

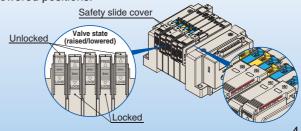





### **5 Port Solenoid Valve**

### **Piping Options**

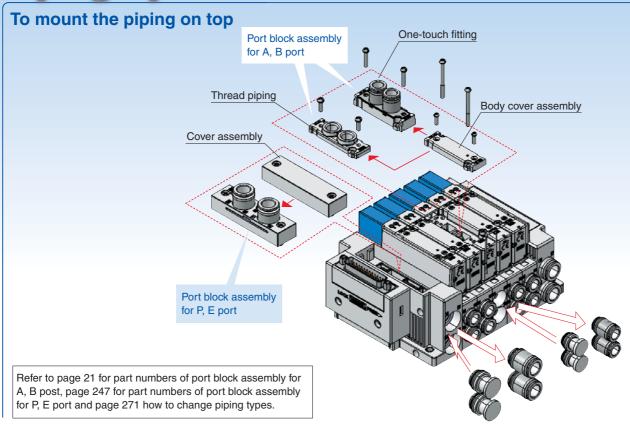

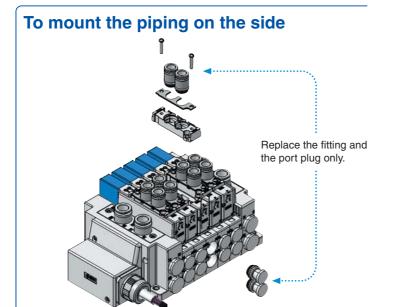


### Mixed mounting of top ported and side ported is possible.

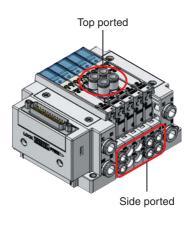

It is possible to detect the output of 4(A) and 2(B) port with a pressure switch by mounting the top ported valve onto the side ported or bottom ported manifold.


(Pressure switch etc., needs to be ordered separately.)

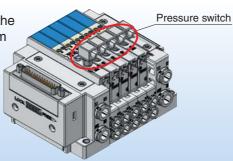

### **Variation**

#### New Only for External Pilot Vacuum Release Valve with Restrictor Series SY 5 A R Page 25

Vacuum suction and release can be controlled with a single valve!

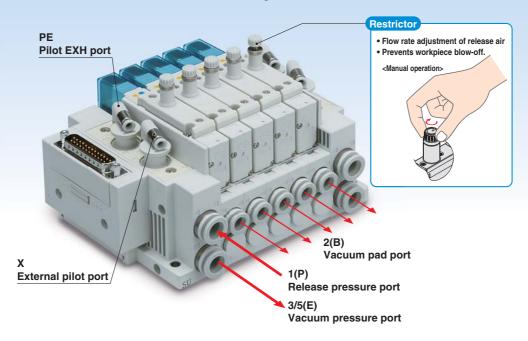


■ Can be mounted on the same manifold with the standard valve.

\*: When the individual EXH spacer is used.

■ Mountable manifolds

Connector connecting base SS5Ys-10/11/12 type manifold Metal base SS5Ys-50/52 type manifold

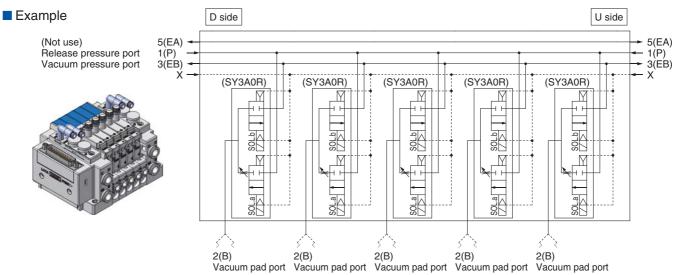

### **5 Port Solenoid Valve**

### Variations

														'irir	_						_						<b>А,</b> В	
					Valve						С	on	nec	tio	n						Com specifi							
					Series								,	Seri	al t	trar	nsn	niss	ioi	า								
						to	ple		pox		ctor	or		(s:	s)						nou	nou					C2	
			Variations			nec	ı ca	ing	ock	/ire	nne	ect		oint	oint						mu	umc	NAS	1/8	4 //	2/0		
					5 ports	D-sub connector	Flat ribbon cable	PC wiring	Terminal block box	Lead wire	Circular connector	M12 connector	EX510	EX500 (128 points) EX500 (64 points)		EX600	EX250	EX260	EX126	EX120	Positive common	Negative common	CIVI	1/0	1/4	3/0	Straight piping	
							_		Ĭ		O			EX6	EX						ъ	Z					Strai	
	ate				SY3□ <sub>3</sub> □																				—			
Plug-in	-ple		No.	From page 34	SY5□3□	]_	_	_	_	_	_		_	_	_	_	_	_	_	_			_	_		_	_	
Plu	Suk		M12 connector		SY7□3□																			_	_			
		ted		Type	SY3□0□																				_			
		por		Type 50 From page 45	SY5□0□				_	_	_	_		_	_	_	_	_	_	_						_		
Q	2	Side ported	W. Santa	page 45	SY7□0□	P.45	P.45	P.45					P.73										_	_			-	
T S	Š	ted		Type	SY3□0□																				_			
<u> </u>	5	n por	W. TITT	Type 51□	SY5□0□				_	_	_	_		_		_	_	_	_							_		
Plua-in Metal Bace		Bottom ported	10.000000000000000000000000000000000000	From page 45	SY7□0□	P.45	P.45	P.45					P.73										_	_	•		-	
10-11	,		No. of the last of	Turna	SY3□3□																			_				
•		Top ported	The same	Type 52□	SY5□3□				_	_	_	_		_	_	_	_	_	_	_					_	_		
		Тор	Sir Contract of the Contract o	From page 65	SY7□3□	P.65	P.65	P.65					P.83										_	_			_	
Baco			orted orted	Type	SY3□0□																							
			0	Type 10□ From	SY5□0□							_	_										_	_	_	_		
rition of		-	o o o o o o o o o o o o o o o o o o o	page 97	SY7□0□	P.97	P.97	P.97	P.115	P.125	P.135			P.145	P.151	P.161	P.173	P.181	P.189	P.197								
Plua-in Connection		Manifold	Bottom ported	Type 11  From page 97	SY5□0□	D 07			P.115	-	P 135	_	_	P.145			P 173	P 181	P 189	P 197			_	_	_		_	
200			-	(Jan. 50 - 51)	SY7□0□	r. <b>3</b> /	r. <b>3</b> /	r.9/	r.113	r.120	r. 133			r. 143	r.101	r.101	r.1/3	r.101	r.109	r.13/								
2		1		Type	SY3□3□																			_	_			
Plua-in		H	papod dol	From page 109	SY5□3□ SY7□3□	P.109		P.109	P.121	P.131	P.141	_	_	P.157	P.159	P.171	P.179	P.187		P.203			_			_	_	
						Ц	L		L	L	L	L	<u> </u>	L		L	L	L	L			<u> </u>	Ц	ш		L		

Standard ○ Option ▲ Made-to-Order (Refer to page 31.)

Port Size								I	Mar	ifo	ld (	Opt	ion	s (I	Pag	es :	250	to	258	)			١	/alv	ve C	Opti	ons	•		Valves Func					
One	e-to	ouc	h fi	ittir	ngs							acer	acer	e release valve	release valve	or	sembly	sembly	disk	disk	installed type)	K	ction type)			ounting	ounting	turbine oil)	cification	se	re	Se		ase valve	restrictor
C3 (N1)	C (N		C (N	6  7)	C (N	8  9)	(N		C.	12	plate	IP spa	H sp	al pressur	al pressure	gulat	ock as	ock as	sking	king	ıly (Manifok	fitting	ig conne	hite)	late	ed m	ed m	signated	re spe	essur	ınssə.	g size	9 IP67	re rele	e with
Straight piping	Straight piping	Elbow piping*1	Blanking	Individual SUP spacer	Individual EXH spacer	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly (Manifold installed type)	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug (White)	Name plate	SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low pressure specification	Different pressures	Reverse pressure	Mixed fitting sizes	Enclosure IP67	With residual pressure release valve	Vacuum release valve with restrictor								
ऊ	S	□	S	Ш	St	ѿ	St	□	S	□				DS.	O		lu	Inc			Back		Sile			S	S	Ö	Va					Š	Va
_	_		_		_	_			_	_	_	_	_	0	0	0		_		_	_		_	_	_	_	_	•	External Pilot	_	External Pilot	_		*3	-
					_																														
		_		_		_		_		_	0	0	0	0	0	0	_	_	_	_	_	_	_	0	-	_	_	<b>A</b>	Evternal	O Individual	Evternal		-	*3	*4
	_																												External Pilot	Individual SUP	External Pilot				
	•		•		_		_		_																									*3	
_		—		_				_		_	0	0	0	0	0	0	_	_	_	_	_	_	_	0	-	_	_	<b>A</b>	_	O Individual	_		_	•	
	_		•																											SUP					$\perp$
					_		_		_																										*4
_		_	9					_		_	0	0	0	0		0				_	_			0		_	_		External Pilot	Individual SUP	External Pilot				
			)																																$\dashv$
							_	_	—		0	$\bigcirc$	0	$\circ$	0	0	0	0	$\circ$	$\circ$	0	0	0	0	$\circ$	P.213	_	•		0			*2	*3	*4
_	_	_	•	•	•	•					Ü	Ü			0	Ü	0	0	0	0	0	_	0				0			Individual SUP					
																											P.217								
_		_		_		_	_		_	_	0	0	0	0	0	0	0	0	0	0	0	_	0	0	0	P.213	_	<b>A</b>		0			*2	*3	*4
	_																										P.217		External Pilot	Individual SUP	External Pilot				
																																	÷0		*4
_	•	—	•	_		_		—		$\left -\right $	0	0	0	0	_	0	0	0	0	0	0	—	0	0	-	P.225		•	External	O Individual	External		*2	-	*4
	_																									_	P.225		Pilot	SUP	Pilot				

<sup>\*1:</sup> Elbow piping may specify size only in millimeters, depending on the port size. Refer to How to Order Manifold for details.

\*2: Refer to Manifold Specifications on page 93 for details on IP67.

\*3: Only SY5000/7000

\*4: Only SY3000/5000

One-touch fittings Straight piping








### INDEX

Manifold Variations	Page 7	Valve Replacement Parts	Page 21
Optimum Actuation Size Chart of	f Air Cylinder Page 11	With Residual Pressure Release \	/alve <b>Page 2</b> 3
Valve Specifications(Specifications, Response Time		Vacuum Release Valve with Restr	ictor ·····Page 25
Valve Construction		Made-to-Order for Valve	Page 31
Sub-plate			
Plug-in Sub-plate	Page 32	M12 connector	
	Plug-in Sub-plate Specifica	tions (M12 Connector)·····	Page 33
	Sub-plate Parts No		Page 35
Manifold Plug-in Metal Bas	Page 42	Type 50/ Side ported Type 51/ Bottom porte	Type 52/ Top ported
		Type 51/Bottom Ported, Ty	
D-sub connector Flat ribbon cable	D-sub Connector, Flat Ribbo	on Cable, PC Wiring System [IP40]	
	Type 50/Side Ported		Page 45
PC wiring	Type 51/Bottom Ported ····		Page 45
, and the second	Type 52/Top Ported		Page 65
	Wiring Specifications		Page 70
EX510	EX510 Gateway-type Serial	Transmission System [IP20]	
	Type 50/Side Ported		Page 73
	Type 51/Bottom Ported ····		Page 73
	Type 52/Top Ported		Page 83

Manifold Exploded View [Exploded View, Manifold Parts No.] ...... Page 89



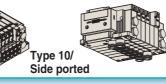



#### Type 10/Side Ported, Type 11/Bottom Ported, Type 12/Top Ported

D-sub connector	PC wiring	Plug-in Connector Connecting Base	··· Page 93
Flat	111h	D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40/67]	··· Page 97
ribbon cable	Terminal block box	Terminal Block Box [IP67]	Page 115
Lead Wile	ircular innector	Lead Wire [IP67]	· Page 125
		Circular Connector [IP67]	· Page 135
	EVENO	EX500 Gateway Decentralised System 2 (128 Points) [IP67]	· Page 145
	EX500	EX500 Gateway Decentralised System (64 Points) [IP67] ······	Page 151
1	EX600	EX600 Integrated-type (For Input/Output) Serial Transmission System (Fieldbus System) [IP67] ···	· Page 161
EX250	D-1	EX250 Integrated-type (For Input/Output) Serial Transmission System [IP67]	· Page 173
	EX260	EX260 Integrated type (For Output) Serial Transmission System [IP67]	Page 181
EX126	Profit.	EX126 Integrated-type (For Output) Serial Transmission System [IP67]	· Page 189
	EX120	EX120 Integrated-type (For Output) Serial Transmission System [IP20]	· Page 197
		Type 10/Side ported Common Dimensions	
		(External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override)	Page 205
		Type 11/Bottom Ported Common Dimensions	· Page 208
		Type 12/Top Ported Common Dimensions	· Page 210
State .	Mixed	Plug-in Manifold Mixed Mounting Type	· Page 213
m	ounting	Manifold Exploded View [Exploded View, Manifold Parts No.]	· Page 229
		How to Increase Connector Type Manifold	Page 243
One-touch Fittings, Plug	Assembl	ly/Part No	· Page 248
Manifold Options [ Plug-	in Metal	Base, Plug-in Connector Connecting Base]	· Page 249
Procific Product Procesu			Page 266



### Optimum Actuation Size Chart of Air Cylinder

Applicable cylinder	Main valve	Series		Appl	icable cyli	inder		
speed	seal type		Ø6	Ø 10	Ø 16	Ø 20	Ø 25	
		SY3000						
	Rubber seal	SY5000						
100 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
		SY3000						
	Rubber seal	SY5000						
300 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
		SY3000						
	Rubber seal	SY5000						
500	Rubber seal	SY7000						
500 mm/s or less		SY3000						
	Metal seal	SY5000						
		SY7000						
		317000						

[Common conditions] • Pressure: 0.5 MPa

Pressure. 0.5 MPa
Piping length: 1 m
Load ratio: 50 %


• Stroke: 200 mm

Connector type manifold (for side and bottom ported type)

\*: Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.



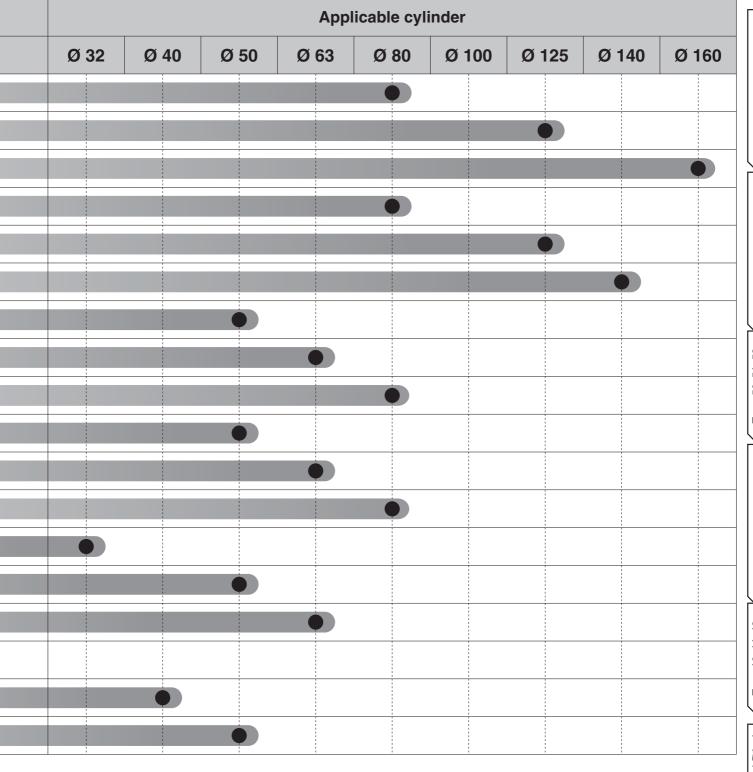

## Series SY3000/5000/7000 Valve Specifications

#### Valve Specifications

V	alve type		Rubber seal	Metal seal			
Fluid	•		Д	ir			
	2-position	single	0.15 to 0.7				
Internal pilot operating pressure range	2-position		0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
[MPa]	3-position		0.2 to 0.7				
[ 2]	4-position	dual 3-port valve	0.15 to 0.7	_			
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)			
External pilot	Dilet	2-position single					
operating pressure range	Pilot pressure	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
[MPa]	range	3-position					
		4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_			
Ambient and fluid tempera	ture [°C]		-10 to 50 (N	lo freezing)			
	SY3000	2-position single/double	5	20*1			
	SY5000	4-position dual 3-port valve					
Max. operating frequency		3-position	3	10*1			
[Hz]		2-position single/double	5	10* <sup>1</sup>			
	SY7000	4-position dual 3-port valve	3	_			
		3-position	3	10* <sup>1</sup>			
				g push type			
Manual override				ng slotted type			
				king lever type			
				king type			
Pilot exhaust type	Internal pi		Main/Pilot valve common exhaust	Main/Pilot valve individual exhaust			
	External p	ilot		vidual exhaust			
Lubrication			Not re	quired			
Mounting orientation*2			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.			
Impact/Vibration resistance	e*2 [m/s²]		150	0/30			
Enclosure			IP67 (Based o	n IEC60529)*3			
Coil rated voltage [DC]				12 V			
Allowable voltage fluctuat	ion [V]		±10 % of rat	ed voltage*4			
	Standard		0.35 (With indi	9 /			
Power consumption [W]	High pressur	re type, Quick response type	0.9 (With indicate)	ator light: 0.95)			
With power saving circuit			Standard: 0.1*5 (With indicator light only) [Inrush 0.35, Holding 0.1], High pressure type: 0.4*5 (With indicator light only) [Inrush 0.9, Holding 0.4]				
Surge voltage suppressor			Diode (Varistor for non-polar type)				
Indicator light			LE	ED .			
*1. Lieo bolow 5 Hz for with the							

<sup>\*1:</sup> Use below 5 Hz for with the power saving circuit.

\*3: In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 266).

\*5: For details, refer to page 268.



<sup>\*2:</sup> Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energised and de-energised states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energised and de-energised states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Refer to page 271 for the fixation of DIN rail mounting type manifold.

<sup>\*4:</sup> Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows. S/Z type \{ 24 V DC: -7 % to +10 % \ T type \{ 24 V DC: -8 % to +10 % \ 12 V DC: -6 % to +10 % \}

### Valve Specifications Series SY3000/5000/7000

#### **Response Time**

					Respo	nse time [m	s] (at 0.5 MPa) N	lote)	
				(	Standard		Quick	response ty	ре
Series	Seal type	Model	Type of actuation	Without light/ surge voltage	With light voltage su	0	Without light/ surge voltage	With light voltage su	ht/surge uppressor
				suppressor	S/Z type	R/U type	suppressor	S/Z type	R/U type
	Rubber seal	SY31□0	O position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Metal seal	SY31□1	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Rubber seal	SY32□0	O position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY3000	Metal seal	SY32□1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY33/4/5□0	0	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Metal seal	SY33/4/5□1	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less
	Rubber seal	SY51□0	O a saldian almala	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Metal seal	SY51□1	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Rubber seal	SY52□0	O maniting daylala	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY5000	Metal seal	SY52□1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY53/4/5□0	0	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less
	Metal seal	SY53/4/5□1	3-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less
	Rubber seal	SY71□0	O maniting single	47 or less	58 or less	53 or less	42 or less	52 or less	44 or less
	Metal seal	SY71□1	2-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less
	Rubber seal	SY72□0	O and a little and a local to lea	18 or less	19 or less	19 or less	18 or less	17 or less	17 or less
SY7000	Metal seal	SY72□1	2-position double	17 or less	17 or less	16 or less	16 or less	16 or less	16 or less
	Rubber seal	SY73/4/5□0	2 position	52 or less	54 or less	47 or less	42 or less	46 or less	40 or less
	Metal seal	SY73/4/5□1	3-position	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less

Note) Based on dynamic performance test, JIS B 8419-2010. (Coil temperature: 20 °C, at rated voltage.

Since the response time of the external pilot type of the 4-position dual 3-port valve differs from the above table, please contact SMC.

#### Valve Weight

#### Series SY3000

Valve model	Seal type	Тур	oe of actuation	Weight [g]
		Opposition	Single	74
		2-position	Double	83
SY3□00	Rubber seal		Closed centre	
31300	nubbei seai	3-position	Exhaust centre	87
			Pressure centre	
		4-position	Dual 3-port valve	83

	Seal			Port size	Weight
Valve model	type	Тур	e of actuation	4, 2 (A, B)	weight [g]
	-71		Single	1, 2 (71, 5)	74
		2-position	Double	-	83
01/0-00 145			Closed centre	1	
SY3□30-M5		3-position	Exhaust centre	M5 x 0.8	87
			Pressure centre		
		4-position	Dual 3-port valve		83
			Single		82
		2-position	Double		91
01/0=00 00			Closed centre	C2	
SY3□30-C2		3-position	Exhaust centre		95
		'	Pressure centre	titting	
		4-position	Dual 3-port valve	Ø 2 One-touch fitting  C3 Ø 3.2 One-touch fitting	91
		0	Single		85
		2-position	Double		94
SY3□30-C3	Rubber		Closed centre		
313030-03	seal	3-position	Exhaust centre		98
			Pressure centre	litting	
		4-position	Dual 3-port valve		94
		2-position	Single		77
		2-position	Double	C4	86
SY3□30-C4			Closed centre	Ø 4 One-touch	
313-30-04		3-position	Exhaust centre	fitting	90
			Pressure centre	Illung	
		4-position	Dual 3-port valve		86
		2-position	Single	]	80
		2-position	Double	C6	89
SY3□30-C6			Closed centre	Ø 6 One-touch	
0100000		3-position	Exhaust centre	fitting	93
		· -	Pressure centre	inding in	
		4-position	Dual 3-port valve		89

Valve model	Seal type	Тур	oe of actuation	Weight [g]
		2-position	Single	76
		2-position	Double	86
SY3□01	Metal seal		Closed centre	
		3-position	Exhaust centre	90
			Pressure centre	

Valve model	Seal	Туре	of actuation	Port size	Weight [g]
	type		0: 1	4, 2 (A, B)	
		2-position	Single	-	76
0)/0=04 145		<u> </u>	Double		86
SY3□31-M5			Closed centre	M5 x 0.8	
		3-position	Exhaust centre		90
			Pressure centre		
		2-position	Single		84
		_ pooio	Double	C2	94
SY3□31-C2			Closed centre	Ø 2 One-touch	
		3-position	Exhaust centre	fitting	98
			Pressure centre		
		2-position	Single		87
	Metal	2-position	Double	C3	97
SY3□31-C3	seal		Closed centre	Ø 3.2 One-touch	
	Seai	3-position	Exhaust centre	fitting	101
			Pressure centre		
		2-position	Single		79
		2-position	Double	C4	89
SY3□31-C4			Closed centre	Ø 4 One-touch	
		3-position	Exhaust centre	fitting	93
			Pressure centre	1	
		Opposition	Single		82
		2-position	Double	C6	92
SY3□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre	fitting	96
			Pressure centre	1	

#### Series SY5000

Valve model	Seal type	Type of actuation		Weight [g]
SY5□00		2-position	Single	82
		z-position	Double	90
	Rubber seal	3-position	Closed centre	
			Exhaust centre	100
			Pressure centre	
		4-position	Dual 3-port valve	90

Valve model	Seal	Type of actuation		Port size	Weight
valve illouel	type			4, 2 (A, B)	[g]
		2-position	Single		102
		2-position	Double		110
SY5□30-01			Closed centre	1/8	
3130-01		3-position	Exhaust centre	1/6	120
			Pressure centre		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		2-position	Double	C4	123
SY5□30-C4			Closed centre	Ø 4 One-touch	133
313030-04		3-position	Exhaust centre	fitting	
	seal		Pressure centre	litting	
		4-position	Dual 3-port valve		123
		2-position	Single		110
		2-position	Double	C6	118
SY5□30-C6			Closed centre	Ø 6 One-touch	
313030-00		3-position	Exhaust centre	fitting	128
			Pressure centre	Illing	
		4-position	Dual 3-port valve		118
		2-position	Single		99
		2-position	Double	C8	107
SY5□30-C8			Closed centre	Ø 8 One-touch	
313-30-00		3-position	Exhaust centre	fitting	117
			Pressure centre	littili	
		4-position	Dual 3-port valve		107

	Valve model	Seal type	Type of actuation		Weight [g]
			2-position	Single	91
			2-position	Double	101
	SY5□01	Metal seal	3-position	Closed centre	
				Exhaust centre	111
				Pressure centre	

Valve model	Seal type	Туре	of actuation	Port size 4, 2 (A, B)	Weight [g]
		Opposition	Single		111
		2-position	Double		121
SY5□31-01			Closed centre	1/8	
		3-position	Exhaust centre		131
			Pressure centre		
		2-position	Single		124
		2-position	Double	C4	134
SY5□31-C4		3-position	Closed centre	Ø 4 One-touch	
			Exhaust centre	fitting	144
	Metal		Pressure centre		
	seal	2-position	Single		120
			Double	C6	130
SY5□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre	fitting	140
			Pressure centre		
		2-position	Single		108
		2-position	Double	C8	118
SY5□31-C8			Closed centre	Ø 8 One-touch	
		3-position	Exhaust centre	fitting	128
			Pressure centre		



#### **Valve Weight**

#### Series SY7000

Valve model	Seal type	Type of actuation		Weight [g]
SY7□00	Rubber seal	2-position	Single	110
			Double	118
		3-position	Closed centre	
			Exhaust centre	133
			Pressure centre	
		4-position	Dual 3-port valve	114

V-1 1-1	Seal	-		Port size	Weight
Valve model	type	Type of actuation		4, 2 (A, B)	[g]
		0 '11'	Single	/ / /	125
		2-position	Double		133
SY7□30-02			Closed centre	1/4	
317 - 30-02		3-position	Exhaust centre	1/4	147
			Pressure centre		
		4-position	Dual 3-port valve		129
		2 position	Single		163
		2-position	Double	C6	171
SY7□30-C6			Closed centre	Ø 6 One-touch	
317 - 30-00		3-position	Exhaust centre	fitting	186
			Pressure centre	littirig	
		4-position	Dual 3-port valve		167
		2-position	Single		151
		2-position	Double	C8	159
SY7□30-C8	Rubber	3-position	Closed centre	Ø 8 One-touch	174
317 - 30-00	seal		Exhaust centre	fitting	
			Pressure centre	Intuing	
		4-position	Dual 3-port valve		155
		2-position	Single		136
		2-position	Double	C10	144
SY7□30-C10			Closed centre	Ø 10 One-touch	
317-30-010		3-position	Exhaust centre	fitting	159
			Pressure centre	Intuing	
		4-position	Dual 3-port valve		140
		2-position	Single		146
		2-position	Double	C12	154
SY7□30-C12			Closed centre	Ø 12 One-touch	
317-30-012		3-position	Exhaust centre	fitting	169
			Pressure centre	inding in	
		4-position	Dual 3-port valve		150

	Valve model	Seal type	Type of actuation		Weight [g]
			2-position	Single	122
		2-posii	2-position	Double	133
	SY7□01	Metal seal	3-position	Closed centre	
				Exhaust centre	150
				Pressure centre	


Valve Specifications Series SY3000/5000/7000


Valve model	Seal	Tyne	of actuation	Port size	Weight
vaive model	type	Type of actuation		4, 2 (A, B)	[g]
		2-position	Single		136
		2-position	Double		148
SY7□31-02			Closed centre	1/4	
		3-position	Exhaust centre		164
			Pressure centre		
		2-position	Single		174
		2-position	Double	C6	186
SY7□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre	fitting	202
			Pressure centre		
		2 position	Single		162
	Metal	2-position	Double	C8	174
SY7□31-C8	seal		Closed centre	Ø 8 One-touch	
	Seai	3-position	Exhaust centre	fitting	190
			Pressure centre		
		2-position	Single		148
		2-position	Double	C10	159
SY7□31-C10			Closed centre	Ø 10 One-touch	
		3-position	Exhaust centre	fitting	176
			Pressure centre		
		2 position	Single		157
		2-position	Double	C12	169
SY7□31-C12			Closed centre	Ø 12 One-touch	
		3-position	Exhaust centre	fitting	185
			Pressure centre	-	


### **Valve Construction**

#### **Rubber Seal**


#### 2-position single

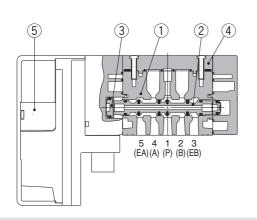


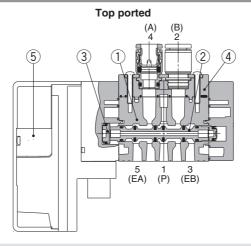

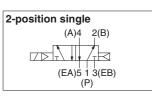



#### 2-position double

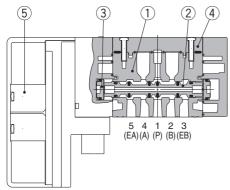


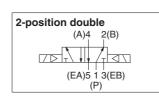


#### 3-position closed centre/exhaust centre/pressure centre

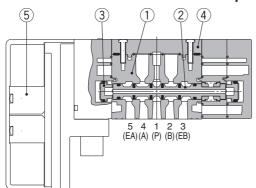

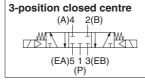

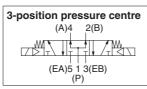

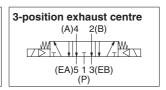

#### **Component Parts**


No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminium die-casted	
2	Spool valve	Special resin/HNBR ( 3-position valve: ( Aluminium/HNBR )	
3	Piston	Resin	
	Body cover assembly	Resin	For side/bottom ported
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminium die-casted	For top ported
5	Pilot valve assembly	_	Refer to page 22.




#### Valve Construction Series SY3000/5000/7000


#### **Rubber Seal**


#### 4-position dual 3-port valve

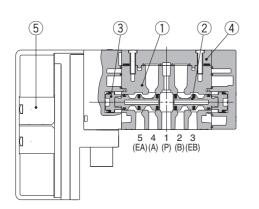

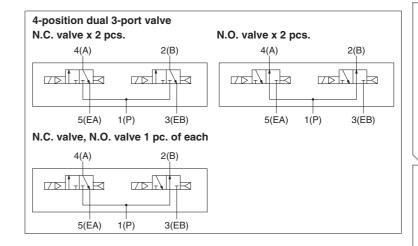


#### 2-position double with back pressure check valve (Built-in valve type)

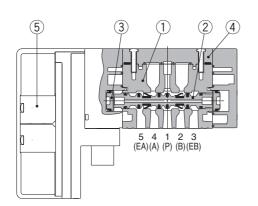


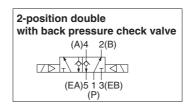

\*: The built-in valve type back pressure check valve is not available for the SY7000.

#### 4-position dual 3-port valve with back pressure check valve (Built-in valve type)

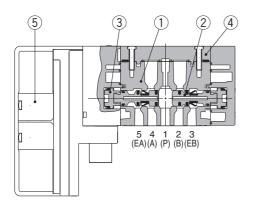


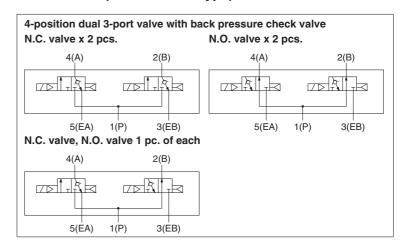



\*: The built-in valve type back pressure check valve is not available for the SY7000.

#### **Metal Seal**


#### 2-position single

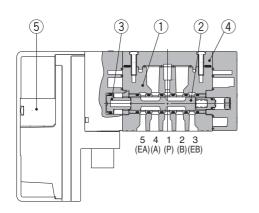


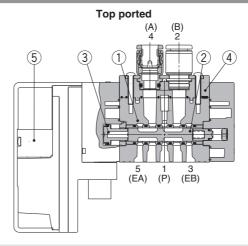

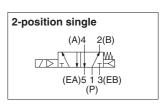



#### 2-position double

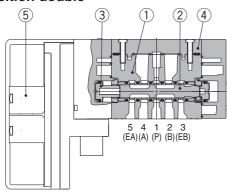

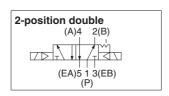


#### 3-position closed centre/exhaust centre/pressure centre

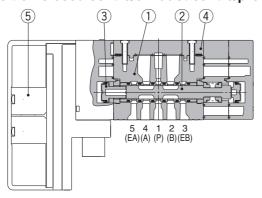


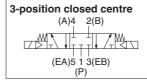

(A)4 2(B)

(EA)5 1 3(EB) (P)

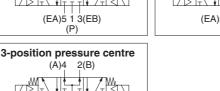

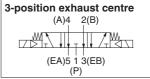


#### Component Parts

COIII	Component Parts						
No.	Description	Material	Note				
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminium die-casted					
2	Spool, Sleeve	Stainless steel/HNBR					
3	Piston	Resin					
	Body cover assembly	Resin	For side/bottom ported				
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminium die-casted	For top ported				
5	Pilot valve assembly	_	Refer to page 22.				



### **Valve Replacement Parts**

#### **How to Order Port Block Assembly**

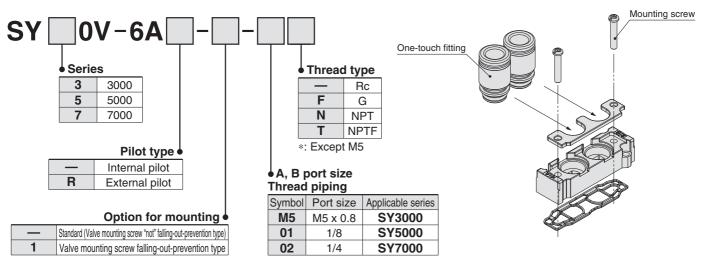

Metric size (One-touch fitting)

	metric size (one toden numg)						
Cumbal	Port size	Applicable series					
Symbol	Port size	SY3000	SY5000	SY7000			
C2	Ø2		_	_			
C3	Ø 3.2		_	_			
C4	Ø 4	•	•	_			
C6	Ø 6						
C8	Ø 8	_					
C10	Ø 10	_	_				
C12	Ø 12	_					

Inch size (One-touch fitting)

mon oizo (ono touon ntang)						
Symbol	Dowt size	Applicable series				
	Port size	SY3000	SY5000	SY7000		
N1	Ø 1/8"	•	_	_		
N3	Ø 5/32"	•	•	_		
N7	Ø 1/4"	•	•	•		
N9	Ø 5/16"	_				
N11	Ø 3/8"	_	_	•		

#### • Possible to replace only the One-touch fitting.

Port size		SY3000	SY5000	SY7000
	Ø2	VVQ1000-50A-C2	_	_
	Ø 3.2	VVQ1000-50A-C3	_	_
	Ø 4	VVQ1000-50A-C4	VVQ1000-51A-C4	_
Metric size	Ø 6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
	Ø 8	_	VVQ1000-51A-C8	VVQ2000-51A-C8
	Ø 10	_	_	VVQ2000-51A-C10
	Ø 12	_	_	KQ2H12-17-X899
	Ø 1/8"	VVQ1000-50A-N1	_	_
	Ø 5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	_
Inch size	Ø 1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	Ø 5/16"	_	VVQ1000-51A-N9	VVQ2000-51A-N9
	Ø 3/8"	_	_	VVQ2000-51A-N11


Refer to pages 271 and 272 for how to replace the port block assembly, One-touch fitting and body cover assembly.



### Valve Replacement Parts Series SY3000/5000/7000

#### **Body Cover Assembly**

\*: Used when the top ported is changed to the side or bottom ported.

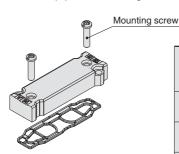

Series		Part no.		
		Standard (Valve mounting screw "not" falling-out-prevention type)	Valve mounting screw falling-out-prevention type	
SY3000	Internal pilot	SY30V-16A	SY30V-16A-1	
313000	External pilot	SY30V-16AR	SY30V-16AR-1	
SY5000	Internal pilot	SY50V-16A	SY50V-16A-1	
315000	External pilot	SY50V-16AR	SY50V-16AR-1	
SY7000	Internal pilot	SY70V-16A	SY70V-16A-1	
	External pilot	SY70V-16AR	SY70V-16AR-1	

<sup>\*:</sup> The part number is not indicated on the product.

#### How to Order Pilot Valve Assembly (With a gasket and two mounting screws)



#### Pilot valve option

_	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
K	High pressure type (1.0 MPa)*1		

\*1: Only metal seal type is available for the high pressure type. (1.0 MPa)

	Coil type ●
_	Standard
Т	With power saving circuit


#### Rated voltage

5	24 V DC
6	12 V DC

#### **⚠** Caution

- The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.
- 2. When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.

#### How to replace pilot valves

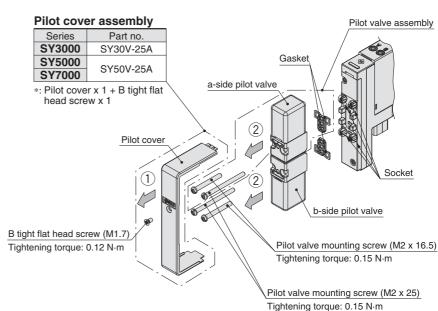

- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow ①.
- Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow 2.
- \*: Assemble by following the removal procedure in reverse.
- \*: Ensure the gasket is mounted, and take care not to bend the socket.
- \*: Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.



### Series **SY5000/7000**

With Residual Pressure Release Valve

Mountable manifold SS5Y5/7-50/51 type manifold SS5Y5/7-(M)10/11 type manifold Sub-plate single unit (Except top ported type)

Pilot valve option


high pressure type.

long periods of time.

268 for details.

Coil type

#### How to Order (With mounting screw)

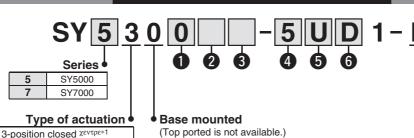

\*1: Only closed centre type is available.

Rubber seal

Metal seal

Standard (0.7 MPa)

Quick response type (0.7 MPa)

High pressure type (1.0 MPa)

Standard With power saving circuit (Continuous duty type) \*: Be sure to select the power saving circuit type

when the valve is continuously energised for

power saving circuit is selected. Refer to page

\*: Be careful of the energising time when the

\*1: Only metal seal type is available for the

Rated voltage 24 V DC 12 V DC


\*: The applicable rated voltage varies depending on the manifold wiring type. Refer to the "How to Order Manifold" pages.

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
		_		
R			Non-polar	
U	•			
S			Positive	
Z	•		common	
NS			Negative	
NZ	•		common	

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### 6 Manual override

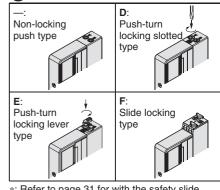

With residual pressure release valve

E With residual pressure release valve\*1

\*1: Mounting screw types, hexagon socket head

type K, H are not available.

cap screw B and screw falling-out-prevention

Protective class class II (Mark: ♠)

- Refer to page 31 for with the safety slide locking manual override.
- When ordering a valve individually, the base gasket is not included.


Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 89 or 244 for part numbers of the base gasket and mounting screw.


#### Valve Specifications

Valve construction		Rubber seal	Metal seal	
		3-position closed centre valve with residual pressure release valve*1		
Fluid		Air		
Operating pressure range MPa*2		0.3 to 0.7	0.3 to 0.7 (High pressure: 0.3 to 1)	
Wainht [n] SY5000		117	128	
Weight [g]	SY7000	156	177	

- \*1: Rubber seal is used for the residual pressure release valve.
- \*2: Internal pilot type only
- \*: Other specifications are common to the valve specifications on page 13.


#### **Symbol**

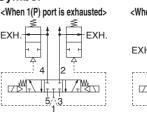

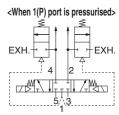


A mechanism is used that exhausts the pressure of the cylinder port when the P port supply pressure of the 3 position closed centre valve is exhausted.

### With Residual Pressure Release Valve Series SY5000/7000

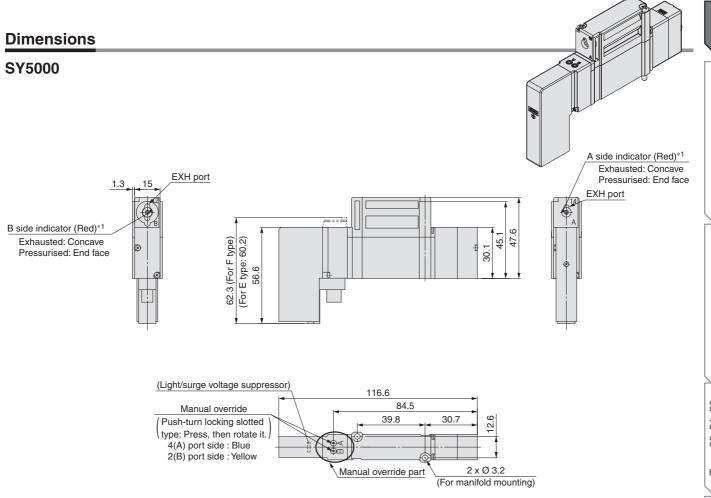

#### SY7000

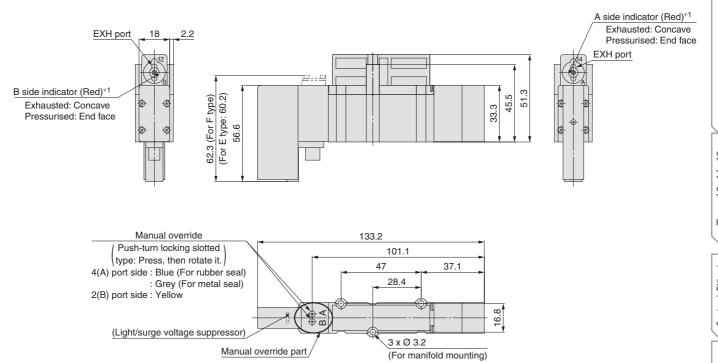

<sup>\*1:</sup> The indicator shows the pressurisation status. Do not push it.

**Only for External Pilot** 

# Vacuum Release Valve with Restrictor ( Series SY3000/5000


Mountable manifolds [External pilot]

How to Order (With mounting screw)



Side ported/Bottom ported

Top ported

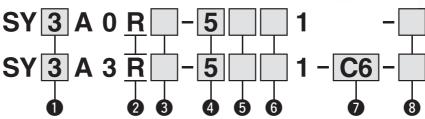

#### Series


3	SY3000
5	SY5000

#### 2 Pilot type

R	External pilot

### 4 Rated voltage 5 24 V DC

#### **6** Manual override

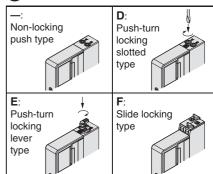

\*: Refer to page 31 for with the safety slide locking manual override.

#### 3 Coil type

_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select "with power saving circuit" when the solenoid valve will be energised continuously for long period.
- Note the specified energising time when power saving circuit is selected.

#### **5** Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
		-		
R			Non-polar	
U	•			
S			Positive common	
Z	•	•	Positive common	
NS			Negative	
NZ	•		common	

\*: Only "Z" and "NZ" types are available for the product with power saving circuit.

#### Protective class class ☐ (Mark: ♠)

SY3A0R-5U1

**How to Order Manifold Assembly** 

Example (SS5Y3-10F1-□□R)

3-position 3-port valve with restrictor (24 V DC

Manifold base (5 stations) SS5Y3-10F1-05DR-C6

#### B port size

#### One-touch fitting (Metric size)

9	Symbol	B port	SY3000	SY5000
	C4	Ø 4 One-touch fitting	•	•
	<b>C6</b>	Ø 6 One-touch fitting		
	C8	Ø 8 One-touch fitting	_	
_				

#### One-touch fitting (Inch size)

	<b>3</b> \	,	
Symbol	B port	SY3000	SY5000
N3	Ø 5/32" One-touch fitting		
N7	Ø 1/4" One-touch fitting	•	
N9	Ø 5/16" One-touch fitting	_	•

- \*: When selecting the port size for each station, specify on a manifold specification sheet separately.
- \*: When mounting on the manifold base or sub-plate, the A port is plugged. When a manifold base or sub-plate is ordered separately, mount a plug on the A port.

### SS5Y3-10F1-05DR-C6···1 set (Type 10 5-station manifold base part no.) §SY3A0R-5U1 (3-position 3-port with restrictor part no.)···5 sets

- \*The asterisk denotes the symbol for assembly.
  \*Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 1 Type of mounting screw

<u> </u>								
_	Round head combination screw							
В	Hexagon socket head cap screw							

- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



#### **Valve Specifications**

Valve construction		3-position 3-port valve with restrictor
Seal		Rubber seal
Fluid		Air
Type of actuation		Normally closed
	Release pressure port 1(P)	0 to 0.6
Operating pressure range [MPa]	Vacuum pressure port 3(EB), 3/5(E)	-100 kPa to 0.7*1
Talige [WFa]	Pilot X port	Release pressure + 0.1 or more (Min. 0.25) to 0.7
Restrictor operation		Manual

- \*1: Can be used with positive pressure to suit the application.
- \*: Other specifications are common to the valve specifications on page 13.
- \*: Quick response type is not available.

#### Weight

Valve model	Weight [g]	
SY3A0R	90	
V 1 1 1 1	Port size	
Valve model	2(B) port	Weight [g]
CV2 A 2D	C4	91
SY3A3R	C6	93
Valve model	Weight [g]	
SY5A0R	94	
V 1	Port size	
Valve model	2(B) port	Weight [g]
	C4	118
SY5A3R	C6	115
	C8	121

#### **Response Time**

Valve model	Without light/surge	With light/surge voltage suppressor			
valve model	voltage suppressor	S/Z type	R/U type		
SY3A□R	18	26	18		
SY5A□R	27	32	27		

<sup>\*:</sup> P = 0.1 MPa X = 0.5 MPa

### 1(P) 3(EB) X Release pressure vacuum pressure port

2(B)

Vacuum pad port

#### Manifold Flow Rate Characteristics\*1

#### Flow Rate Characteristics (When restrictor is fully open)

#### 1) Plug-in Metal Base

**Symbol** 

O Flag III Motal Bacc									
	Port size		Valve flow rate characteristics						
Manifold type	1, 3 2			1→2 (P→B)			2→3 (B→EB)		
	(P, EB)	(B)	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min (ANR)]*2	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min (ANR)]*2	
SS5Y3-50R (Side ported)	1/8	C6	0.7	0.24	172	1.0	0.16	234	
SS5Y3-52R (Top ported)	1/8	C6	1.0	0.25	247	1.1	0.25	271	
SS5Y5-50R (Side ported)	1/4	C8	1.0	0.30	254	2.3	0.10	522	
SS5Y5-52R (Top ported)	1/4	C8	1.4	0.16	328	2.4	0.14	556	

#### 2 Plug-in Connector Connecting Base


Port size		size	Valve flow rate characteristics						
Manifold type	1, 3 2		1→2 (P→B)			2→3 (B→EB)			
	(P, EB)	(B)	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min (ANR)]*2	C [dm <sup>3</sup> /(s·bar)]	b	Q [I/min (ANR)]*2	
SS5Y3-10R (Side ported)	C8	C6	0.7	0.36	185	1.2	0.22	291	
SS5Y3-12R (Top ported)	C8	C6	1.0	0.26	248	1.2	0.20	287	
SS5Y5-10R (Side ported)	C10	C8	1.0	0.20	240	2.9	0.17	683	
SS5Y5-11R (Bottom ported)	C10	C8	1.0	0.30	354	3.3	0.24	809	
SS5Y5-12R (Top ported)	C10	C8	1.4	0.15	326	2.6	0.24	637	

- \*1: The value is for manifold base with 5 stations.
- \*: Calculation of effective area S and sonic conductance C: S = 5.0 x C
- \*2: These values have been calculated according to ISO 6358 and indicate the fl ow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.


#### Series **SY3000/5000**

#### Restrictor Flow Rate Characteristics [Fluid passage: 1(P)→2(B)]


#### SY3A0R

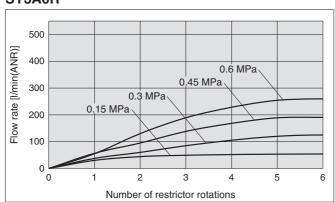


#### SY5A0R

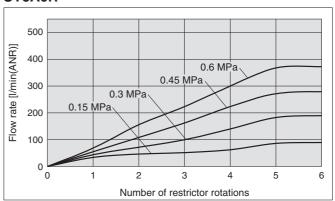


#### SY3A3R-C4

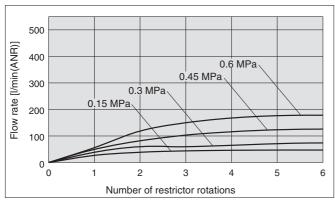


#### SY5A3R-C4

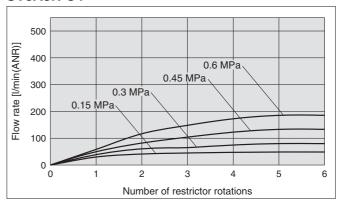


#### SY3A3R-C6

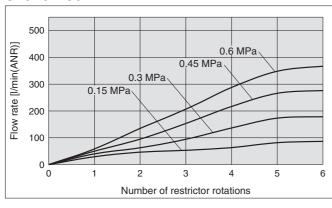


#### SY5A3R-C6

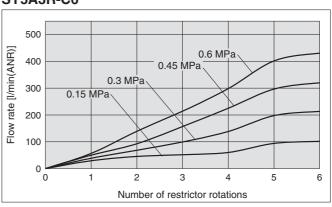


#### SY5A3R-C8

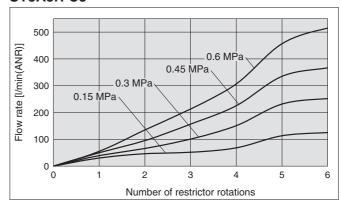

#### <Example 1: When the 2-position double solenoid valve is combined with the individual EXH spacer.>

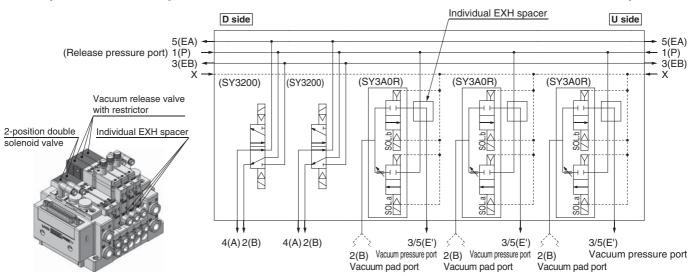

#### <Example 2: When the 2-position double solenoid valve is combined with the individual EXH block and blocking disk.>

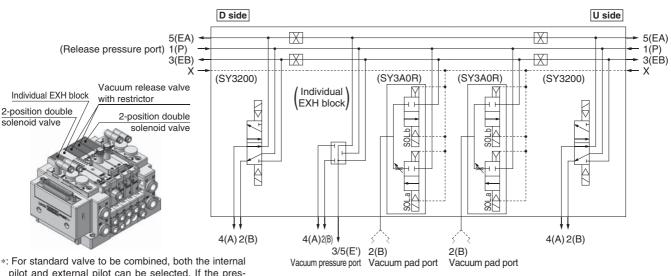

E: For standard valve to be combined, both the internal pilot and external pilot can be selected. If the pressure drop may occur when the 1(P) port releases the vacuum, use the external pilot type.

Valve

Plug-in Sub-plate

Plug-in Metal Base


Type 50, 51, 52
Manifold Exploded View

Plug-in Connector Connecting Base


#### Series SY3000/5000

#### **Dimensions: SY3000**


#### Side ported SY3A0R

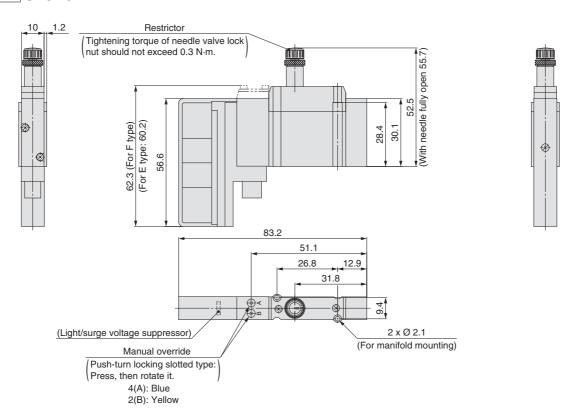


#### Top ported SY3A3R

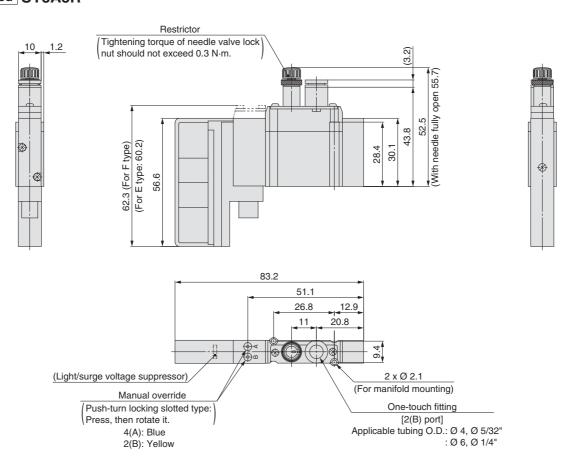

#### **Dimensions: SY5000**

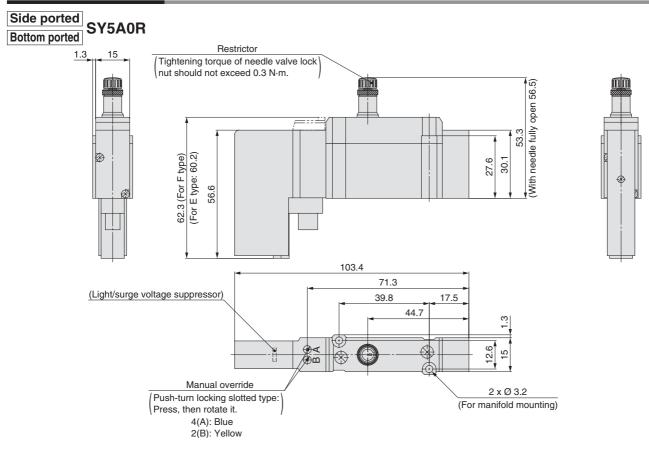

#### Top ported SY5A3R

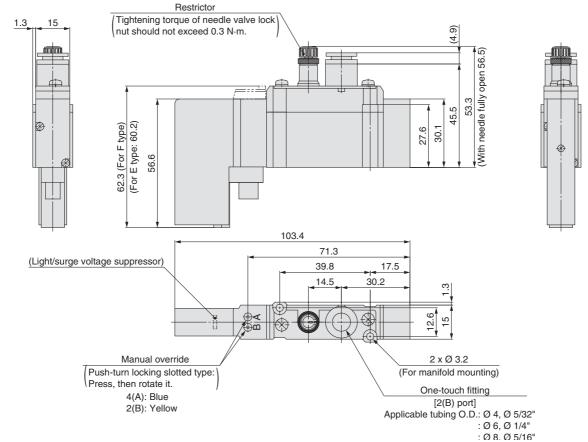

Please contact SMC for detailed dimensions, specifications and lead times.

**Made to Order** 



#### 1 Main Valve Fluororubber Specification

**Symbol** -X90

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

· When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.


Applicable valves series  $SY3_{30}^{0}$ ,  $SY5_{30}^{0}$ ,  $SY7_{30}^{0}$  (Only rubber seal type)

Entry is the same as standard products.

Specifications and performance are the same as standard products.


#### 2 With Safety Slide Locking Manual Override

A safety lock is added to the slide locking manual override. (Refer to page 4.)

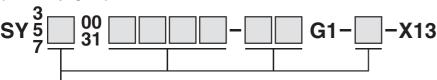

Entry is the same as standard products.

Specifications and performance are the same as standard products.

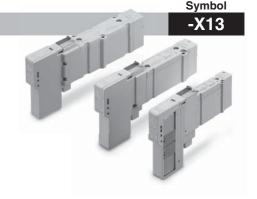


#### 3 Metal Seal Valve, Main/Pilot Valve Common Exhaust

**Symbol** 

-X16

This is the type where the exhaust method of the pilot valve is integrated into the exhaust port of the main valve.

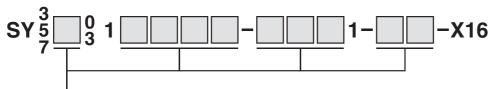

Entry is the same as standard products.

\*: Note that the response time of the valve becomes slower than standard products. Please contact SMC for details.

31

### Plug-in Sub-plate Type [IP67 Compliant]



### Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

(Side ported, Bottom ported, Top ported) (RoHS)

#### Plug-in Sub-plate Specifications

				0.				
Manifold type								
_	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Side po					
Piping direction	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Bottom					
i iping an obtain	Top ported	1(P), 5(EA)/3(EB) port	Side po					
	Top ported	4(A)/2(B) port	Top po	orted				
SUP/EXH port type		SUP/EXH individual port [5(EA), 3(EB) indi	vidual]					
Applicable connector		M12 waterproof connector						
Internal wiring		Positive common, Negative common						
			SY3000	1/8				
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4				
			SY7000	3/8				
	Bottom ported		SY3000	1/8				
Port size		1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4				
			SY7000	3/8				
	Top ported		SY3000	1/8				
		1(P), 5(EA)/3(EB) port	SY5000	1/4				
			SY7000	3/8				
		4(A)/2(B) port	Compliant with the valve.*1					
Enclosure (Based on IEC60529)		IP67						
		Side ported	99					
	SY3000	Bottom ported	109					
		Top ported	104					
		Side ported	14	5				
Weight: W [g]*2	SY5000	Bottom ported	172	2				
		Top ported	159	9				
		Side ported	209	5				
	SY7000	Bottom ported	232	2				
		Top ported	227					

<sup>\*1:</sup> Refer to page 13 for valve specifications.

#### Plug-in Sub-plate Flow-rate Characteristics

#### **Rubber Seal**

Series	Sub-plate Fitting p		port size 1 → 4/2				4/2 → 5/3		
Series	piping location	(P,E)	(A,B)	С	b	Q [l/min(ANR)]*2)	С	b	Q [I/min(ANR)]*2)
	Side ported	1/8	1/8	1.8	0.27	449	1.7	0.26	422
SY3000	Bottom ported	1/8	1/8	1.7	0.23	414	1.4	0.27	349
	Top ported	1/8	C6	1.3	0.34	339	1.5	0.27	374
	Side ported	1/4	1/4	4.2	0.21	1012	4.0	0.26	992
SY5000	Bottom ported	1/4	1/4	4.0	0.19	953	4.0	0.23	975
	Top ported	1/4	C8	2.9	0.29	733	4.1	0.33	1063
	Side ported	3/8	3/8	6.5	0.24	1593	6.3	0.23	1535
SY7000	Bottom ported	3/8	3/8	6.4	0.22	1591	6.3	0.22	1526
	Top ported	3/8	C12	5.4	0.30	1373	6.0	0.27	1497

#### **Metal Seal**

Series	Sub-plate	Fitting port size		1 → 4/2			4/2 → 5/3		
Series	piping location	(P,E)	(A,B)	C	b	Q [l/min(ANR)]* 2)	C	b	Q [l/min(ANR)]* 2)
	Side ported	1/8	1/8	1.4	0.14	325	1.3	0.26	322
SY3000	Bottom ported	1/8	1/8	1.3	0.13	300	1.3	0.22	315
	Top ported	1/8	C6	1.2	0.22	291	1.4	0.29	354
	Side ported	1/4	1/4	3.2	0.13	738	3.5	0.16	820
SY5000	Bottom ported	1/4	1/4	3.0	0.12	688	3.2	0.17	754
	Top ported	1/4	C8	2.6	0.23	634	3.2	0.19	762
	Side ported	3/8	3/8	4.6	0.10	1044	4.9	0.16	1148
SY7000	Bottom ported	3/8	3/8	4.6	0.10	1044	4.9	0.17	1154
	Top ported	3/8	C12	4.0	0.18	947	4.7	0.16	1101

 $<sup>\</sup>ast$  Calculation of effective area S and sonic conductance C: S = 5.0 x C

<sup>\*2:</sup> The values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.




<sup>\*2:</sup> The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 15, and to include the cable weight, add the connector cable weight on page 35.

<sup>\*1:</sup> The value is for individually operated 2-position type.

# Manifold Options

#### **How to Order**

In the case of (Valve) + (Sub-plate) (Built-in valve type part no.)

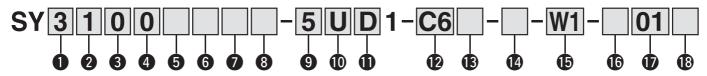

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
<b>A</b> *1	4 position	N.C./N.C.
B*1	4-position dual 3-port	N.O./N.O.
C*1	addi o-port	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Valve piping type

<u> </u>		
0 Base mounted (Port location: Side, Bottom		
3	Top ported (4A, 2B port location: Top)	

#### 4 Seal type

	<b>*</b> 1
0	Rubber seal
1	Metal seal

#### 6 Pilot type

_	Internal pilot
R	External pilot

#### 6 Back pressure check valve (Built-in valve type)

_	None	
Н	Built-in	

- \*: Only rubber seal type
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### Pilot valve option

C i man i mira apinan	
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### 8 Coil type

	<u> </u>	
ı	_	Standard
ı	Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### Rated voltage


- 110	ou ronago
5	24 V DC
6	12 V DC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		
S			Positive
Z	•	•	common
NS			Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

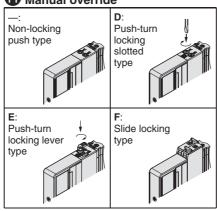

\*: Refer to page 31 for with the safety slide locking manual override.

#### A, B port size (\*: Top ported valve only)

#### Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

#### Metric size (One-touch fitting)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2			
C3	Ø 3.2	•	_	_
C4	Ø 4	•	•	_
C6	Ø 6	•	•	•
<b>C8</b>	Ø 8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•

#### Inch size (One-touch fitting)

Symbol	A, B port	SY3000	SY5000	SY700
N1	Ø 1/8"	•	_	_
N3	Ø 5/32"	•	•	_
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"			•

#### (Top ported valve only)

	<u> </u>
_	Rc
F	G
N	NPT
Т	NPTF

\*: Only — is available for M5.

#### Type of mounting screw

_	Round head combination screw			
B Hexagon socket head cap screv				
K Round head combination screw (Falling-out-prevention				
Н	Hexagon socket head cap screw (Falling-out-prevention type)			

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: Refer to page 35 when the base gaskets and mounting screws are required for maintenance.
- \*: When using an optional spacer assembly, "B" and "H" cannot be selected.

#### Wiring specifications

	WO	Without M12 connector cable			
W1 With M12 connector cable (300 r					
	W2	With M12 connector cable (500 mm)			
	W3	With M12 connector cable (1000 mm)			
	W4	With M12 connector cable (2000 mm)			
	W7	With M12 connector cable (5000 mm)			

\*: When ordering a product with M12 connector cable, the connector cable is included.

#### Port location (Sub-plate)

Total location (our plate)						
_	Side ported					
В	Bottom ported					
<b>V</b> *1	Top ported (1P, 5EA, 3EB port: Side ported)					

\*1: Only available for the valve piping type "3" top ported.

#### Port size (Sub-plate)

<u> </u>					
	Symbol	Port size	Applicable series		
	01	1/8	SY3000		
	02	1/4	SY5000		
	03	3/8	SY7000		

#### 18 Sub-plate thread type


	·   · · · · · · · · · · · · · · · · · ·
_	Rc
F	G
N	NPT
Т	NPTF

\*: When mounting a special order (including Made-to-Order specification) valve or manifold option (spacer etc.) on the sub-plate, add the valve part number or spacer part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 35.

#### **How to Order**

In the case of (Sub-plate) (Sub-plate single unit part no.)

\*: Without valve

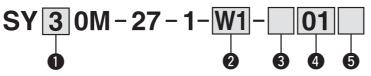

Series

3	SY3000
5	SY5000
7	SY7000

2 Wiring specifications

WO	Without M12 connector cable					
W1	With M12 connector cable (300 mm)					
W2	With M12 connector cable (500 mm)					
W3	With M12 connector cable (1000 mm)					
W4	With M12 connector cable (2000 mm)					
W7	With M12 connector cable (5000 mm)					

- \*: Refer to the table below for connector cable part numbers.
- \*: When ordering a product with M12 connector cable, the connector cable is included.

Port location (Sub-plate)

O i dit iddation (das plato)					
Side ported					
B Bottom ported					
V	Top ported [1(P), 5(EA), 3(EB) port: Side ported]				

4 Port size

_	<u> </u>					
Symbol	nbol Port size Applicable seri					
01	1/8	SY3000				
02	1/4	SY5000				
03	3/8	SY7000				

Sub-plate thread type				
_	Rc			
F	G			
N	NPT			
T	NPTF			

\*: Base gasket is included. \*: Valve mounting screws are not included.

How to Order when mounting a special order (including Made-to-Order specification) valve on the sub-plate (Ordering example: X90)

SY30M-27-1-W1-01 ····· 1 set (Sub-plate single unit part no.)


\*SY3200-5U1-X90········ 1 set (2-position double part no./Main valve fluororubber specification)

Ordering example when mounting a manifold option (spacer etc.)

SY30M-27-1-W1-01······ 1 set (Sub-plate single unit part no.) \*SY3400-5U1 ······ 1 set (3-position exhaust centre part no.)

\*SY30M-60-1A ·············· 1 set (Part no. for double check spacer with residual pressure release valve)

#### Sub-plate Parts No.

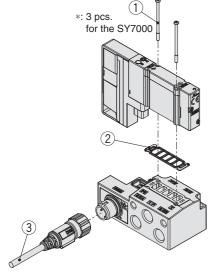

No.	Description		Part no.		Note	
INO.			SY3000	SY5000	SY7000	ivote
(1)	Valve mounting screw	Round head combination screw	<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	the left are for 10 valves
		Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	
2	Base gasket (for sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
	M12 waterproof connector cable			ZS-37-L		Cable length: 300 mm Cable weight: Approx. 18 g
3			ZS-37-M		Cable length: 500 mm Cable weight: Approx. 23 g	
				ZS-37-N		Cable length: 1000 mm Cable weight: Approx. 36 g
				ZS-37-P		Cable length: 2000 mm Cable weight: Approx. 62 g
				ZS-37-C		Cable length: 5000 mm Cable weight: Approx. 140 g



**Tightening torque** 

M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)




Plug-in Single Unit/Sub-plate


**Side Ported Top Ported** 

# Dimensions: Series SY3000



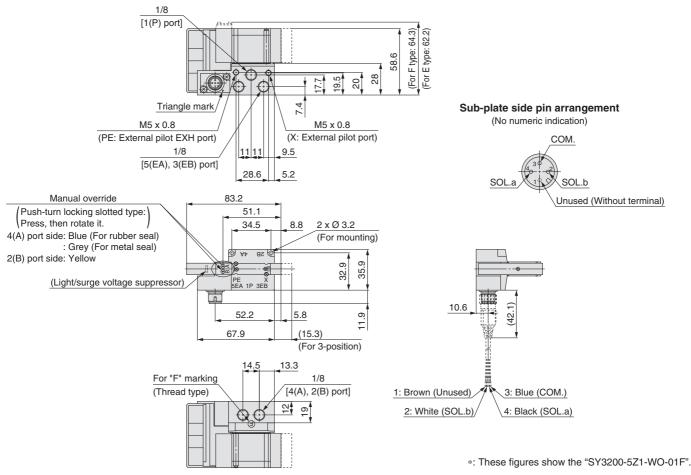

## SY3 3 1 0 0 - 0 1 - 0 - W - V01 (Top ported)

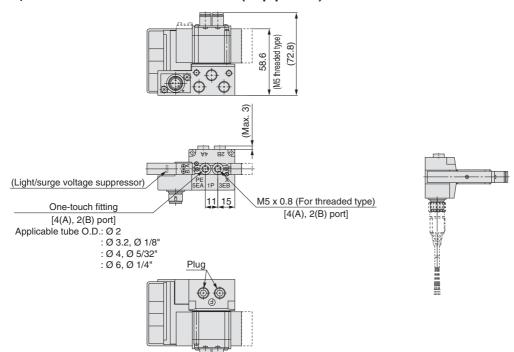

- \*: These figures show the "SY3230-5Z1-C6-WO-V01F".
- \*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.




Dimensions: Series SY3000

Plug-in Single Unit/Sub-plate

**Bottom** Ported

### **SY3**□0<sup>1</sup>□□□□-□□1-W□-B01□ (Bottom ported)

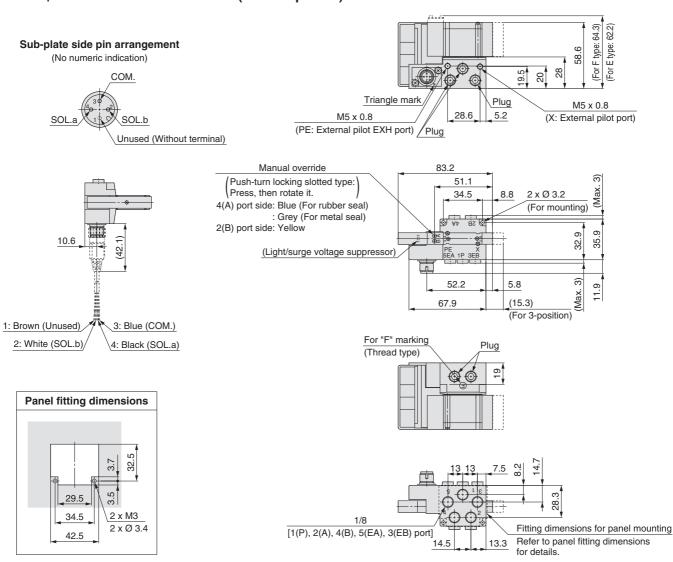



\*: These figures show the "SY3200-5Z1-WO-B01F".

Plug-in
Single Unit/Sub-plate **Side Ported Top Ported** 

# Dimensions: Series SY5000


## SY5 0 1 0 1 0 0 1 - W 0 - 02 (Side ported)

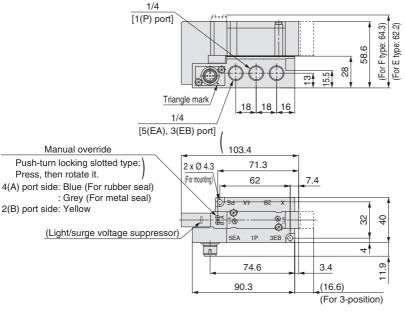


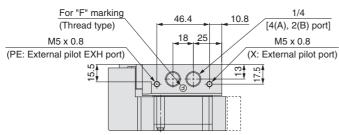

### Sub-plate side pin arrangement


(No numeric indication)

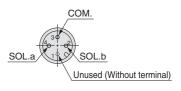


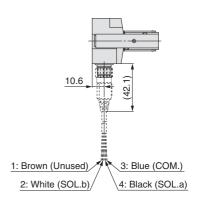


\*: These figures show the "SY5200-5Z1-WO-02F".

# SY5□3<sup>0</sup>□□□□-□□1-□□-W□-V02□ (Top ported)

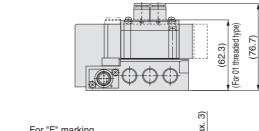

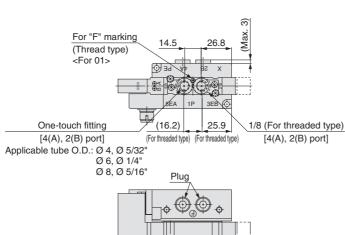

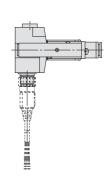


- \*: These figures show the "SY5230-5Z1-C8-WO-V02F".
- \*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.



Dimensions: Series SY5000

Plug-in Single Unit/Sub-plate Bo

**Bottom** Ported

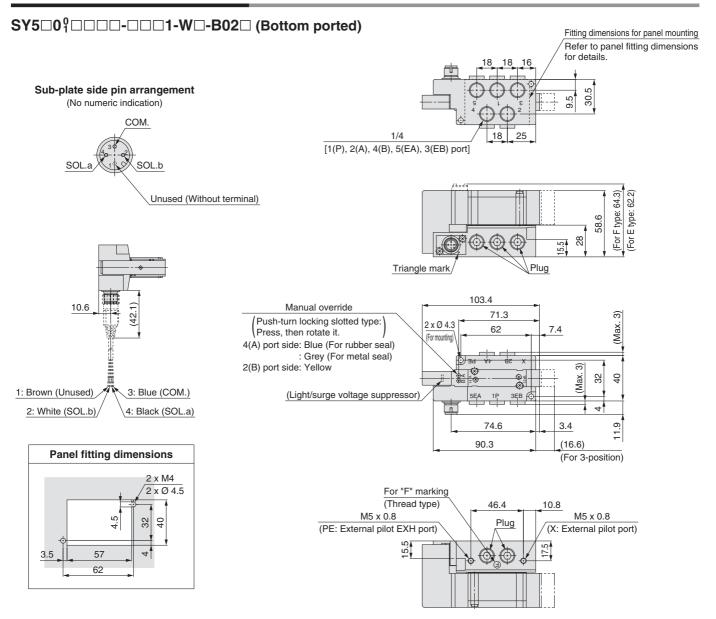


\*: These figures show the "SY5200-5Z1-WO-B02F".


Plug-in
Single Unit/Sub-plate


**Side Ported Top Ported** 


# Dimensions: Series SY7000

## SY7□0<sup>0</sup>1□□□□-□□□1-W□-03□ (Side ported)

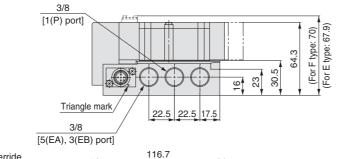

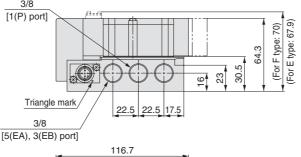


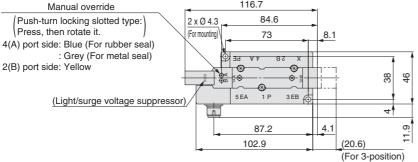


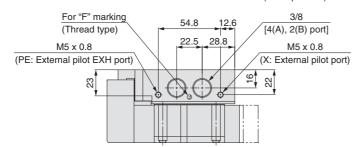

# Sub-plate side pin arrangement


(No numeric indication)

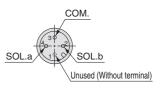


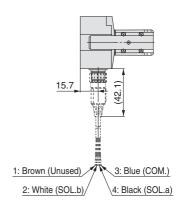

\*: These figures show the "SY7200-5Z1-WO-03F".

## 

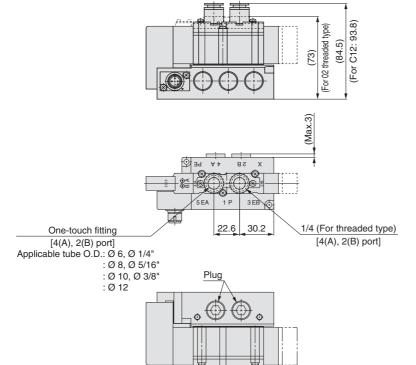


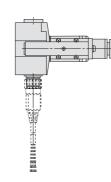

- \*: These figures show the "SY7230-5Z1-C10-WO-V03F".
- \*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.


Dimensions: Series SY7000


Plug-in
Single Unit/Sub-plate Bottom Ported

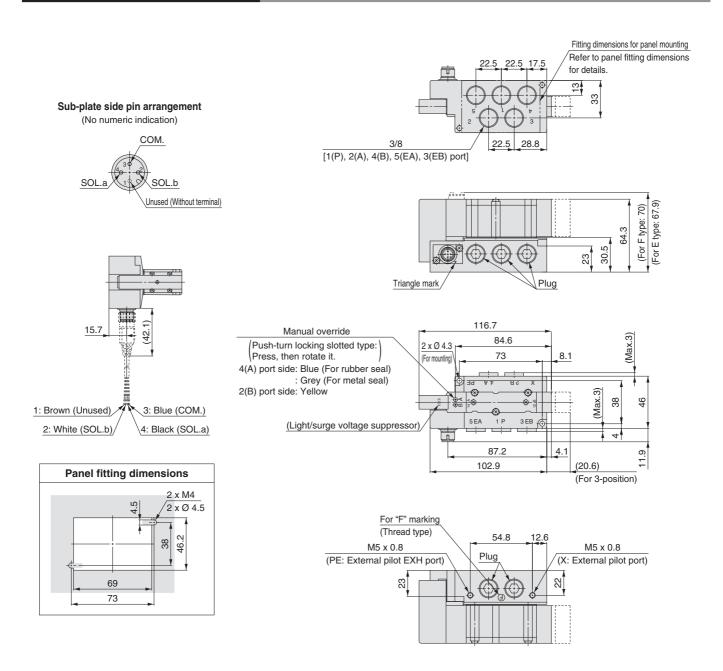


\*: These figures show the "SY7200-5Z1-WO-B03F".

# Plug-in Metal Base

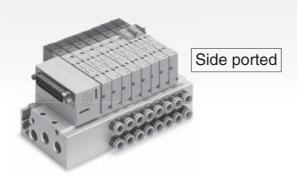

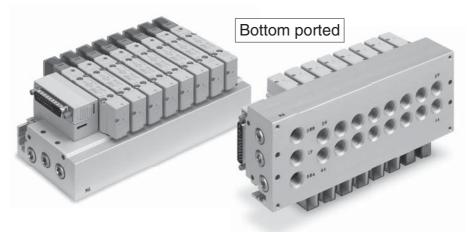

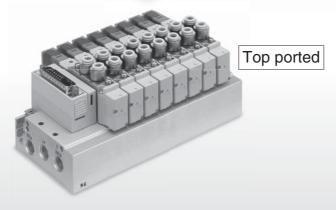

# Series SY3000/5000/7000 Type 50, 51, 52

# Plug-in Metal Base

# **Manifold Specifications**

			D-sub connector		Flat ribbon cable		Serial wiring			
	Model		F type	P type	PG type J type	PH type	S5 type (EX510)			
Manifold typ	е		Plug-in metal base							
SUP/EXH port type					Common SUP/EXH					
Valve station	All double wiring	9	2 to 12	stations	2 to 9 stations (J type: 2 to 8 stations)	2 to 4 stations	2 to 8 stations			
	All single wiring				2 to 12 stations	2 to 8 stations	2 to 12 stations			
Applicable connector			D-sub connector Conforming to MIL-C-24308		Flat ribbon cable connector with strain relief Conforming to MIL-C-83503					
			JIS-X-5101	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type				
Internal wiri	Internal wiring			Positive common, Negative common						
		SY3000	1/8							
	1(P), 3/5(E) port	SY5000		1/4						
		SY7000	3/8							
Port size 4(A),		SY3000	M5 x 0.8, 1/8 Ø 2 One-touch fitting, Ø 3.2 One-touch fitting, Ø 4 One-touch fitting, Ø 6 One-touch fitting Ø 1/8" One-touch fitting, Ø 5/32" One-touch fitting, Ø 1/4" One-touch fitting							
	4(A), 2(B) port	SY5000	1/8, 1/4 Ø 4 One-touch fitting, Ø 6 One-touch fitting, Ø 8 One-touch fitting Ø 5/32" One-touch fitting, Ø 1/4" One-touch fitting, Ø 5/16" One-touch fitting							
		SY7000	1/4 Ø 6 One-touch fitting, Ø 8 One-touch fitting, Ø 10 One-touch fitting, Ø 12 One-touch fitting Ø 1/4" One-touch fitting, Ø 5/16" One-touch fitting, Ø 3/8" One-touch fitting							
Enclosure (E	Based on IEC60529)			IP40 IP20						

# Type 50, 51, 52 Plug-in Metal Base Series SY3000/5000/7000

# Manifold Flow-rate Characteristics \*1)/Manifold Weight

Valve Seal Type: Rubber Seal

	Port	size			Valve flow-r	Weight: W [g] Note 2)					
			1→4	→A/B)	4/2→5/	/3 (A/E	3→E)	(n: stations)			
Model	1, 5, 3 (P, EA, EB)	4, 2 (A, B)	C [dm <sup>3</sup> /(s·bar)]	b	Q [L/min] (ANR) Note 3)	C [dm³/(s·bar)]	b	Q [L/min] (ANR) Note 3)	Fixed: C□	Replaceable: KC	
SS5Y3-50 (Side ported)	1/8	C6	1.1	0.19	262	1.1	0.15	256	39n + 247	43.5n + 247	
SS5Y3-51 (Bottom ported)	1/8 C6 1.2		1.2	0.31	307	1.2	0.14	278	41.5n + 251	48.5n + 251	
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	278	1.2	0.20	287	44n + 247		
SS5Y5-50 (Side ported)	<b>-50 (Side ported)</b> 1/4 C8 2.6 0.28 653	653	2.6	0.14	603	93n + 379	110n + 379				
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	709	2.8	0.20	671	93n + 413	113n + 413	
SS5Y5-52 (Top ported)	SS5Y5-52 (Top ported) 1/4		2.6 0.26		645	3.1 0.13		715	103n + 379		
SS5Y7-50 (Side ported)	3/8	C10	3.8	0.27	948	4.0	0.20	958	144n + 510	158n + 510	
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	1070	4.8	0.20	1150	150n + 549	172n + 549	
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	1123	4.9	0.24	1201	164n + 510		

Valve Seal Type: Metal Seal

valve Seal Type: Metal Seal												
	Port size			'	Valve flow-rat		Weight: W [g] Note 2)					
Mandal	4.5.0		1→4,	A/B)	4/2→5	/3 (A/E	3→E)	(n: stations)				
Model	1, 5, 3 (P, EA, EB)	4, 2 (A, B)	C [dm <sup>3</sup> /(s·bar)]	b	Q [L/min] (ANR) Note 3)	C [dm <sup>3</sup> /(s·bar)]	b	Q [L/min] (ANR) Note 3)	Fixed: C□	Replaceable: KC		
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	209	1.0	0.12	229	39n + 247	43.5n + 247		
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	241	1.1	0.10	250	41.5n + 251	48.5n + 251		
SS5Y3-52 (Top ported)	1/8	C6	1.1	1.1 0.15 256		1.1	0.14	255	44n + 247			
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	527	2.3	0.13	530	93n + 379	110n + 379		
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	595	2.5	0.16	586	93n + 413	113n + 413		
SS5Y5-52 (Top ported)	1/4	C8	2.4 0.18		568	2.6 0.12		596	103n + 379			
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	780	3.5	0.18	829	144n + 510	158n + 510		
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	863	4.0	0.16	937	150n + 549	172n + 549		
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	843	3.8	0.18	900	164n + 510			

<sup>\*</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C

<sup>\* 1)</sup> The value is for manifold base with 5 stations and individually operated 2-position type.

<sup>\* 2) &#</sup>x27;Weight: W' is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 15 for the appropriate number of stations.

<sup>\* 3)</sup> These values have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.


Type 50 Side Ported Type 51 **Bottom Ported** 

# Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

# Series SY3000/5000/7000

#### **How to Order Manifold**

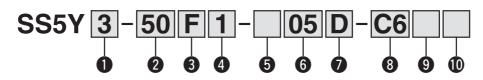

1 Series						
3	SY3000					
5	SY5000					
7	SY7000					


<b>2</b> Туре					
50 Side ported					
51	Bottom ported				
50R	Side ported, External pilot				

\*: External pilot is not available for the bottom ported type.



1: Upward	2: Lateral

### Connector type

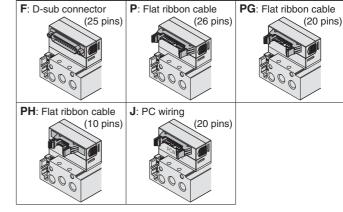


### Wiring type

	3 71
_	All double wiring*1
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a special order.

# How to Order Manifold Assembly

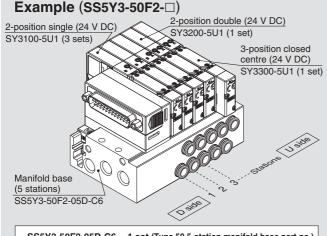

33313-30F2-03D-C0
\$\$5Y3-50F2-05D-C6 \(\) 1 set (Type 50 5-station manifold base part no.)  \$\$Y3100-5U1 \(\) 3 sets (2-position single part no.)  \$\$Y3200-5U1 \(\) 1 set (2-position double part no.)  \$\$Y3300-5U1 \(\) 1 set (3-position closed centre part no.)
The asterisk denotes the symbol for assembly.  Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 66 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

## 6 Valve stations

<b>F</b> : D-s	sub con	nector (25 pins)	P: Fla	at ribbon	cable (26 pins)	PG:	Flat ribbo	on cable (20 pins)
Symbol	Stations	Note	Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	::	double	:	:	double	:	:	double
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	single	:	:	single	:	:	single
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring
			_					

PH: Flat ribbon cable (10 pins)							
Symbol	Stations	Note	Symbol	Stations	Note		

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double	:	:	double
04	4 stations	wiring	08	8 stations	wiring
02	2 stations	All	02	2 stations	All
:	:	single		:	single
08	8 stations	wiring	12	12 stations	wiring

\*: This also includes the number of blanking plate assembly.

P. E port entry

	. ,
U	U side*1
D	D side*1*2
В	Both sides

- \*1: Plugs are mounted on the opposite
- side of the selected ports.

  \*2: Only D side is available for Type 51 (Bottom ported).

9 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

**1** Mounting

	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Consifer a lamana unil than	
:	:	Specify a longer rail than the standard length.	
D12	For 12 stations	tilo otalidala leligili.	

- \*: Only direct mounting is available for Type 51 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

8 A, B port size

Thread piping

-		r r J			
	Symbol	A, B port	SY3000	SY5000	SY7000
	M5	M5 x 0.8		_	_
	01	1/8	•	•	_
	02	1/4	_	•	•

One-touch fitting (Metric)

Symbol A, B port		cvanno	SY5000	CV7000			
ری		A, b port	313000	313000	317000		
	C2	Ø 2	•	_	_		
	C3	Ø 3.2	•	_	_		
Fixed	C4	Ø 4	•	•	_		50
iĚ	C6	Ø 6	•	•	_		
	C8	Ø 8	_	•	•		
	C10	Ø 10	_	_	•	Í	
	KC2	Ø 2	•	_	_	Type 50	Type 51
	КС3	Ø 3.2	•	_	_	(Side ported)	(Bottom ported)
ole .	KC4	Ø 4	•	•	_		
Replaceable	KC6	Ø 6	•	•	•		
plac	KC8	Ø 8	_	•	•		
Re	KC10	Ø 10	_	_	•		
	KC12	Ø 12	_	_	•		68
	<b>M</b> *1	Mixed sizes	•	•	•		
Ρ,	P, E port size (Thread piping)		1/8	1/4	3/8		

One-touch fitting (Inch)


	mbol	A, B port	SY3000	SY5000	SY7000		
	N1	Ø 1/8"	•	_	_		
5	N3	Ø 5/32"	•	•	_		
Fixed	N7	Ø 1/4"	•	•	_		95
ш	N9	Ø 5/16"	_	•	•		
	N11	Ø 3/8"	_	_	•		,
	KN1	Ø 1/8"	•	_	_	Type 50	Type 51
e	KN3	Ø 5/32"	•	•	_	(Side ported)	(Bottom ported)
Seal	KN7	Ø 1/4"	•	•	•		
Replaceable	KN9	Ø 5/16"	_	•	•	<b>1</b>	
Re	KN11	Ø 3/8"	_	_	•		
	<b>M</b> *1	Mixed sizes	•	•	•		
P,	P, E port size (Thread piping)			1/4	3/8		

\*1: When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.



### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

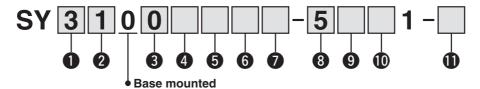

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3	3 3-position	Closed centre
4		Exhaust centre
5		Pressure centre
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> *1		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 3 Seal type

	-71
0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type
- \*: Back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

O i not imite opinion		
_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

-		71.
	_	Standard
	Т	With power saving circuit (Continuous duty type)
l		with power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### 8 Rated voltage


5	24 V DC
6	12 V DC

### Light/surge voltage suppressor and common specification

Symbol With light Surge voltage suppressor specification  R — — Non-polar  S — Positive common Negative common				
S — Positive common NS — Negative	Symbol	With light		
S — Positive common NS — Negative		_	_	
S — Positive common NS — NS — Negative	R	_		Non-polar
Z common Negative	U	•		
NS — Negative	S	_		Positive
- 3	Z	•		common
NZ common	NS	_		Negative
	NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

# Manual override

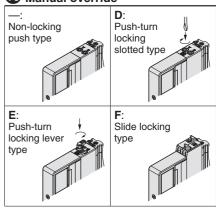

\*: Refer to page 31 for with the safety slide locking manual override.

### Type of mounting screw

- 71	
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket
  - manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 89 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Manifold Options


Plug-in Metal Base


Type 50/Side Ported **D-sub Connector** 


# Dimensions: Series SY3000

# 

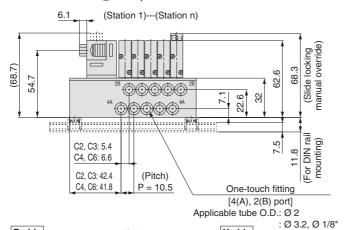


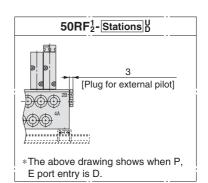

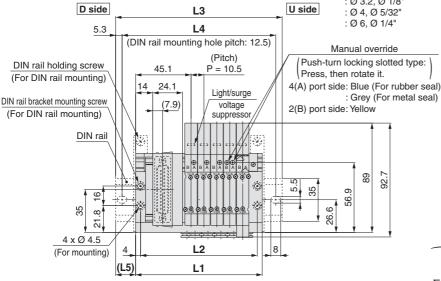

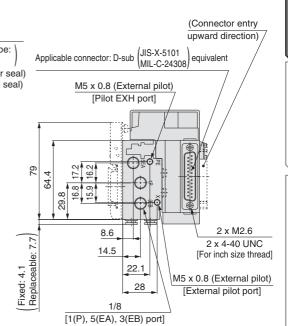

\*: These figures show the "SS5Y3-50F2-05B-C6".

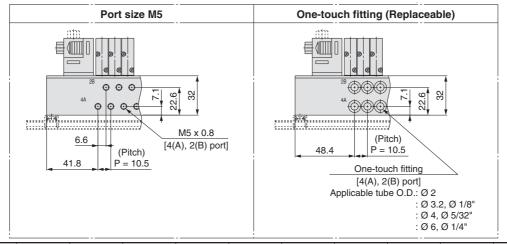


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Plug-in Type 50/Side Ported


Metal Base D-sub Connector

Dimensions: Series SY3000

SS5Y3-50(R) $F_2^1$ -Stations  $_{R}^{U}$ -01 $\square$ (D)

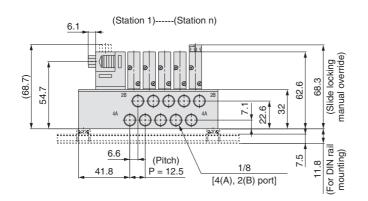

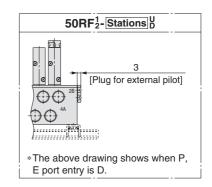

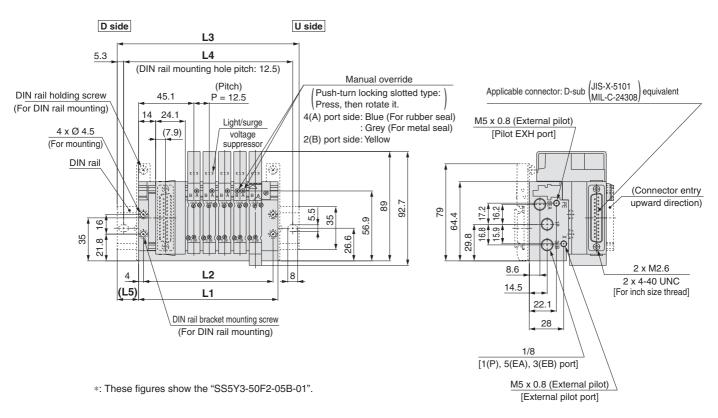

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5





Manifold Options



Type 50/Side Ported **D-sub Connector** 

Dimensions: Series SY5000

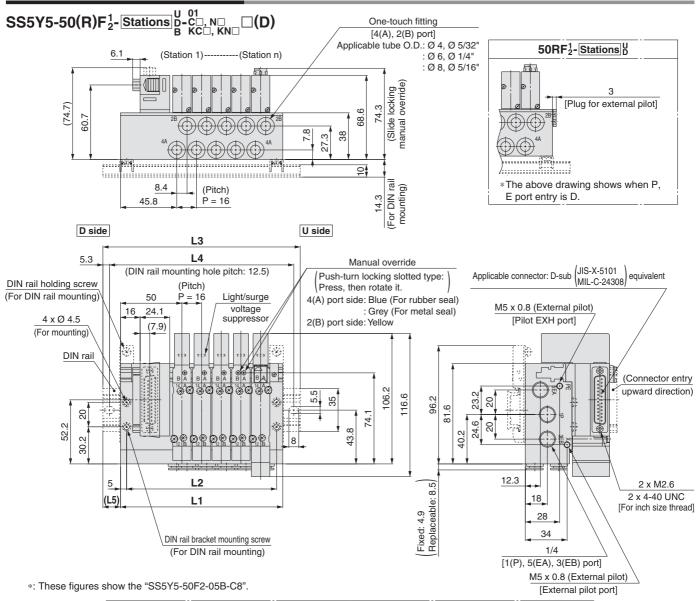

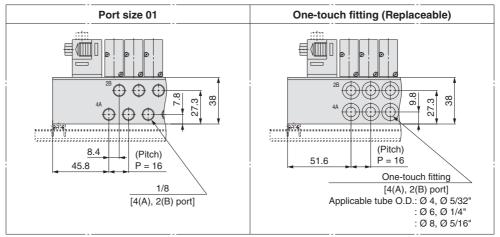


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Plug-in Metal Base Type 50/Side Ported


D-sub Connector

Dimensions: Series SY5000

SS5Y5-50(R) $F_2^1$ -Stations  $_{R}^{U}$ -02 $\square$ (D)

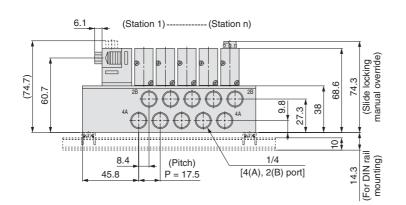

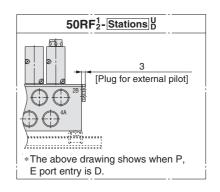

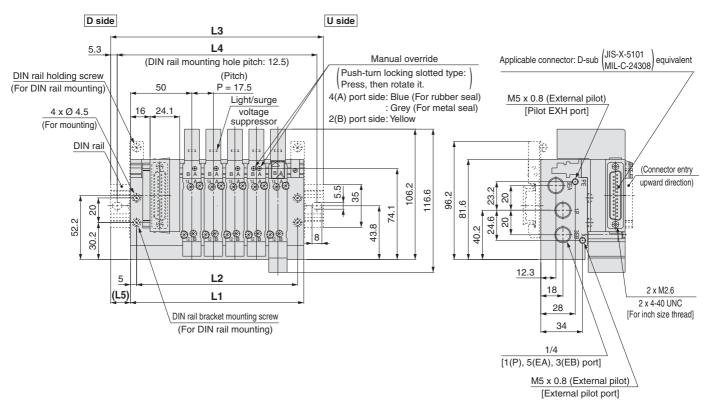


\*: These figures show the "SS5Y5-50F2-05B-02".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5



**Metal Base D-sub Connector** Dimensions: Series SY7000

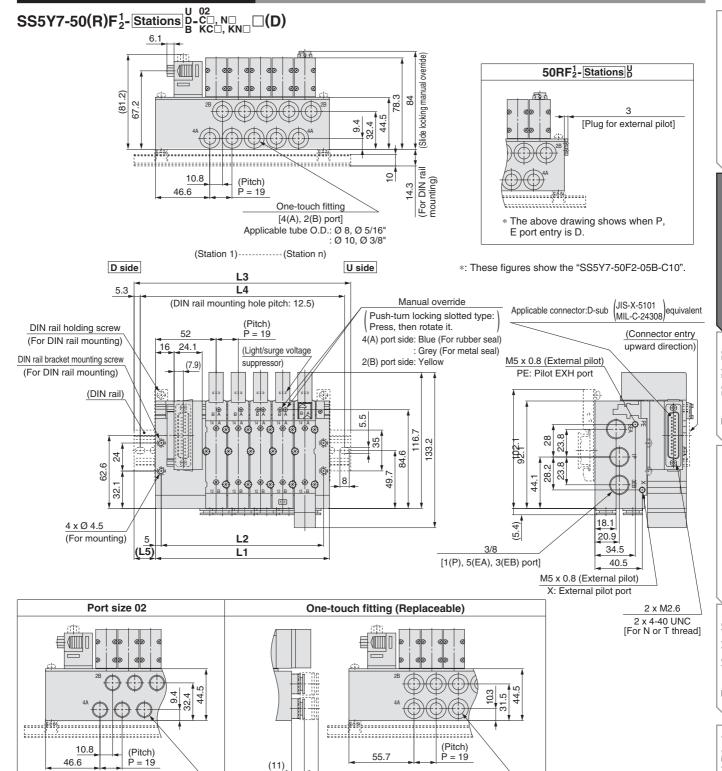

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

(22.9)

(For Ø 12)

[4(A), 2(B) port]

One-touch fitting

[4(A), 2(B) port]

Applicable tube O.D.: Ø 6, Ø 1/4"

: Ø 8, Ø 5/16"


: Ø 10, Ø 3/8" : Ø 12

Dimensions: Series SY3000

Plug-in Metal Base Type 50/Side Ported

Triangle mark

Flat Ribbon Cable

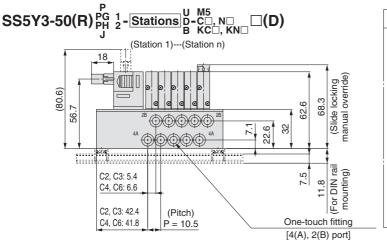


Applicable tube O.D.: Ø 2

50<sup>PG</sup> (20 pins) 50PH (10 pins) Triangle mark For PC wiring ⊕<u>₩</u> ⊕₩ Applicable connector: Applicable connector: 20 pins MIL type with strain relief 10 pins MIL type with strain relief (Conforming to MIL-C-83503) (Conforming to MIL-C-83503)

: Ø 3.2, Ø 1/8' : Ø 4, Ø 5/32' D side U side L3 : Ø 6, Ø 1/4" 5.3 L4 Manual override (DIN rail mounting hole pitch: 12.5) Push-turn locking slotted type: (Pitch) Press, then rotate it. DIN rail holding screw P = 10.545.1 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) 14 24.1 Light/surge : Grev (For metal seal) 4 x Ø 4.5 voltage 2(B) port side: Yellow (9.9)suppresso (For mounting) DIN rail 89 92.7 5.5 35 56.9 26.6 35 α 2 12 8 (L5) L1 DIN rail bracket mounting screw

(For DIN rail mounting)

Applicable connector: 26 pins MIL type with strain relief (Conforming to MIL-C-83503) M5 x 0.8 (External pilot) Triangle mark [Pilot EXH port] (Connector entry 79 upward direction) 64.4 16.8 5.9 29.8 8.6 M5 x 0.8 (External pilot) Fixed:4.1
Replaceable:7.7 [External pilot port] 14.5 1/8 22.1 [1(P), 5(EA), 3(EB) port] 28

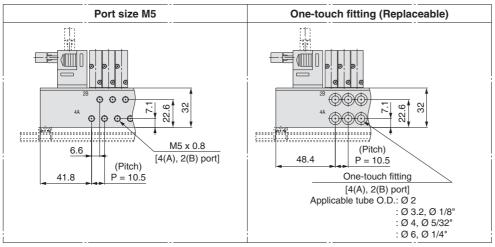

- \*: These figures show the "SS5Y3-50P2-05B-C6"
- \*: Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.


50R <sup>P□</sup> <sub>J</sub> <sup>1</sup> <sub>2</sub> -Stations <sup>U</sup> <sub>D</sub>
[Plug for external pilot]
*The above drawing shows when P, E port entry is D.


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Dimensions: Series SY3000


Metal Base

# SS5Y3-50(R) $_{PH}^{PG}$ 1-Stations $_{B}^{U}$ -01 $\square$ (D)

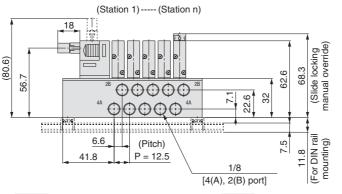

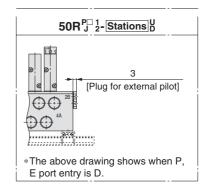

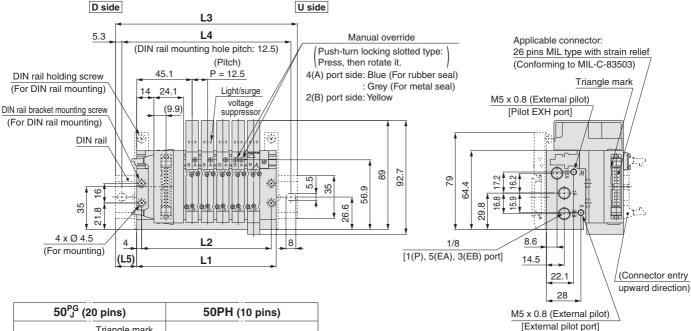

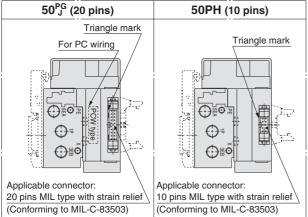


- \*: These figures show the "SS5Y3-50P2-05B-01".
- \*: Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5


Plug-in Metal Base Type 50/Side Ported

Flat Ribbon Cable

Dimensions: Series SY5000

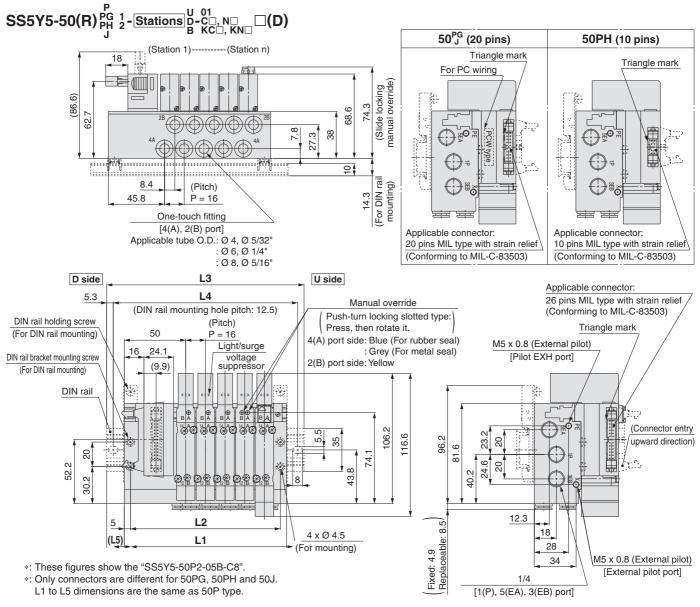

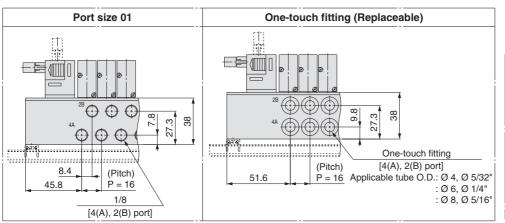

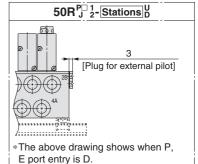



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Valve


Dimensions: Series SY5000




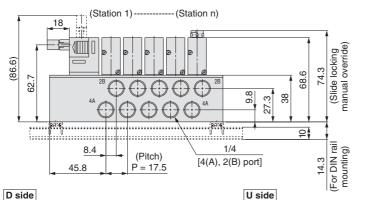

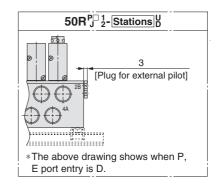

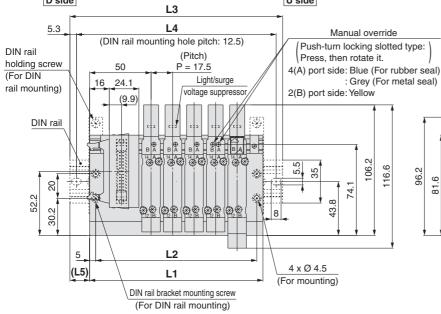

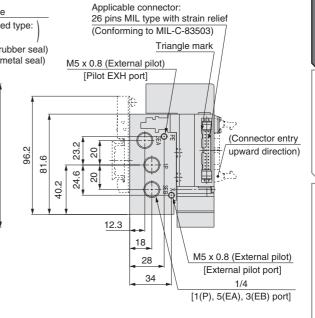

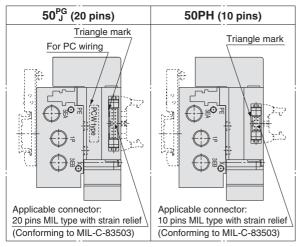


- \*: These figures show the "SS5Y5-50P2-05B-02".
- \*: Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Dimensions: Series SY7000


Plug-in Metal Base


Type 50/Side Ported Flat Ribbon Cable

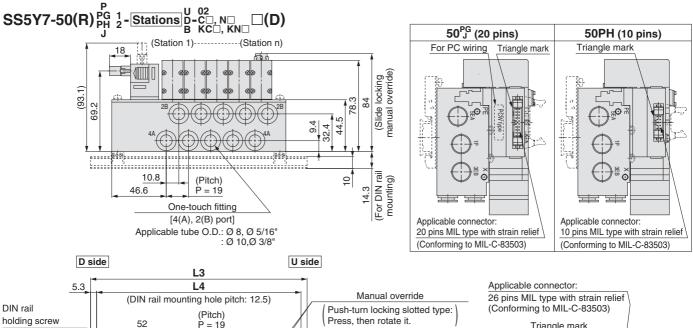

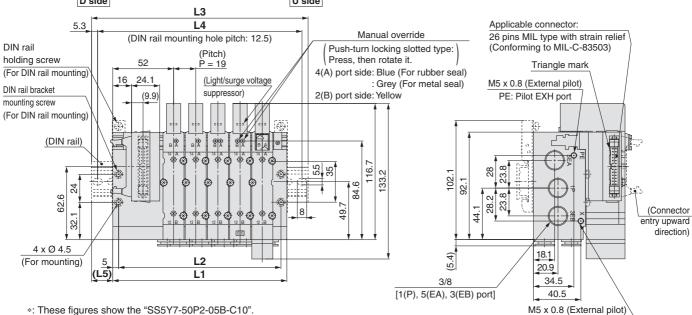

\*: These figures show the "SS5Y7-50P2-05B-C10".

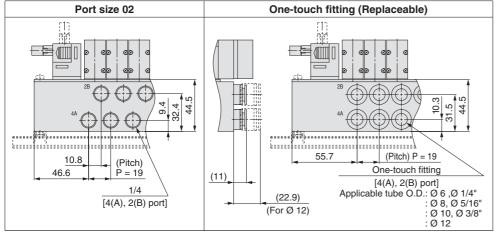

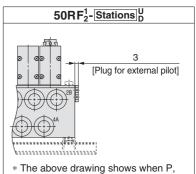

X: External pilot port

E port entry is D.


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
1.5	15.5	19.5	15.5	19.5	15	10	15	1Ω	1/15	17.5	1/15


Plug-in Metal Base

Type 51/Bottom Ported

D-sub Connector

Dimensions: Series SY3000

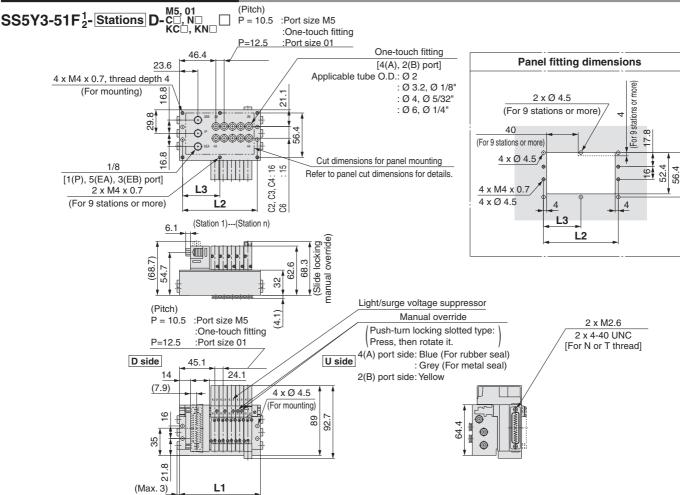

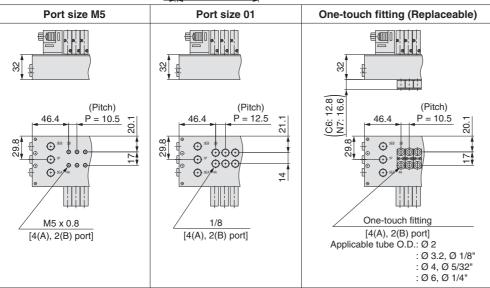

\*: These figures show the "SS5Y3-51F2-05D-C6".

Port Size M5, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

#### Port Size 01


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

Plug-in Metal Base

Type 51/Bottom Ported

Dimensions: Series SY5000

**D-sub Connector** 

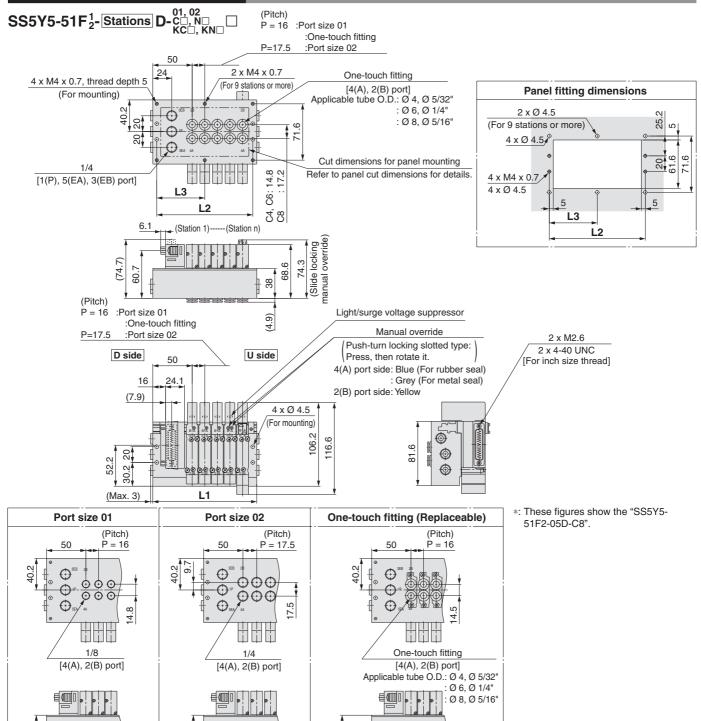

	_			
Port Size 01.	C∐.	N∐.	KC∐.	KN⊟

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3		_	_	_	_	_	_	93	101	109	117

38


15.5)


#### Port Size 02


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8


Dimensions: Series SY7000




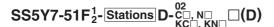


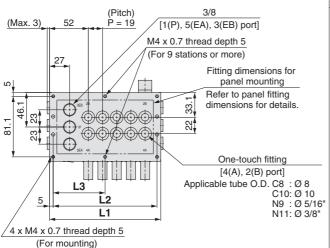


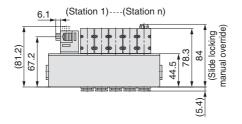

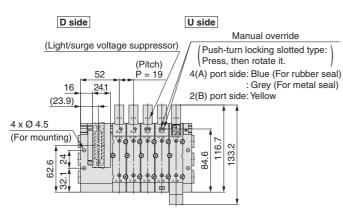

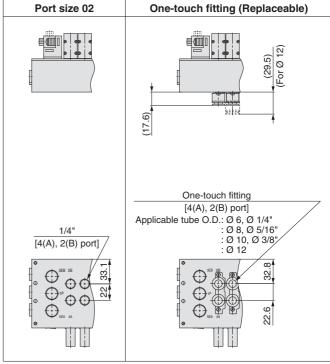

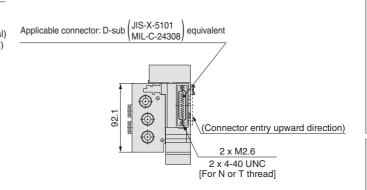

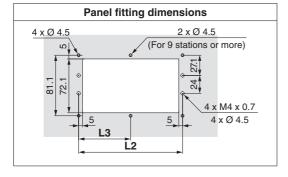


\*: These figures show the "SS5Y7-51F2-05D-C10".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	1	107.5	117	126.5	136

Plug-in Metal Base Type 51/Bottom Ported

Flat Ribbon Cable



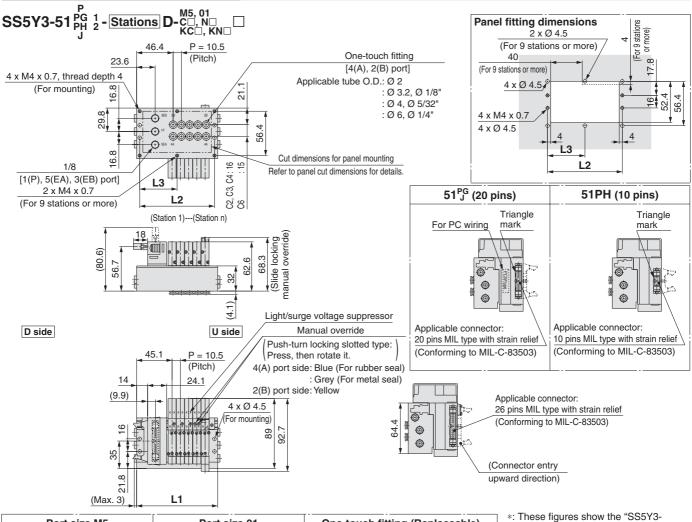

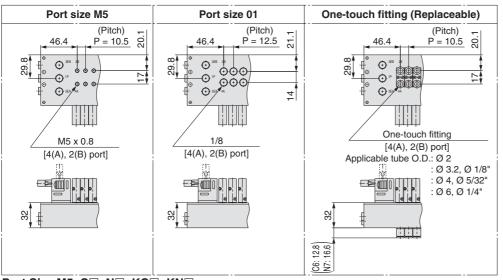

\*: These figures show the "SSSY3-51P2-05D-C6".

Port Size I	15. C	:□. N□.	KC□.	$KN\square$

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

#### Port Size 01

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

180

170

8

193.5

183.5

196

186

93

9

201

100.5

212

202

101

10

228.5

218.5

109.3

228

218

109


11

246

236

118

Valve

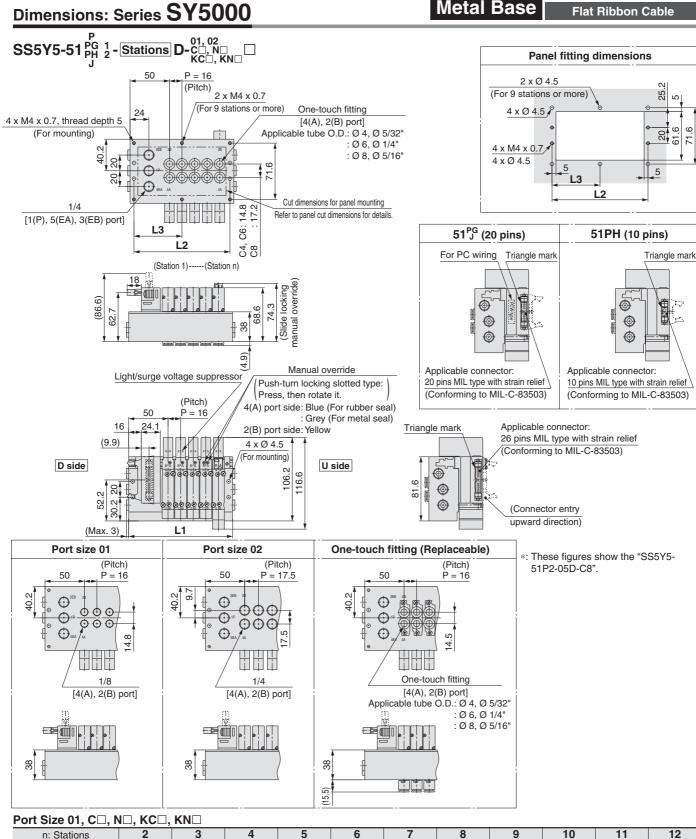

L1

L2

L3

L2

L3

Port Size 02 n: Stations 100

90

3

106

96

116

106

4

123.5

113.5

132

122

5

141

131

148

138

6

158.5

148.5

**SMC** 

164

154

176

166

84

74

2

88.5

78.5

244

234

117

12

263.5

253.5


126.8


Plug-in Metal Base Type 51/Bottom Ported


Flat Ribbon Cable


Dimensions: Series SY7000




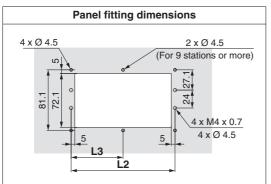


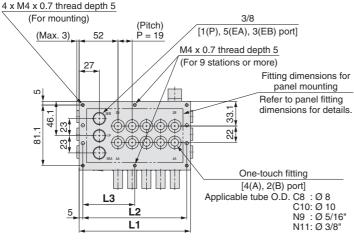

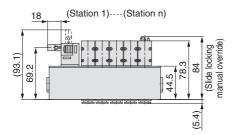


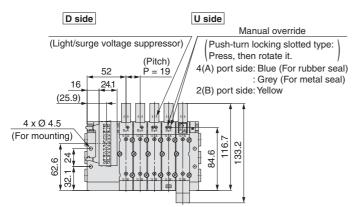

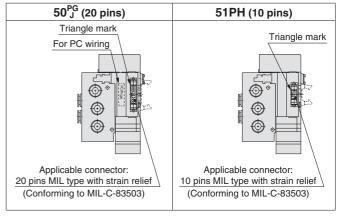

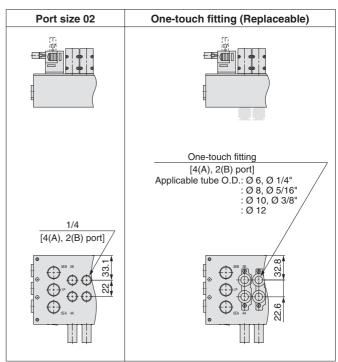

\*: These figures show the "SS5Y7-51P2-05D-C10".

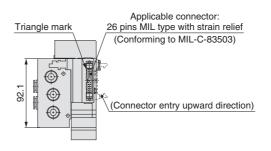

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

# Plug-in Metal Base


D-sub Connector | Flat Ribbon Cable | PC Wiring |

Type 52 Top Ported

# Series SY3000/5000/7000




#### **How to Order Manifold**

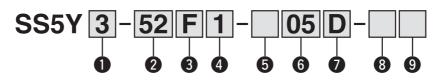

#### Series SY3000 SY5000 SY7000

#### 2 Type 52 Top ported **52R** Top ported, External pilot

4 Connector entry direction

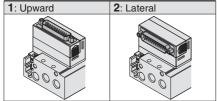


**5** Wiring type

_	All double wiring*1
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations. Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a

## **How to Order Manifold Assembly**

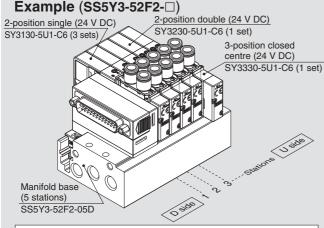


SS5Y3-52F2-05D ....... 1 set (Type 52 5-station manifold base part no.) \*SY3130-5U1-C6...... 3 sets (2-position single part no.) \*SY3230-5U1-C6...... 1 set (2-position double part no.) \*SY3330-5U1-C6------ 1 set (3-position closed centre part no.) The asterisk denotes the symbol for assembly.

• The valve arrangement is numbered as the 1st station from the D side.

Prefix it to the part numbers of the valve etc.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

### 3 Connector type

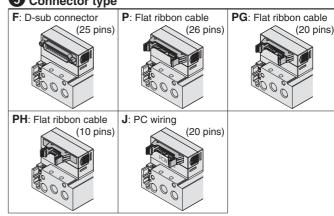

#### 6 Valve stations

<b>F</b> : D-	F: D-sub connector (25 pins) P: Flat ribbon cable (26 pins) PG: Flat ribbon cable (20 pins)							
Symbol	Stations	Note	Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	double	:	:	double	:	:	double
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	single	:	:	single	:	:	single
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring

<b>PH</b> : Flat ribbon cable (10 pins)				<b>J</b> : PC wiring (20 pins)			
Symbol	Stations	Note		Symbol	Stations	Note	
02	2 stations	All		02	2 stations	All	
:	:	double		:	:	double	
04	4 stations	wiring		08	8 stations	wiring	
02	2 stations	All		02	2 stations	All	
:	:	single		:	:	single	
80	8 stations	wiring		12	12 stations	wiring	

\*: This also includes the number of blanking plate assembly.

#### P, E port entry U side\*1 U D side\*1 Both sides

\*1: Plugs are mounted on the opposite side of the selected ports.

8 Thread type				
_	Rc			
00F	G			
00N	NPT			
00T	NPTF			


### 9 Mounting

	<u> </u>				
_	Direct mounting				
D	DIN rail mounting (With DIN rail)				
D0	DIN rail	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	Chaoifu a langar rail than			
:	:	Specify a longer rail than the standard length.			
D12	For 12 stations	lile standard length.			

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

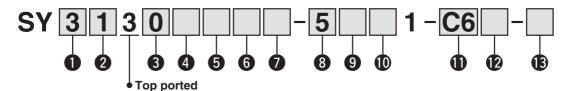

### Series

3	SY3000
5	SY5000
7	SY7000

## 2 Type of actuation

<u> </u>		
1	2-position	Single
2	2-position	Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> *1		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 3 Seal type

_		71	
0		Rubber seal	
	1	Metal seal	

### 4 Pilot type

_	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

_	None	
Н	Built-in	

- \*: Only rubber seal type
- \*: Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

### Coil type

Och type					
— Standard					
т	With power saving circuit				
	(Continuous duty type)				

- \*: Be sure to select the power saving circuit type when a valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage


<u> </u>						
5	24 V DC					
6	12 V DC					

# Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage	Common
- /	True light	suppressor	specification
_	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

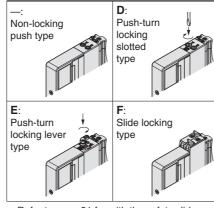

\*: Refer to page 31 for with the safety slide locking manual override.

# A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2		_	_
C3	Ø 3.2		_	_
C4	Ø 4	•	•	
C6	Ø 6	•	•	•
C8	Ø 8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•
		•		

#### One-touch fitting (Inch)

	3 (			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	_	_
N3	Ø 5/32"	•		_
N7	Ø 1/4"	•	•	
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•

#### 12 Thread type

_	Rc					
F	G					
N	NPT					
Т	NPTF					

\*: Only — is available for M5.

### 13 Type of mounting screw


<u> </u>	oo or mounting oor on
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 89 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

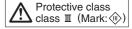





Plug-in Metal Base Type 52/Top Ported

D-sub Connector, Flat Ribbon Cable

Dimensions: Series SY3000

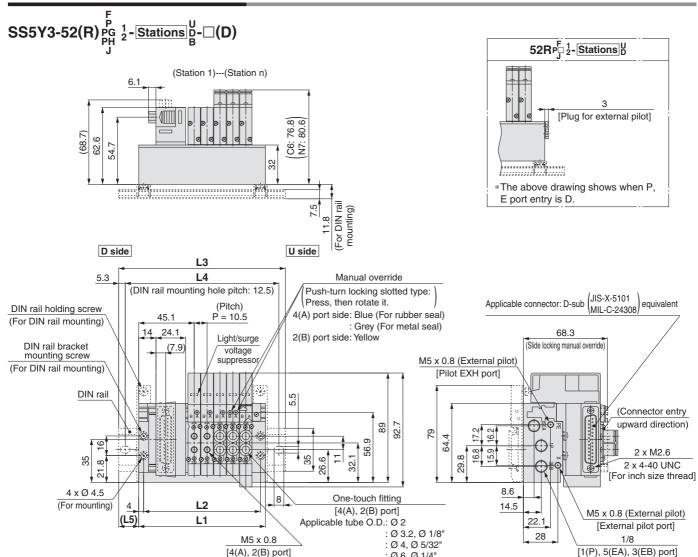

\*: These figures show the "SS5Y3-52F2-05B".

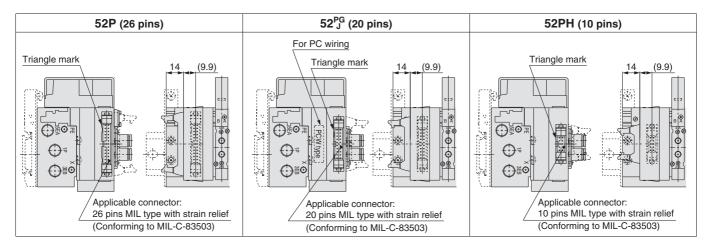

: Ø 6, Ø 1/4"


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

[1(P), 5(EA), 3(EB) port]

Type 52/Top Ported Plug-in Metal Base

**D-sub Connector, Flat Ribbon Cable** 


Dimensions: Series SY5000

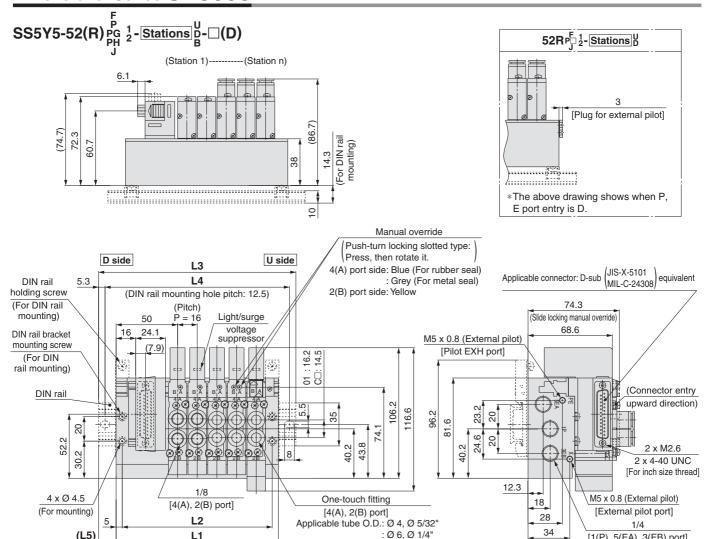

\*: These figures show the "SS5Y5-52F2-05B".

L1

(L5)

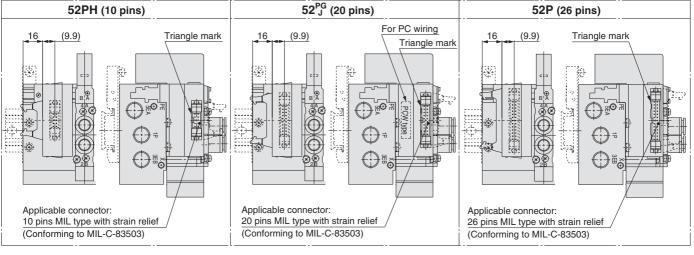

: Ø 8, Ø 5/16"


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Dimensions: Series SY7000


Plug-in **Metal** Base Type **52/Top** Ported


D-sub Connector, Flat Ribbon Cable

SS5Y7-52(R) PG 1/2-Stations D-□(D)

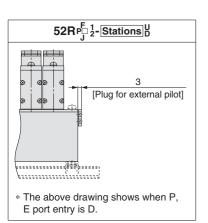

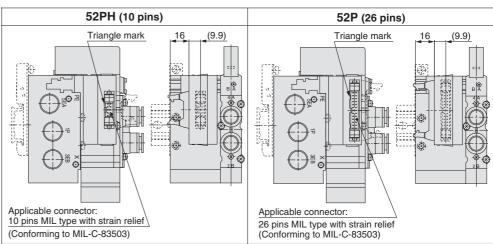

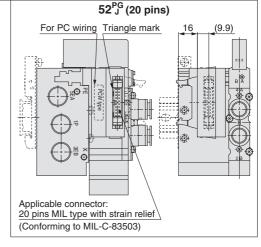


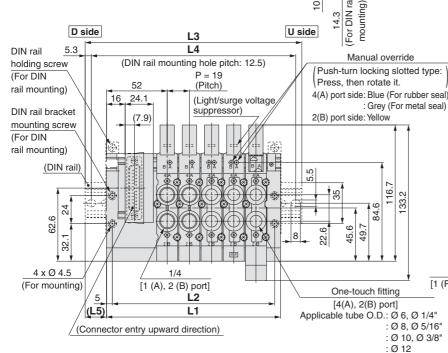

<u> </u>	Applicable connector: D-sub	(JIS-X-5101 MIL-C-24308) equivalent
	84	
l)	(Slide locking manual override)	
)	M5 x 0.8 (External pilot)	78.3
	PE: Pilot EXH port	
	<b>†</b>	
	0 0	
	102.1 92.1 28 23.8	
	28.2 23.8	×
	3/8	18.1
P),	5 (EA), 3 (EB) port]	20.9
		34.5 \ \ 2 x M2.6 \
		40.5 2 x 4-40 UNC [For N or T thread]
	M5 x 0.8 (	External pilot)
		nal pilot port


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

### **Electrical Wiring Specifications**

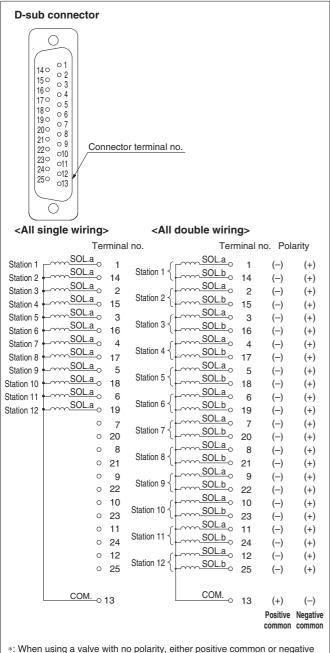

### Cable Assembly

# AXT100-DS25-030 (N) [IP40 compliant] 050 —: Metric size N: Inch size

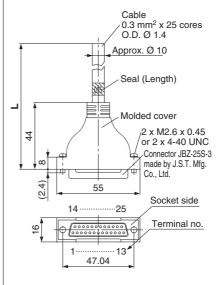

#### Lead wire colour for D-sub connector cable assembly by terminal number

Terminal no.	Lead wire colour	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Grey	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Grey	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Grey	Red
24	Black	White
25	White	None

#### D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	0-1-1-
3 m		Cable 0.3 mm <sup>2</sup> x 25 cores
5 m	AXT100-DS25-050	0.011111

- \*: When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308
- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above are also available. Please contact SMC for details.

#### **Electrical characteristics**

Item	Property			
Conductor resistance $\Omega$ /km, 20 °C	65 or less			
Voltage limit V, 1 minute, AC	1000			
Insulation resistance MΩ/km, 20 °C	5 or more			

\*: The minimum bending radius of the D-sub connector cable is 20 mm.


#### **Connector Manufacturers' Example**

- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

One-touch Fittings/ Plug Assembly Part No.

70

### **Electrical Wiring Specifications**

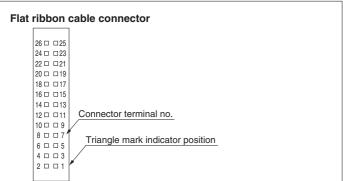


P: Flat ribbon cable (26 pins)					
<all single<="" th=""><th>wiring&gt;</th><th><aii< th=""><th>double wiring</th><th>&gt;</th><th></th></aii<></th></all>	wiring>	<aii< th=""><th>double wiring</th><th>&gt;</th><th></th></aii<>	double wiring	>	
	Terminal	no.	Termina	I no. Pol	arity
Station 2	SOL.a 1 SOL.a 2 SOL.a 3	Station 1	SOL.a 1 SOL.b 2 SOL.a 3	(-) (-)	(+) (+)
Station 4	SOL.a 4	Station 2	SOL.b 4	( <del>-</del> )	(+) (+)
Station 6	SOL.a 6	Station 3	SOL.b 6	(–) (–)	(+) (+)
Station 8	SOL.a 7	Station 4	SOL.a 7	(–) (–)	(+) (+)
Station 10	<u>SOL.a</u> ∘ 9	Station 5 {	SOL.a 9 SOL.b 10	(-) (-)	(+) (+)
Station 11 Station 12	SOL.a ○ 11 SOL.a ○ 12	Station 6	SOL.a 11 SOL.b 12	(-) (-)	(+) (+)
	∘ 13 ∘ 14	Station 7	SOL.a 13 SOL.b 14	(–) (–)	(+) (+)
	∘ 15 ∘ 16	Station 8	SOL.b 15	(-) (-)	(+) (+)
	∘ 17 ∘ 18	Station 9	SOL.b 18	(-) (-)	(+) (+)
	∘ 19 ∘ 20	Station 10 {	SOL.b 19	(-)	(+) (+)
	∘ 21 ∘ 22	Station 11	SOL.a 21 SOL.b 22	(-)	(+) (+) (+)
	∘ 23 ∘ 24	Station 12 {	SOL.a 23 SOL.b 24	(-) (-)	(+) (+) (+)
	COM. COM. ○ 25 COM. ○ 26		COM. 25 COM. 26	(+) (+)	(-) (-)
				Positive common	Negative common

	PG: Fla	t ribbon cable	e (20 pins)		
<all single<="" th=""><th>wiring&gt;</th><th><all doub<="" th=""><th>ole wiring&gt;</th><th></th><th></th></all></th></all>	wiring>	<all doub<="" th=""><th>ole wiring&gt;</th><th></th><th></th></all>	ole wiring>		
	Terminal	no.	Terminal r	no. Pola	arity
Station 1 Station 2 Station 3 Station 4 Station 5 Station 6 Station 7 Station 8 Station 9 Station 10	SOLa 0 1 SOLa 0 2 SOLa 0 3 SOLa 0 4 SOLa 0 6 SOLa 0 7 SOLa 0 7 SOLa 0 8 SOLa 0 9 SOLa 0 10	Station 1 { Station 2 { Station 3 { Station 4 { Station 5 {	SOLa 2 SOLb 2 SOLa 3 SOLb 4 SOLa 5 SOLb 6 SOLa 7 SOLb 7 SOLb 8 SOLa 9 SOLb 10	(-) (-) (-) (-) (-) (-) (-) (-)	(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
Station 11 Station 12	SOL.a 11 SOL.a 12	Station 6 {	SOL.a 11 SOL.b 12 SOL.a 13	(-) (-)	(+) (+)
	∘ 13 ∘ 14 ∘ 15	Station 7 {	SOL.a • 13 SOL.b • 14 SOL.a • 15	(-) (-)	(+) (+) (+)
	o 16 o 17	Station 8	SOL.b ○ 16 SOL.a ○ 17	(-) (-)	(+) (+)
	∘ 18	Station 9 {	SOL.b ○ 18	(–)	(+)
	COM. o 19 COM. o 20		COM. COM. ○ 20	(+) (+)	(-) (-)
				Positive common	Negative common

\*: When using a valve with no polarity, either positive common or negative common can be used.

#### **Cable Assembly**

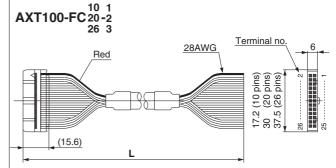

#### Flat ribbon cable connector assembly

Cable	Assembly part no.			
length (L)	26 pins	20 pins	10 pins	
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1	
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2	
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3	

- \*: When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above are also available. Please contact SMC for details.

#### **Connector Manufacturers' Example**

- HIROSE ELECTRIC CO., LTD. Japan Aviation Electronics Industry, Limited
- 3M Japan Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited
- Oki Electric Cable Co., Ltd.

common common

#### PH: Flat ribbon cable (10 pins) <All single wiring> <All double wiring> Terminal no. Terminal no. Polarity SOL.a ○ 1 SOL.a ○ 1 Station 1 SOL.a SOL.b o Station 1 Station 2 SOL.a SOL.a Station 3 3 3 SOL.a Station 2 SOL.b Station 4 4 4 SOL.a SOL.a Station 5 5 (+) SOL.a o SOL.b o Station 3 Station 6 SOL.a SOL.a o Station 7 (+) SOL.a o 8 Station 4 SOL.b Station 8 COM. ∘ 9 <u>COM.</u> ∘ 9 (+) (-)COM. ○ 10 <u>COM.</u> ∘ 10 (+) Positive Negative


J: Flat ribbon cable (20 pins) PC wiring					
<all single="" wiring=""></all>	<all double="" th="" wiring<=""><th>g&gt;</th></all>	g>			
Termir SOL a		I no. Polarity			
Station 1	Station 7 {	(-) (+) (-) (-) (+) (-) (-) (+) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (+) (-) (-) (-) (+) (-) (-) (-) (-) (-) (-) (-) (-) (-) (-			
COM.	COM. ○ 2 COM. ○ 1	(+) (-) (+) (-)			
		Positive Negative common			

# Plug-in Metal Base EX510

# Series SY3000/5000/7000

 $\epsilon$ 

#### **How to Order Manifold**

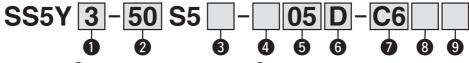

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 3 SI Unit output polarity

_		_
_	Positive common	
N	Negative common	

#### 2 Type

50	Side ported
51	Bottom ported
50R	Side ported, External pilot

\*: External pilot is not available for the bottom ported type.

#### **5** Valve stations

	Symbol	Stations	Note	Symbol	Stations	Note
	02	2 stations	All double	02	2 stations	All single
	:	:		:	:	
[	80	8 stations	wiring	12	12 stations	wiring

1: Plugs are mounted on the opposite side of the selected ports.

\*2: Only D side is available for Type 51

(Bottom ported).

\*: This also includes the number of blanking plate assembly.

# 4 Wiring type

_	All double wiring*1
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a special order.

### A, B port size

6 P, E port entry

#### Thread piping

В

Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

D side\*1\*2

Both sides

#### One-touch fitting (Metric)

		3 (					
Sy	/mbol	A, B port	SY3000	SY5000	SY7000		
	C2	Ø2	•	_	_		
	<b>C</b> 3	Ø 3.2	•	_	_		
eq	C4	Ø 4	•	•	_		5Q
Fixed	C6	Ø6	•	•	_		
	C8	Ø8	_	•	•		
	C10	Ø 10	_	_	•		
	KC2	Ø2	•	_	_	Type 50	Type 51
	КС3	Ø 3.2	•	_	_	(Side ported)	(Bottom ported)
e	KC4	Ø 4	•	•	_		
Replaceable	KC6	Ø6	•	•	•		.99.
plac	KC8	Ø8	_	•	•		
Re	KC10	Ø 10	_	_	•		
	KC12	Ø 12	_	_	•		
	M*1	Mixed sizes	•	•	•		
P,	E port s	size (Thread piping)	1/8	1/4	3/8		

#### One-touch fitting (Inch)

Sy	/mbol	A, B port	SY3000	SY5000	SY7000		
	N1	Ø 1/8"	•	_	_		
_	N3	Ø 5/32"	•	•	_		
Fixed	N7	Ø 1/4"	•	•	_		
ш	N9	Ø 5/16"	_	•	•		30°
	N11	Ø 3/8"	_	_	•		
	KN1	Ø 1/8"	•	_	_	Type 50	Type 51
<u>e</u>	KN3	Ø 5/32"	•	•		(Side ported)	(Bottom ported)
eplaceable	KN7	Ø 1/4"	•	•	•		
plac	KN9	Ø 5/16"	_	•	•		
Be	KN11	Ø 3/8"	_	_	•		
	M*1	Mixed sizes	•	•	•		
P, E port size (Thread piping)		1/8	1/4	3/8			

\*1: When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

#### **How to Order Manifold Assembly**

Example (SS5Y3-50S5	5-□)
2-position single (24 V DC) SY3100-5U1 (3 sets)	2-position double (24 V DC) SY3200-5U1 (1 set)
010100 301 (0 30.5)	3-position closed centre (24 V DC)
	SY3300-5U1 (1 set)
	COO September (3 step
	0
Manifold base (5 stations)	Sales ?
SS5Y3-50S5-05D-C6 1 set (	Type 50 5-station manifold base part no.)

SS5Y3-50S5-05D-C6 ··· 1 set (Type 50 5-station manifold base part no.)

\*SY3100-5U1 ··············· 3 sets (2-position single part no.)

\*SY3200-5U1 ··············· 1 set (2-position double part no.)

\*SY3300-5U1 ·············· 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 84. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

8 Thread type

	71
_	Rc
F	G
N	NPT
Т	NPTF

9 Mounting


_	Direct mounting				
D	DIN rail mounting				
	(With DIN rail)				
D0	DIN rail mounting				
DU	(Without DIN rail)				
D3	For 3 stations	Consider a language soil thou			
:	:	Specify a longer rail than the standard length.			
D12	For 12 stations	the standard length.			

- \*: Only direct mounting is available for Type 51 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX510 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. Please download the Operation Manual via SMC website, http://www.smc.eu

#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

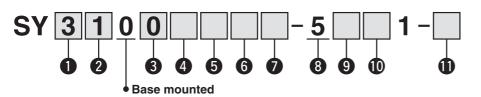

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	O position	Single				
2	2-position	Double				
3		Closed centre				
4	3-position	Exhaust centre				
5		Pressure centre				
<b>A</b> *1	4	N.C./N.C.				
B*1	4-position dual 3-port	N.O./N.O.				
C*1	duai 5-port	N.C./N.O.				

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

9 000	ai typo
0	Rubber seal
1	Metal seal

#### Pilot type

<u> </u>	or typo	
<b>—</b>	Internal pilot	
R	External pilot	

#### Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type
- \*: Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

_	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage

24 V DC


#### 9 Light/surge voltage suppressor and common specification

With light	Surge voltage suppressor	Common specification	
_		Non-polar	
•		14011-polai	
_		Positive common	
•	_	FOSILIVE COMMINON	
_		Magativa samman	
•		Negative common	
	With light  —  —  —  —  —  —  —  —  —  —  —  —		

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit output polarity is (positive common).

Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).

# Manual override

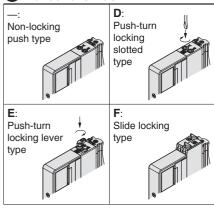

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw


-	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 89 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

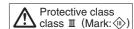

Plug-in **Metal** Base Type 50/Side Ported
EX510

Dimensions: Series SY3000

65.6

# SS5Y3-50(R)S5 - Stations D - C - N - C

(Station 1)---(Station n)

22.6

68.3

(Silide locking manual override)


50RS5 □- Stations 

3
[Plug for external pilot]


\*The above drawing shows when P,

E port entry is D.

C2, C3: 5.4 C4, C6: 6.6 [Pitch] Applicable tube O.D.: Ø 2 : Ø 3.2, Ø 1/8" : Ø 4, Ø 5/32" : Ø 6, Ø 1/4"

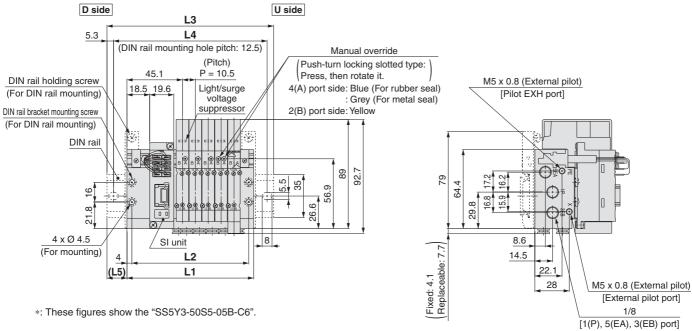

(For DIN rail mounting)

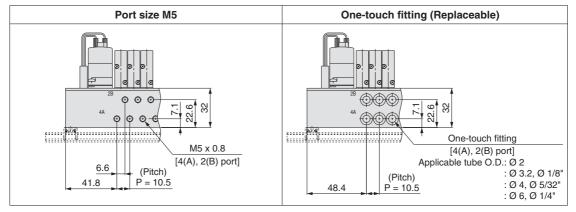


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Plug-in Metal Base


Type 50/Side Ported EX510

Dimensions: Series SY3000

# SS5Y3-50(R)S5 $\square$ -Stations $\stackrel{\text{U}}{\stackrel{\text{P}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}}{\stackrel{\text{D}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}}{\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}\stackrel{\text{D}}}{\stackrel{\text{D}}}}\stackrel{\text{D}}}$

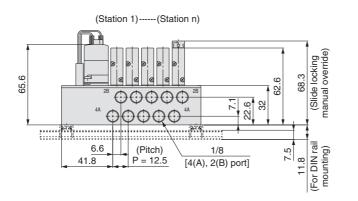

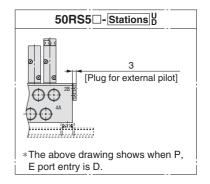

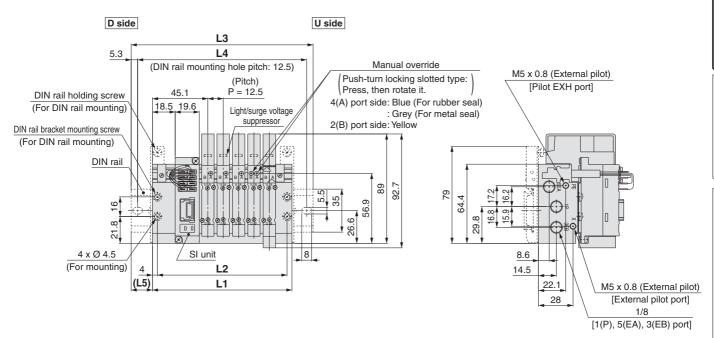

\*: These figures show the "SS5Y3-50S5-05B-01".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5


Plug-in **Metal** Base


Type 50/Side Ported EX510


Dimensions: Series SY5000

# SS5Y5-50(R)S5 - Stations D-C-, N- CD

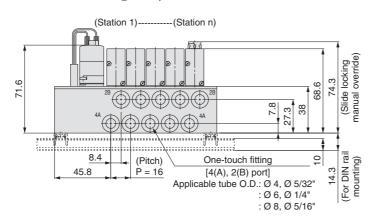

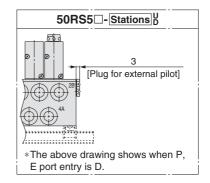

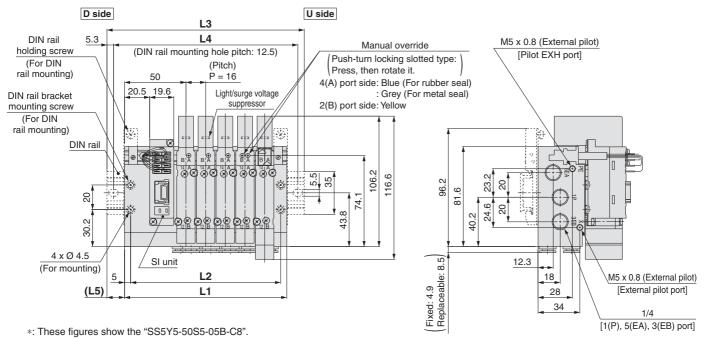

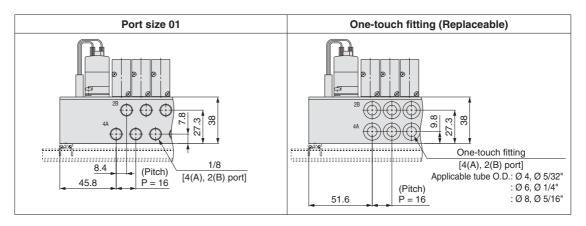


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Plug-in Type 5


Type 50/Side Ported EX510

# Dimensions: Series SY5000

# SS5Y5-50(R)S5 $\square$ -Stations $_{R}^{U}$ -02 $\square$ (D)

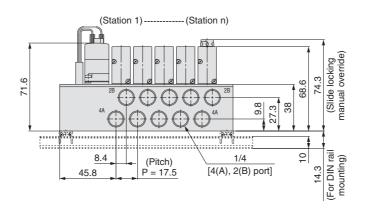

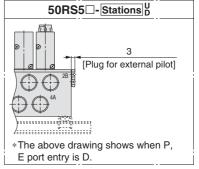

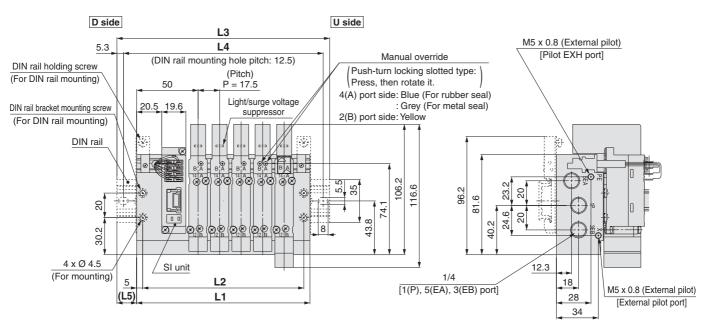


\*: These figures show the "SS5Y5-50S5-05B-02".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Dimensions: Series SY7000


Plug-in Metal Base Type 50/Side Ported **EX510** 




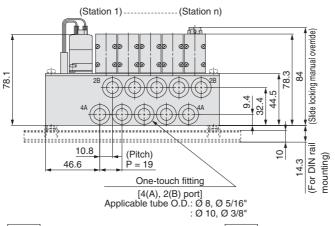

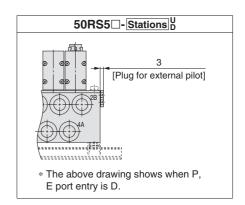

\*: These figures show the "SS5Y7-50S5-05B-C10".

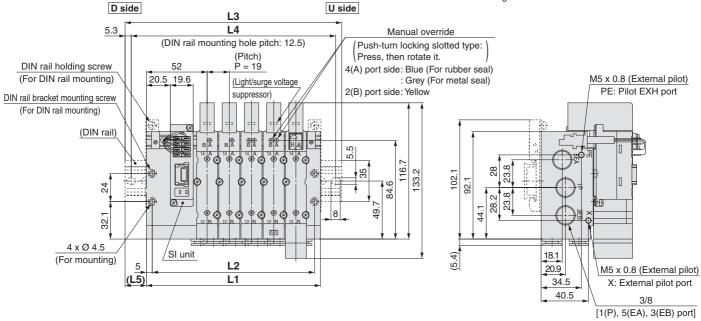

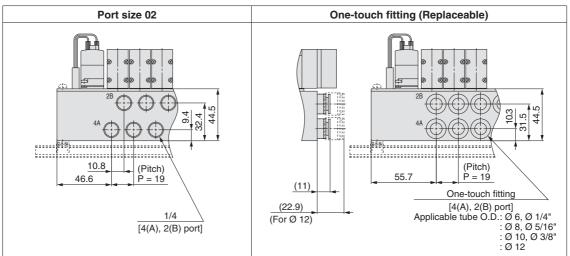

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Plug-in **Metal** Base

4 x M4 x 0.7

4 x Ø 4.5

Type 51/Bottom Ported **EX510** 

(For 9 stations or more)

52.4

56.4

16


4

L2

# Dimensions: Series SY3000




65.6

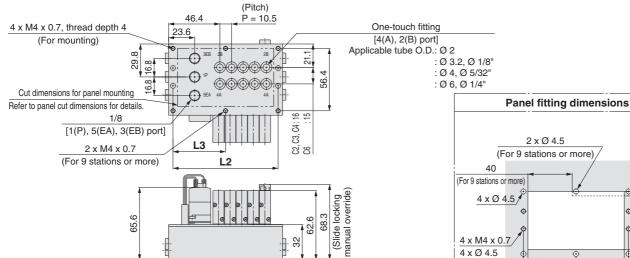


62.6 68.3

32

(Station 1) ---(Station n)

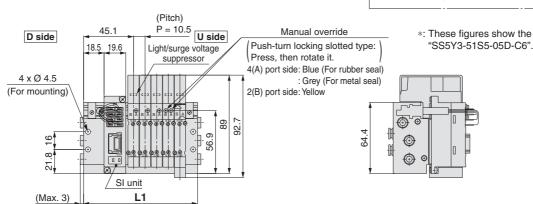

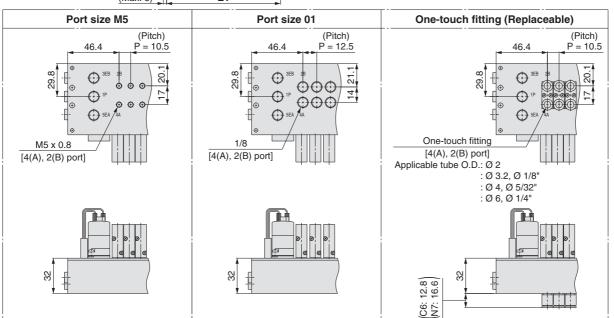

Port Size M5, C□, N□, KC□, KN□											
n: Station	s <b>2</b>	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3		_	_	_			_	68.5	73.8	79	84.3


Port S	ize u	1									
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3		_				_		77.8	84	90.3	96.5

Plug-in **Metal** Base

Type 51/Bottom Ported

EX510



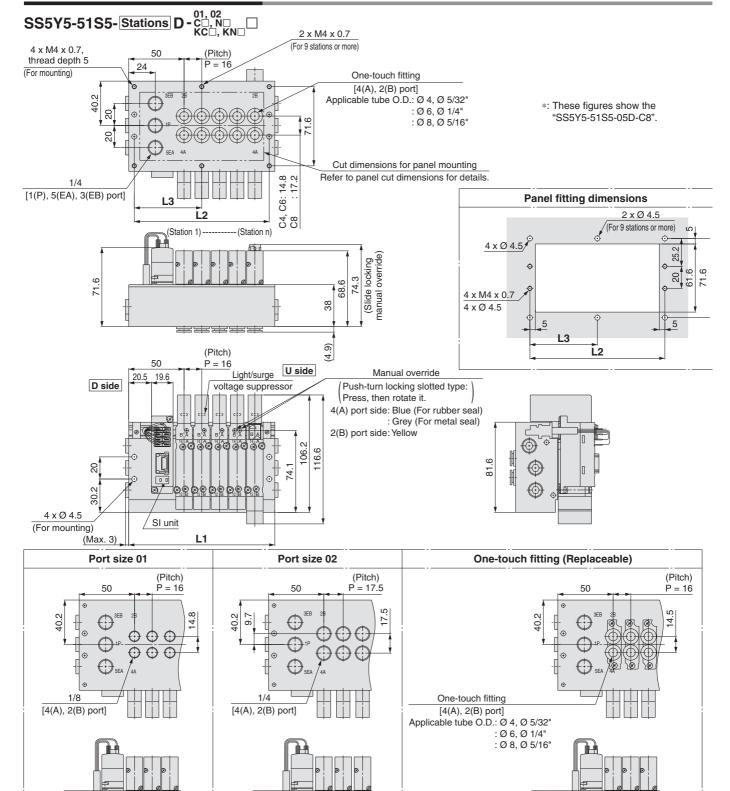

Port Size 01, C□, N□, KC□, KN□											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

81

Port S	ize 0	2									
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8

# Plug-in Metal Base Series SY3000/5000/7000

Plug-in **Metal** Base

Type 51/Bottom Ported EX510


Valve


Plug-in Sub-plate


Dimensions: Series SY7000





SS5Y7-51S5 - Stations D-

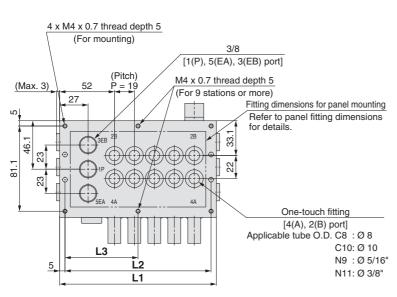


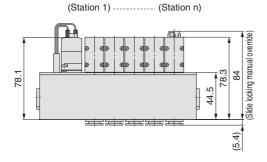

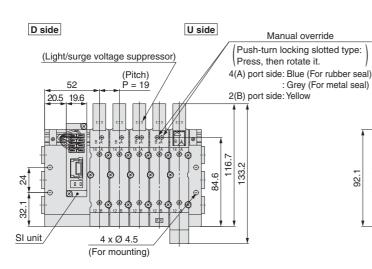

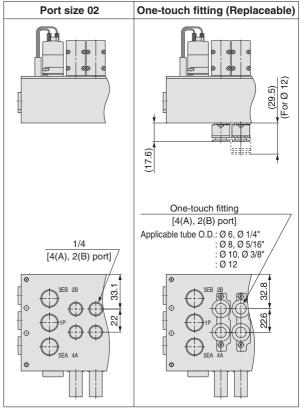

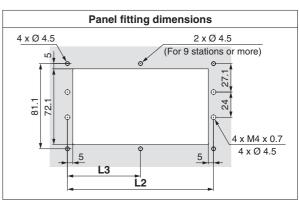

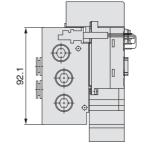

\*: These figures show the "SS5Y7-51S5-05D-C10".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136


#### Type 52 Top Ported

# Plug-in Metal Base Ex510

# Series SY3000/5000/7000

 $\epsilon$ 

#### **How to Order Manifold**

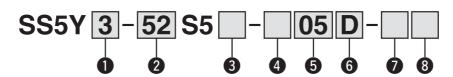

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Туре

52	Top ported
52R	Top ported, External pilot

#### 4 Wiring type

	3 71
_	All double wiring*1
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations. Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a special order.

#### 5 Valve stations

Symbol	Stations	Note			
02	2 stations	All double			
÷	:	wiring			
08	8 stations	wiring			
02	2 stations	All ainele			
:	:	All single			
12	12 stations	wiring			

\*: This also includes the number of blanking plate assembly.

#### 3 SI Unit output polarity


_	Positive common
N	Negative common

6 P, E port entry

	_ p = 1 = 2 = 1 = 1
U	U side*1
D	D side*1
В	Both sides

\*1: Plugs are mounted on the opposite side of the selected ports.

#### **How to Order Manifold Assembly**

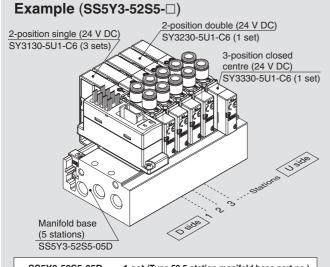

SS5Y3-52S5-05D  $\cdots$  1 set (Type 52 5-station manifold base part no.) \*SY3130-5U1-C6  $\cdots$  3 sets (2-position single part no.)

\*SY3230-5U1-C6 ...... 1 set (2-position double part no.)

\*SY3330-5U1-C6 ...... 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.
 The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheat

#### Thread type

	Rc
00F	G
00N	NPT
00T	NPTF

#### **8** Mounting

_	Direct mounting		
D	DIN rail mounting		
D	(With DIN rail)		
DIN I		DIN rail mounting	
D0	(Without DIN rail)		
D3	For 3 stations	Consider a law your wail the an	
:	:	Specify a longer rail than the standard length.	
D12	For 12 stations	tile stalidald leligtil.	

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.


For details on the EX510 Gateway-type Serial Transmission System, refer to the web catalogue on SMC website www.smc.eu and the Operation Manual.

Please download the Operation Manual via SMC website, http://www.smc.eu



#### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

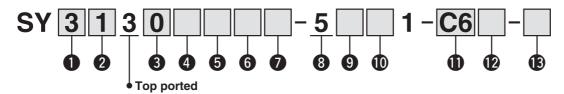

#### Series

<u> </u>		
3	SY3000	
5	SY5000	
7	SY7000	

#### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
<b>A</b> *1	4-position	N.C./N.C.
B*1	dual	N.O./N.O.
C*1	3-port	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

	7.1
0	Rubber seal
1	Metal seal

#### 4 Pilot type

_	Internal pilot	
R	External pilot	

# Back pressure check valve (Built-in valve type)

	71 /
	None
Н	Built-in

- \*: Only rubber seal type
- Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
<b>K</b> *1	High pressure type (1.0 MPa)		

\*1: Only metal seal type is available for the high pressure type.

#### **7** Coil type

O com type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage

5	24 V DC
0	24 V DC

#### Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Non-polar
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit polarity is — (positive common). Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).

#### Manual override

-: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type

\*: Refer to page 31 for with the safety slide locking manual override.

## 1 A, B port size

#### Thread piping

	pp3	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

	· · · · · · · · · · · · · · · · · · ·			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		_	
C3	Ø 3.2		_	_
C4	Ø 4	•	•	
C6	Ø 6	•	•	•
C8	Ø 8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•

#### One-touch fitting (Inch)

0110	touch hitting (i	11011)		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"			_
N7	Ø 1/4"		•	•
N9	Ø 5/16"	_	•	
N11	Ø 3/8"	_		•

#### Thread type

_	Rc
F	G
N	NPT
Т	NPTF

\*: Only — is available for M5.

#### **B** Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 89 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

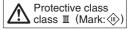





Plug-in **Metal** Base Type 52/Top Ported


EX510

## Dimensions: Series SY3000

# $SS5Y3-52(R)S5 \square - \underline{Stations} \overset{U}{\overset{}{p}} - \square(D)$

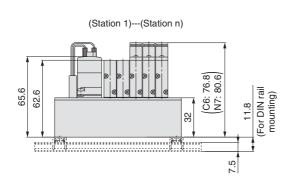

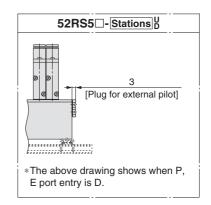

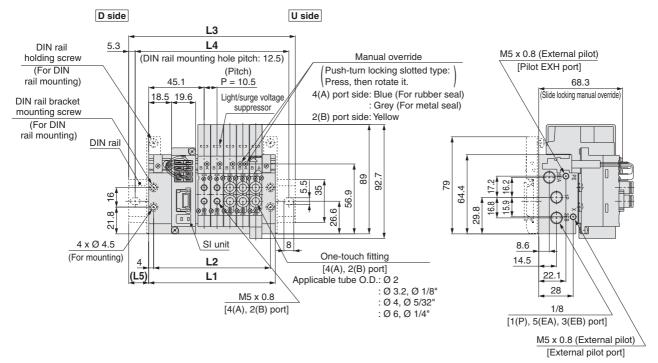

\*: These figures show the "SS5Y3-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17





Dimensions: Series SY5000


Plug-in

EX510

# $SS5Y5-52(R)S5 \square - \underline{Stations} \overset{U}{\overset{}{p}} - \square(D)$

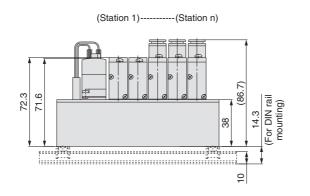

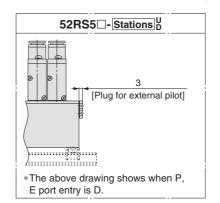

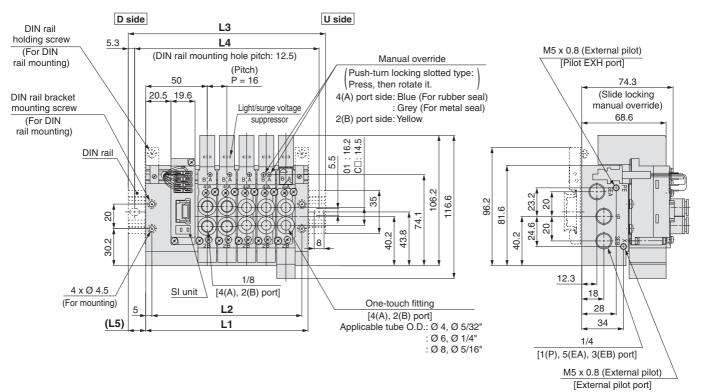

\*: These figures show the "SS5Y5-52S5-05B".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Plug-in **Metal** Base Type 52/Top Ported


EX510


## Dimensions: Series SY7000

# $SS5Y7-52(R)S5 \square \text{-}\underline{Stations} \overset{U}{\overset{}{p}}\text{-}\underline{\square}(D)$

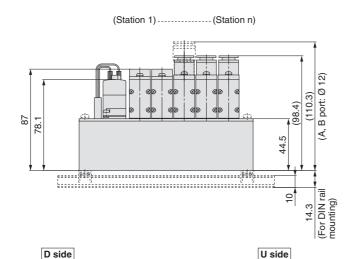

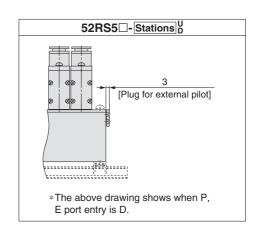

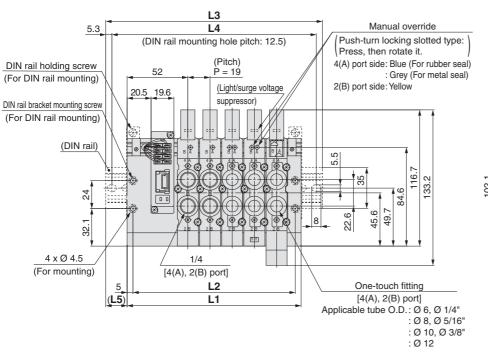

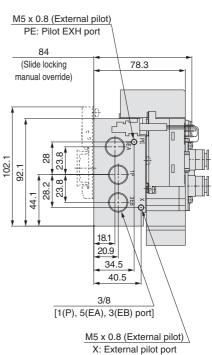


\*: These figures show the "SS5Y7-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5



# Series SY3000/5000/7000 Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

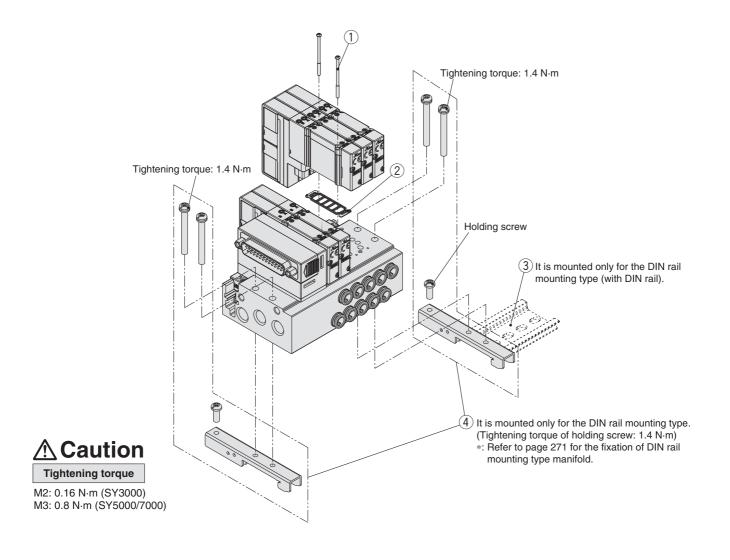

#### **Manifold Parts No.**


No.	Dog	scription		Part no.	Note	
INO.	Des	scription	SY3000	SY5000	SY7000	Note
	Valve mounting	Round head combination screw	<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.).
	screw	Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	(30 pcs. for the SY7000)
2	Base gasket (for plug-in metal	base and sub-plate)	SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
3	DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to page 249.
4	Clamp bracket as (for plug-in metal		SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).

#### Manifold Parts No.

#### ■Blanking plate assembly (With mounting screw)

Used when expecting valve additions, or for maintenance.


A structure to prevent screws falling out is in place on the blanking plate, making it much harder for the mounting screws to fall out.

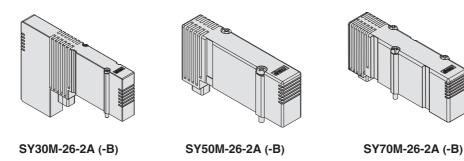


Refer to pages 260, 262, 264 for dimensions.

Refer to pages 250 to 254 for individual SUP/EXH and other options.

#### **How to Order Blanking Plate Assembly**

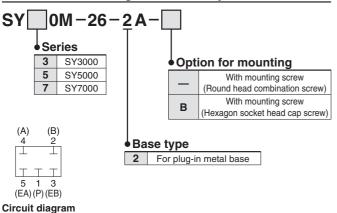

# Plug-in Connector Connecting Base

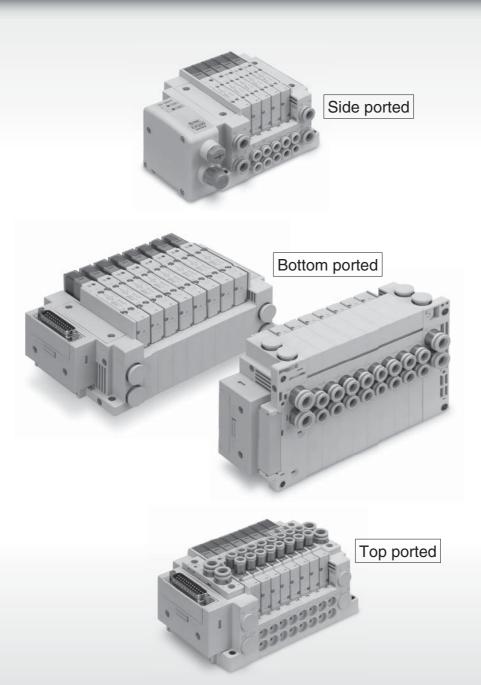



# Series SY3000/5000/7000 Type 10, 11, 12 Plug-in Connector Connecting Base

## **Manifold Specifications**

			D-s conn	sub ector	Fla	t ribbon ca	able	Terminal block box	Lead wire	Circular connector		Serial	wiring		
	Model		F type	FW type	P type	PG type J type G type	PH type	T type	L type	M type	S6□ type (EX600)	SA2 type (EX500) S4□ type (EX126)	S□ type (EX250) (EX260)	S3□ type (EX120)	
Manifold	d type			Plug-in connector connecting base											
SUP/EX	H port type		Common SUP/EXH (Common for 3/5 port)												
Valve st	ations		2 t	o 24 static	ins	2 to 18 stations (J/G type: 2 to 16 stations)	2 to 8 stations	2 to 20 stations	2 t	o 24 static	ons	2 to 16 stations	2 to 24 stations	2 to 16 stations	
Applica	ble connector	r	D-sub connector Conforming to MIL-C-24308 JIS-X-5101 (Refer to page 95.)	Dedicated connector (Refer to page 95.)	wit Conform (Ref Socket: 26 pins	on cable con strain reing to MILer to page Socket: 20 pins MIL type	lief -C-83503 97.) Socket: 10 pins				_				
Internal	wiring						Positive	common,	Negative	common					
		SY3000		Ø 8 One-touch fitting											
		513000		Ø 5/16" One-touch fitting											
	1(P), 3/5(E) port	SY5000		Ø 10 One-touch fitting Ø 3/8" One-touch fitting											
Port		SY7000							touch fittin -touch fittir	0					
size		SY3000		Ø2		•		•	•		ng, Ø 6 Or One-toucl		tting		
	4(A), 2(B) port	SY5000					0,		,	,	-touch fitti " One-touc	J			
		CV7000		Ø6	One-touch	fitting, Ø	8 One-tou	ch fitting,	Ø 10 One-	touch fittin	ıg, Ø 12 O	ne-touch f	itting		
		SY7000			Ø 1/4"	One-touch	n fitting, Ø	5/16" One	-touch fitti	ng, Ø 3/8"	One-toucl	n fitting			
Enclosu	re (Based on	IEC60529)	IP40	IP67*		IP40			IP67*		IP67* I/O unit: partially IP40	IP67* EX500 gateway unit, input unit: IP65	IP67* (Partially IP40)	IP20	

<sup>\*</sup> In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 242).

#### Туре 10, 11, 12 Plug-in Connector Connecting Base Series SY3000/5000/7000

#### Manifold Flow Rate Characteristics\*/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size			V	alve flow-rate					
Model		4, 2 (A, B)	1→4/2 (P→A/B)			4/2→	5/3 (A/	B→E)	Weight: W [q] *2	
	1, 3/5 (P, E)		C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min] (ANR) *3	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min] (ANR) *3	(n: stations)	
SS5Y3-10 (Side ported)	C8	C6	1.4	0.30	356	1.6	0.19	381	28.9n + 293	
SS5Y3-12 (Top ported)	C8	C6	1.2	0.29	303	1.3	0.19	310	25.1n + 314	
SS5Y5-10 (Side ported)	C10	C8	3.3	0.30	839	3.6	0.17	848	74.7n + 398	
SS5Y5-11 (Bottom ported)	C10	C8	3.3	0.29	834	4.2	0.26	1042	76.8n + 445	
SS5Y5-12 (Top ported)	C10	C8	2.8	0.27	699	3.8	0.23	926	66.3n + 417	
SS5Y7-10 (Side ported)	C12	C12	6.2	0.23	1511	5.9	0.20	1413	106.6n + 496	
SS5Y7-11 (Bottom ported)	C12	C12	6.2	0.25	1529	6.6	0.21	1590	117.9n + 532	
SS5Y7-12 (Top ported)	C12	C12	5.6	0.31	1433	5.7	0.24	1397	84.1n + 519	

Valve Seal Type: Metal Seal

	Port size			Va	alve flow-rate					
			1→4/2	(P→A	/B)	4/2→	5/3 (A/	B→E)	Weight: W [g] *2	
Model	1, 3/5 (P, E)	4, 2 (A, B)	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min] (ANR) *3	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min] (ANR) *3	(n: stations)	
SS5Y3-10 (Side ported)	C8	C6	1.2	0.19	286	1.3	0.18	308	28.9n + 293	
SS5Y3-12 (Top ported)	C8	C6	1.2	0.16	281	1.3	0.18	308	25.1n + 314	
SS5Y5-10 (Side ported)	C10	C8	2.7	0.24	662	3.1	0.17	730	74.7n + 398	
SS5Y5-11 (Bottom ported)	C10	C8	2.8	0.25	690	3.5	0.15	816	76.8n + 445	
SS5Y5-12 (Top ported)	C10	C8	2.6	0.18	616	3.0	0.16	703	66.3n + 417	
SS5Y7-10 (Side ported)	C12	C12	4.4	0.14	1020	4.4	0.17	1037	106.6n + 496	
SS5Y7-11 (Bottom ported)	C12	C12	4.6	0.16	1078	4.7	0.18	1113	117.9n + 532	
SS5Y7-12 (Top ported)	C12	C12	3.9	0.21	939	4.1	0.14	950	84.1n + 519	

<sup>\*</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C

<sup>\*1:</sup> The value is for manifold base with 5 stations and individually operated 2-position type.


<sup>\*2:</sup> Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type. To obtain the weight with valves attached, add the valve weights given on page 15 for the appropriate number of stations


<sup>\*3:</sup> These values have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

# Connector Wiring Layout

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (in the case of all double wiring)

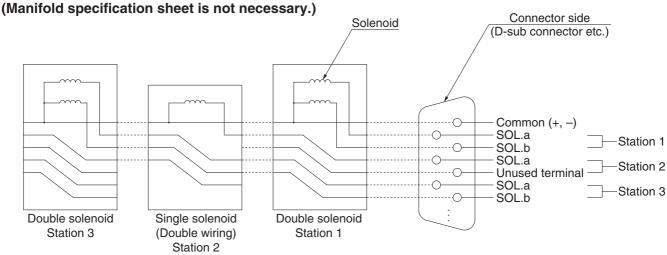

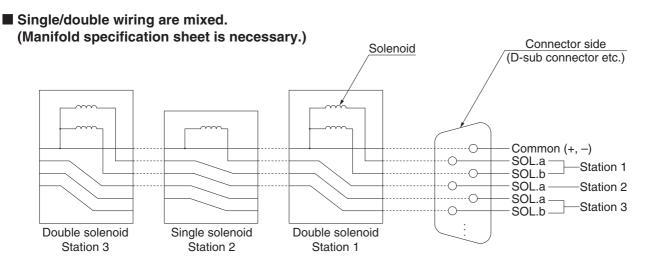

<sup>\*:</sup> These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.

Type 10 Side Ported Type 11 **Bottom Ported** 


# Plug-in Connector Connecting Base

D-sub Connector | Flat Ribbon Cable | PC Wiring |

# Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

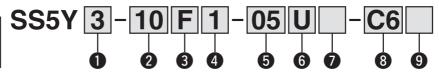


#### Series SY3000 3 SY5000 SY7000

<b>2</b> тур	oe .
10	Side ported
11	Bottom ported*1


\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

# 4 Connector entry direction

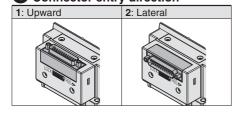


\*: The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 231) separately.

#### 3 Connector type

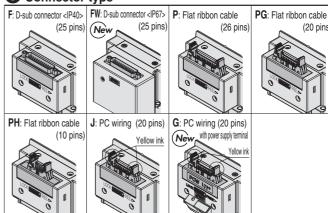

#### **How to Order Manifold Assembly**

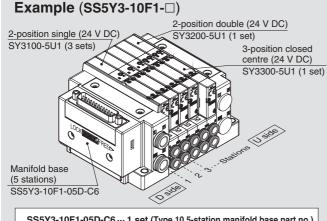

- SS5Y3-10F1-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) \*SY3100-5U1------3 sets (2-position single part no.) \*SY3200-5U1············· 1 set (2-position double part no.) \*SY3300-5U1······ 1 set (3-position closed centre part no.)
  - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 110. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### Valve stations

F/FV	F/FW: D-sub connector (25 pins)						
Symbol	nbol Stations Note						
02	2 stations						
÷	:	Double wiring*1					
12	12 stations						
02	2 stations	Specified layout*2					
i	:	(Available up to					
24	24 stations	24 solenoids)					

		Symbol	Stations	Note			
		02	2 stations				
		:	:	Double wiring*1			
		12	12 stations				
		02	2 stations	Specified layout*2			
			:	(Available up to			
		24 stations 24 solenoids)					

P: Flat ribbon cable (26 pins)

#### **PG**: Flat ribbon cable (20 pins) **PH**: Flat ribbon cable (10 pins)

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring*1
09	9 stations	
02	2 stations	Specified layout*2
:	:	(Available up to
18	18 stations	18 solenoids)

	10 010110110		
J/G:	PC wiring	g (20	pins)

ora. I o willing (20 pins)					
Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring*1			
08	8 stations				
02	2 stations	Specified layout*2			
:	:	(Available up to			
16	16 stations	16 solenoids)			

Symbol	Stations	Note					
02	2 stations						
:	:	Double wiring*1					
04	4 stations						
02	2 stations	Specified layout*2					
:	- ;	(Available up to 8 solenoids)					
08	8 stations						

\*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified

\*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4position valves cannot be used where single wiring has been specified.)

layout.

\*: This also includes the number of blanking plate assembly



\ | |

6 P, E port entry

	. ,
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

## SUP/EXH block assembly

— Internal pilot	
s	Internal pilot,
	Built-in silencer
R	External pilot

\*: 3/5(E) port is plugged for the built-in silencer type.

9 Mounting and Option

Cumbal	Manustina	Option			
Symbol	iviouriting	Name plate	Station number		
_	Divers	_	_		
AA	Direct mounting	•	•		
BA	Iniounting	•	_		
D	DIM!	_	_		
A□	DIN rail mounting	•	•		
В□	inounting	•	_		
· · · · · · · · · · · · · · · · · ·					

DIN Rail Option

_	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations Specify a longer rail				
:	than the total length				
24	For 24 stations of specified stations.				

- \*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

8 A, B port size (Metric/One-touch fitting

8	۸, ۱	Вр	ort size	(Metri	c/One	-touch	fitting	g)	
Symbol	ymbol A, B port				ported				
·			SY3000	SY5000	SY7000	SY5000	SY7000	,	
C2			Ø 2	•	_	_	_	_	
C3			Ø 3.2	•	_	_	_	_	
C4			Ø 4	•	•	_	•	_	
C6	ight		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	_	•	•	•	•	2 10
C10	0)		Ø 10	_	_	•	_	•	O S SEE
C12			Ø 12	_	_	•	_	•	OI.
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		2	Ø6	•	•	•	_	_	
L8		Upward	Ø 8	_	•	•	_	_	
L10		Ž	Ø 10	_	_	•	_	_	
L12	01		Ø 12	_	_	•	_	_	915
B4	Elbow*2		Ø 4	•	•	_	_	_	
<b>B6</b>	∃lpc	Downward	Ø6	•	•	•	_	_	
B8	"	VIIV	Ø 8	_	•	•	_	_	
B10		Dov	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	_	Told to the same of the same o
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
	P, E port size (One-touch fittings)		Ø8	Ø 10	Ø 12	Ø 10	Ø 12		

A, B port size (Inch/One-touch fitting)

	1		OILO (IIIO				<u> </u>							
Symbol		Α.	B port				Type 11/Bo							
-,				SY3000	SY5000	SY7000	SY5000	SY7000						
N1			Ø 1/8"	•		-								
N3		,	Ø 5/32"	•	•	_	•	_						
N7	Straight		Ø 1/4"	•	•	•	•	•						
N9	Stra	9	Ø 5/16"	_				•						
N11	0,		Ø 3/8"	_		•	_	•	01287					
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•						
LN3			Ø 5/32"	•	_	_	_	_						
LN7		/arc	Ø 1/4"	•	•	_	_	_						
LN9		Upward	Ø 5/16"	_		_	_	_						
LN11	0.	_						Ø 3/8"	_	-	•	-	-	el Sassan
BN3	Elbow*2	rd	Ø 5/32"	•		_		_						
BN7	쯽	Downward	Ø 1/4"	•	•									
BN9		owr	Ø 5/16"	_	•	_	_	_						
BN11			Ø 3/8"	_	_	•	_	_						
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_						
			rt size h fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"						

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".


The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).



#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

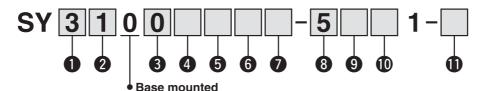

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

G I y	Je oi actuati	OII					
1	2-position	Single					
2	2-position	Double					
3		Closed centre					
4	3-position	Exhaust centre					
5		Pressure centre					
<b>A</b> *1	4-position	N.C./N.C.					
<b>B</b> *1	dual	N.O./N.O.					
C*1	3-port	N.C./N.O.					

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)


\*1: Only metal seal type is available for the high pressure type.

#### Coil type

9 00	ii typo
_	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### Manual override

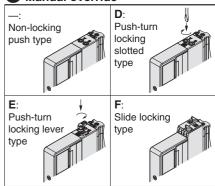

\*: Refer to page 31 for with the safety slide locking manual override.

#### Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

_	Internal pilot
R	External pilot

#### 5 Back pressure check valve (Built-in valve type)

	1 71 7
_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 8 Rated voltage

5	24 V DC
6	12 V DC

\*: Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 V DC.

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
	_	_				
R	_		Non-polar			
U	•					
S	_		Positive			
Z	•		common			
NS	_		Negative			
NZ	•		common			

- \*: Only "Z" and "NZ" types are available for with
- the power saving circuit.
  \*: For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

#### Type of mounting screw

	<b>3</b>
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release





Manifold Options

Dimensions: Series SY3000

Connector Connecting Base

SS5Y3-10F<sub>2</sub>-Stations D-C<sub>2</sub>, N<sub>1</sub> (D)

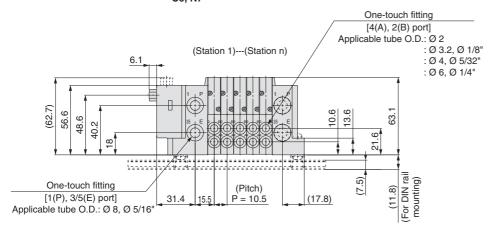

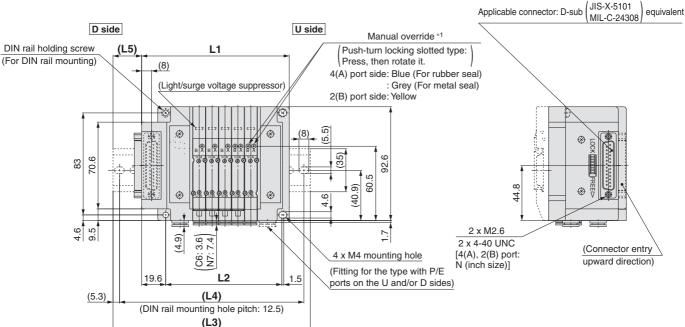

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10F2-05D-C6"
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5




Dimensions: Series SY5000


Plug-in
Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP40)

SS5Y5-10F<sub>2</sub><sup>1</sup>-Stations D-C6, N7 (D)

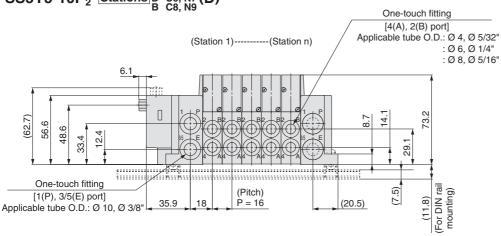

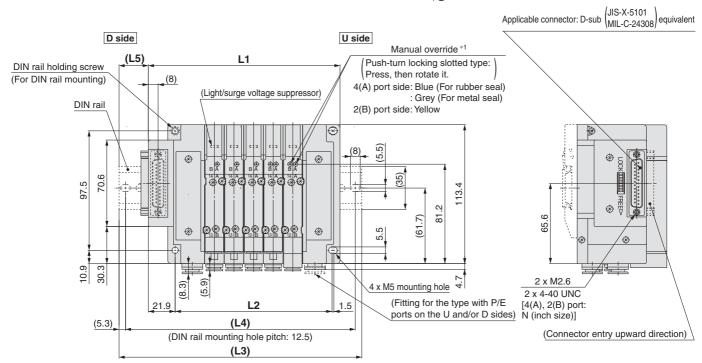

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10F2-05D-C8"
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22



(X)

(Connector entry upward direction)

2 x M2.6 2 x 4-40 UNC

[4(A), 2(B) port: N (inch size)]

Plug-in
Connector Connecting Base


Type 10/Side Ported
D-sub Connector (IP40)

SS5Y7-10F<sub>2</sub><sup>1</sup>-Stations D-C<sub>10</sub>, N1<sub>0</sub> (D)

44.2

(5.3)

Dimensions: Series SY7000

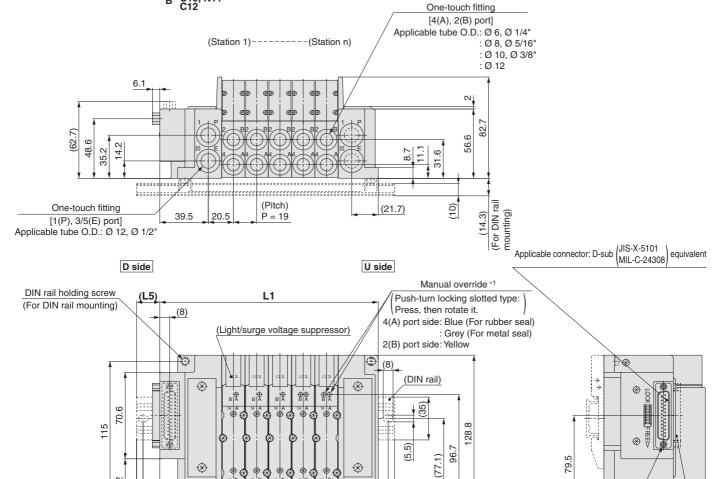

\*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

3.9

4 x M5 mounting hole

(Fitting for the type with P/E

ports on the U and/or D sides)

\*: These figures show the "SS5Y7-10F2-05D-C10".

12

(L4)

(DIN rail mounting hole pitch: 12.5)

(L3)

(17.9)

20.7

\*: Refer to page 212 for dimensions of A or B port top-ported type.

(A, B port: Ø 12)

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20


Dimensions: Series SY3000


Plug-in
Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP67)

SS5Y3-10FW<sub>2</sub><sup>1</sup>-Stations D-C<sub>2</sub><sup>2</sup>, N<sub>1</sub>(D)

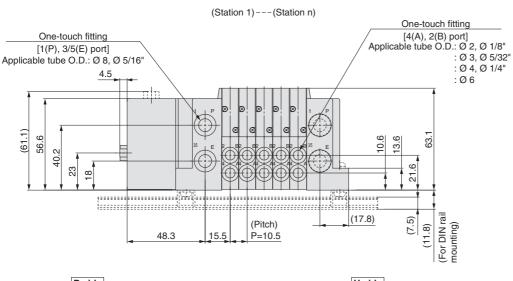

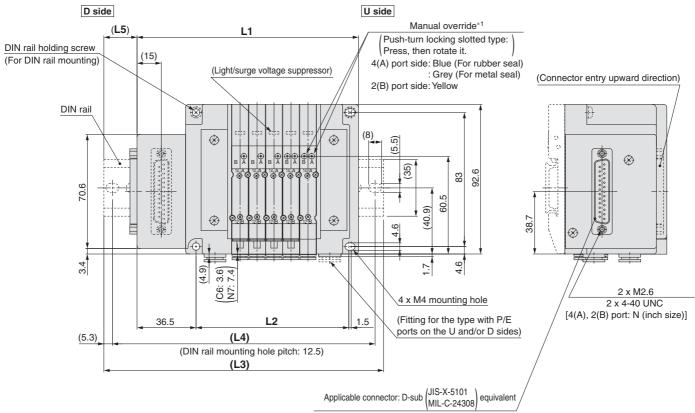

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10FW2-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5





Plug-in Connector Connecting Base

D-sub Connector (IP67)

Dimensions: Series SY5000

SS5Y5-10FW<sub>2</sub><sup>1</sup>-Stations D-C6, N7 (D)

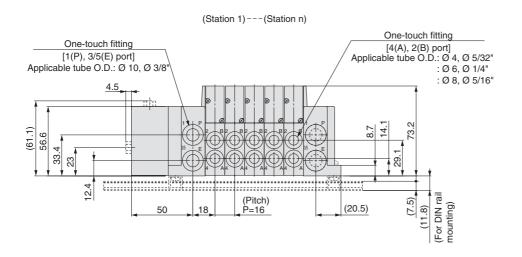

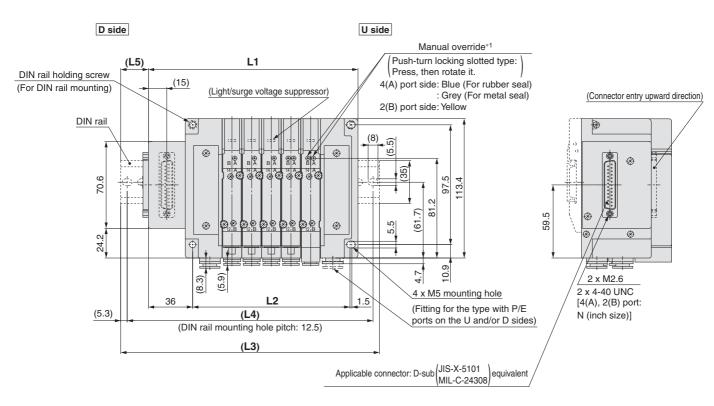

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10FW2-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5




Dimensions: Series SY7000


Plug-in
Connector Connecting Base

Type 10/Side Ported

<u>D-sub Connector</u> (IP67)

SS5Y7-10FW<sub>2</sub><sup>1</sup>-Stations D-C8, N7 (D)

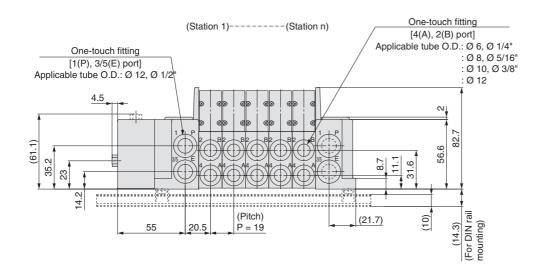

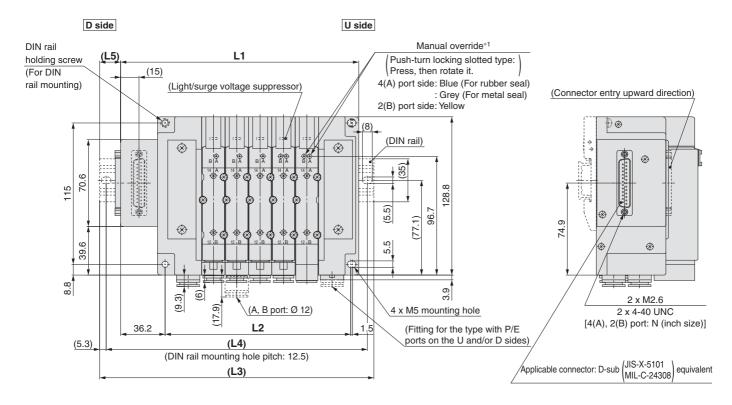

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10FW2-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5





Plug-in
Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable


Dimensions: Series SY3000

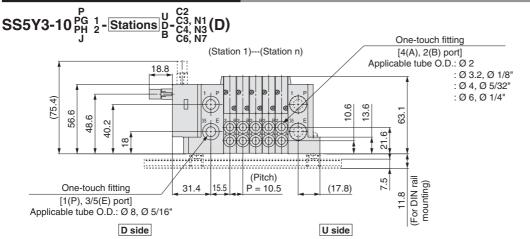

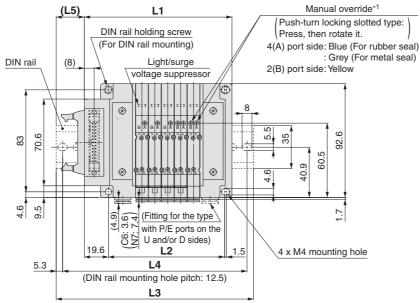

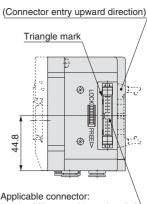


- Applicable connector:
  26 pins MIL type with strain relief
  (Conforming to MIL-C-83503)
- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10P2-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.
- \*: Only connectors are different for 10PG, 10PH, 10J and 10G. L1 to L5 dimensions are the same as 10P type.

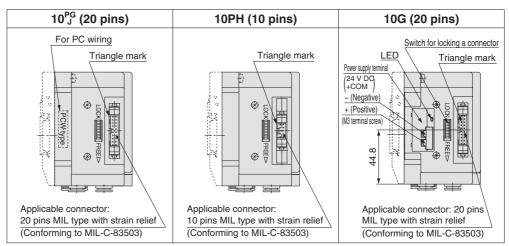


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5


Dimensions: Series SY5000 Plug-in Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

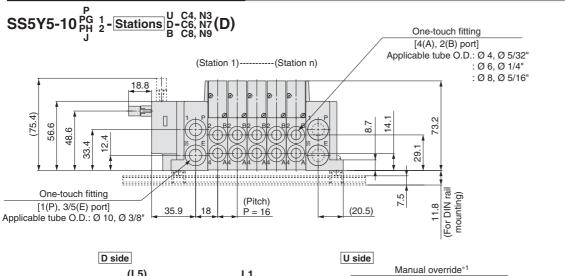

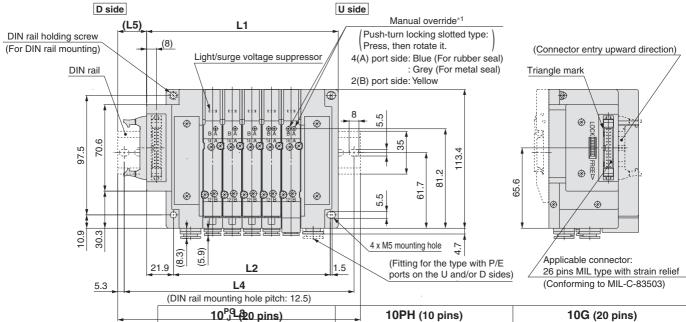

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10P2-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.
- Only connectors are different for 10PG, 10PH and 10J.
   L1 to L5 dimensions are the same as 10P type.

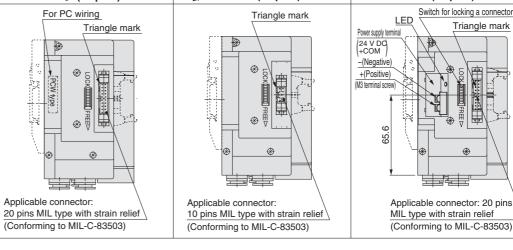


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

(21.7)

9

Plug-in Connector Connecting Base


Flat Ribbon Cable

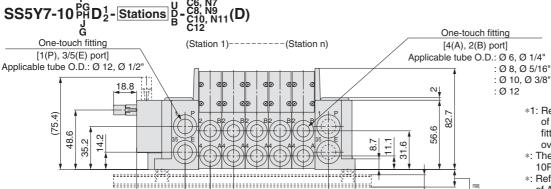

(Pitch)


Dimensions: Series SY7000

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10P2-05D-C8".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.
- \*: Only connectors are different for 10PG, 10PH, 10J and 10G. L1 to L5 dimensions are the same as 10P type.

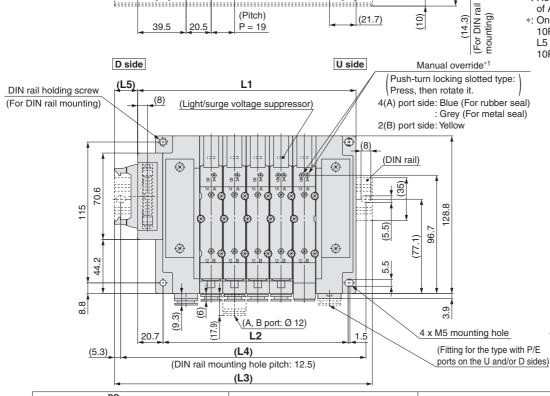

(Connector entry upward direction) Triangle mark S 79. <₩) Applicable connector: 26 pins MIL type with strain relief

(Conforming to MIL-C-83503)

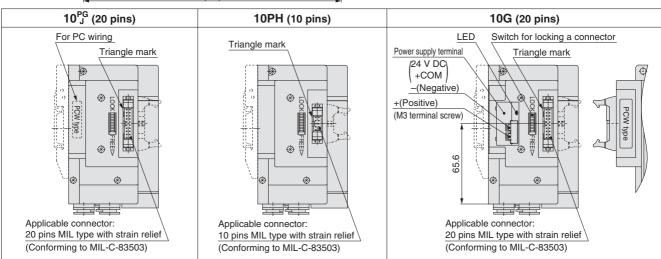

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20


# Plug-in Connector Connecting Base

D-sub Connector | Flat Ribbon Cable | PC Wiring |

Type 12 Top Ported

# Series SY3000/5000/7000


**How to Order Manifold** 

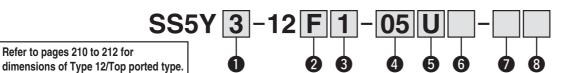

### Series

3	SY3000
5	SY5000
7	SY7000

2 Connector type

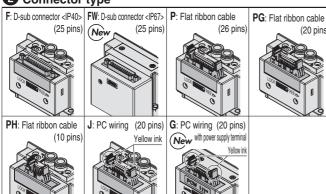


6 P. E port entry

o i, E poit citily						
<b>U</b> *1	U side (2 to 10 stations)					
<b>D</b> *1	D side (2 to 10 stations)					
B	Roth sides (2 to 24 stations)					

\*1: 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port

### **How to Order Manifold Assembly**

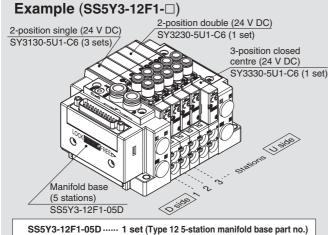

\*SY3130-5U1-C6 ...... 3 sets (2-position single part no.) \*SY3230-5U1-C6 ...... 1 set (2-position double part no.)


\*SY3330-5U1-C6 ...... 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above If the arrangement becomes complicated, specify on a manifold specification sheet.

### Connector entry direction

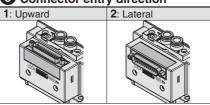

\*: The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 231) separately.

### 4 Valve stations

### F/FW: D-sub connector (25 pins) P: Flat ribbon cable (26 pins)

Stations	Note	Symbol	Stations	Note
2 stations		02	2 stations	
:	Double wiring*1	:	:	Double wiring*1
12 stations		12	12 stations	
2 stations	Specified layout*2	02	2 stations	Specified layout*2
:	(Available up to	:	::	(Available up to
24 stations	24 solenoids)	24	24 stations	24 solenoids)
	2 stations : 12 stations 2 stations :	2 stations            12 stations         2 stations           2 stations         Specified layout*2 (Available up to	2 stations          Double wiring*1           12 stations          12 stations	2 stations         :         Double wiring*1         :

#### **PG**: Flat ribbon cable (20 pins) **PH**: Flat ribbon cable (10 pins)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
09	9 stations	
02	2 stations	Specified layout*2
:	:	(Available up to
18	18 stations	18 solenoids)

	Symbol	Stations	Note
	02	2 stations	
	:	:	Double wiring*1
	04	4 stations	
1	02	2 stations	Specified layout*2
	:		(Available up to
	08	8 stations	8 solenoids)

### J/G: PC wiring (20 pins)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
:	:	(Available up to
16	16 stations	16 solenoids)

\*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified lavout.

- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

### 6 SUP/EXH block assembly

COI /EXTI BIOOK GOODIIIB						
_	Internal pilot					
S	Internal pilot,					
	Built-in silencer					
R	External pilot					

\*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)


### 8 Mounting

	<u> </u>					
_	Direct mounting					
D	DIN rail mounting (With DIN rail)					
D0	DIN rail mounting (Without DIN rai					
D3	For 3 stations	Specify a longer				
:	:	rail than the				
D24	For 24 stations	standard length.				

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

### P. E port size (One-touch fittings)


• • •	T ; = port oizo (ono touon numgo)					
Symbol	SY3000	SY5000	SY7000			
_	Ø8	Ø 10	Ø 12			
N	Ø 5/16"	Ø 3/8"	Ø 1/2"			

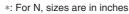



### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

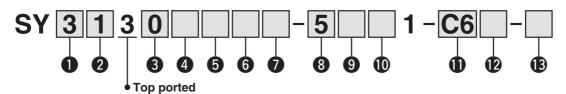

### Series

3	SY3000
5	SY5000
7	SY7000

### Type of actuation

1	2-position	Single			
2	2-position	Double			
3		Closed centre			
4	3-position	Exhaust centre			
5		Pressure centre			
<b>A</b> *1	4-position dual	N.C./N.C.			
B*1		N.O./N.O.			
C*1	3-port	N.C./N.O.			

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

_	Internal pilot
R	External pilot

### Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

### Coil type

O com type		
_	Standard	
T	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### Rated voltage

Trated voltage		
5	24 V DC	
6	12 V DC	

\*: Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 V DC.

### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: Only "Z" and "NZ" types are available for with
- the power saving circuit.
  \*: For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

### Manual override

Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type

\*: Refer to page 31 for with safety slide locking manual override.

## A, B port size

### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

### One-touch fitting (Metric)

0110	todon ntting (n			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2		_	_
СЗ	Ø 3.2		_	
C4	Ø 4			_
C6	Ø6		•	•
C8	Ø 8	_		•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•
	•			

#### One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"			_
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•
		•		

### 12 Thread type

	71
_	Rc
F	G
N	NPT
Т	NPTF

\*: Only - is available for M5.

### Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

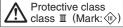

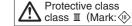


### **Electrical Wiring Specifications**

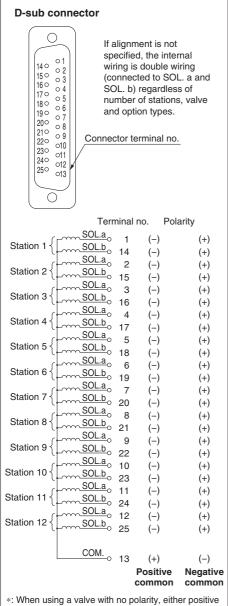

### common or negative common can be used.

### **Specified Layout**

### (25 pins)

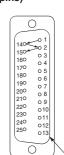


Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

COM.


### Cable Assembly

AXT100-DS25

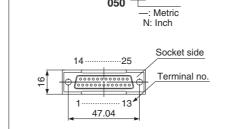


015

-030 (N) [IP40]

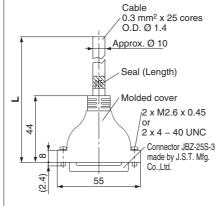

### SY30M-DS25-030 (N) [IP67] Metric N: Inch Connector JBZ-25S-3 made by J.S.T. Mfg. Co., Ltd. 14 25 Socket side (.....) Terminal no. 1.....13 47.04

015

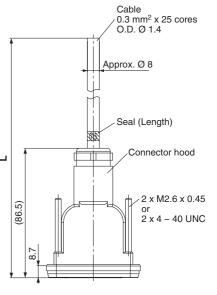

### D-sub connector cable assembly [IP40]

Cable length ( <b>L</b> )	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable
3 m	AXT100-DS25-030	0.3 mm <sup>2</sup> x 25 cores
5 m	AXT100-DS25-050	0.0111111 X 2.0 00163

- \*: When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.
- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above are also available. Please contact SMC for details.

### D-sub connector cable assembly [IP67]

Cable length (L)	Assembly part no.	Note
1.5 m	SY30M-DS25-015	0-1-1-
3 m	SY30M-DS25-030	Cable 0.3 mm <sup>2</sup> x 25 cores
5 m	SY30M-DS25-050	0.511111 1 25 00165

- \*: Be sure to use the connector cable assembly in the table, to satisfy enclosure
- \*: Cannot be used for movable wiring.

Licetifical cité	ar acter i
Item	Property
Conductor resistance Ω/km, 20 °C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20 °C	5 or more

\*: The minimum bending radius of the D-sub connector cable is 20 mm.

### Electrical characteristics | Connector Manufacturers' Example

- Fuiitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

### D-sub connector cable assembly terminal numbers

Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
Lead wire colour	Black	Brown	Red	Orange	Yellow	Pink	Blue	Purple	Grey	White	White	Yellow	Orange	Yellow	Pink	Blue	Purple	Grey	Orange	Red	Brown	Pink	Grey	Black	White
Dot marking	None	None	None	None	None	None	None	White	Black	Black	Red	Red	Red	Black	Black	White	None	None	Black	White	White	Red	Red	White	None



Connector terminal no.

Triangle mark indicator position

12 🗆 🗆 11

8 🗆 🗆 7

Flat ribbon cable connector

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

#### P: Flat ribbon cable (26 pins) <Double wiring> Terminal no. Polarity SOL.a 1 SOL.b o Station 1 2 (-)(+)SOL.a 3 (-)(+)Station 2 SOL.b o 4 (-)(+)SOL.a 5 (-)(+)Station 3 SOL.b o 6 (-)(+)SOL.a 7 (-)(+)Station 4 SOL.b o 8 (-)(+)SOL.a 9 (-)(+)Station 5 SOL.b o 10 (-)(+)SOL.a 11 (-)(+)Station 6 -SOL.b o 12 (-)(+)SOL.a 13 (-)(+)Station 7 SOL.b o (-)14 (+)SOL.a 15 (-)(+)Station 8 -SOL.b o 16 (-)(+)SOL.a 17 (-)(+)SOL.b o (-)18 (+)SOL.a 19 (-)(+)Station 10 -SOL.b o 20 (-)(+)SOL.a 21 (-)(+)Station 11 SOL.b o 22 (-)(+)SOL.a 23 (-)(+)Station 12 ≺ SOL.b o 24 (-)(+)COM. 25 (+) (-)COM. 26 (+)Positive Negative

Station 1 {
Station 1 {
COM. 10 (+) (-) Positive Negative common common

common common

\*: When using a valve with no polarity, either positive common or negative common can be used.

PG: Flat ribbon	cable (20 pins)
<double< th=""><th>wiring&gt;</th></double<>	wiring>
Station 1 { SOL.a SOL.b SOL.a SOL.b SOL.b SOL.a	Terminal no. Polarity  1 (-) (+) 2 (-) (+) 3 (-) (+) 4 (-) (+) 5 (-) (+)
Station 3 {	6 (-) (+) 7 (-) (+) 8 (-) (+) 9 (-) (+) 10 (-) (+)
Station 6 SOL.a SO	11 (-) (+) 12 (-) (+) 13 (-) (+) 14 (-) (+)
Station 8 SOL.a SOL.a SOL.a SOL.a	15 (-) (+) 16 (-) (+) 17 (-) (+) 18 (-) (+)
COM.	19 (+) (-) 20 (+) (-) Positive Negative common common


#### <Double wiring> Terminal no. Polarity SOL.a Station 1 SOL.b 18 (-)SOL.a 16 Station 2 SOL.b o 14 (-)(+)SOL.a 12 (-)(+)Station 3 SOL.b 10 (-)(+)SOL.a 8 (-)(+) Station 4 SOL.b o 6 (-) (+)SOL.a 19 (-)(+)Station 5 SOL.b 17 (-)(+)SOL.a 15 (-)(+)SOL.b o Station 6 13 (-)(+)SOL.a 11 (-)(+)Station 7 SOL.b 9 (-) (+)SOL.a 7 (-) (-) (+)Station 8 SOL.b 5 (+)4 (-)(+) 3 (-)(+)COM. 2 (+) (-)COM. 1 (+)(-)Positive Negative common common

J: Flat ribbon cable (20 pins)

PC wiring

\*: This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20→18→16→14 without skipping or leaving any connectors remaining.


# G: Flat ribbon cable (20 pins) PC wiring (with power supply terminal)

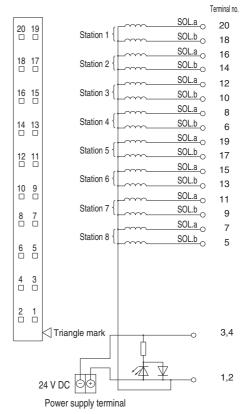

\*: This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20→18→16→14 without skipping or leaving any connectors remaining.

### Flat Ribbon Cable Assembly



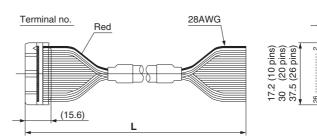

### Flat ribbon cable connector assembly


Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

- \*: When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above are also available. Please contact SMC for details.

### Connector Manufacturers' Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

### **Specified Layout**

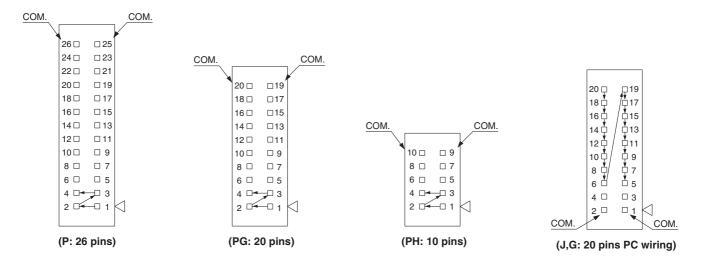

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P, 18 or less for PG, 8 or less for PH, and 16 or less for J/G. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.



Type 10
Side Ported

Type 11
Bottom Ported

# **Plug-in Connector Connecting Base**


Terminal Block Box

# Series SY3000/5000/7000

( E RoHS

### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

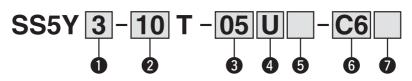

### Series

3	SY3000
5	SY5000
7	SY7000

2 Туре

U I y	<i>.</i>
10	Side ported
11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

### 3 Valve stations

9	Symbol	Stations	Note				
	02	2 stations					
	:	:	Double wiring*1				
	10	10 stations					
	02	2 stations	0				
	:	:	Specified layout*2 (Available up to 20 solenoids)				
	20	20 stations	(Available up to 20 solenoids)				

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

### 4 P, E port entry

<u> </u>	= port ontry
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)


### 5 SUP/EXH block assembly

_	_	,
	_	Internal pilot
	S	Internal pilot, Built-in silencer
	R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### Refer to the page on the right for 6.

### How to Order Manifold Assembly

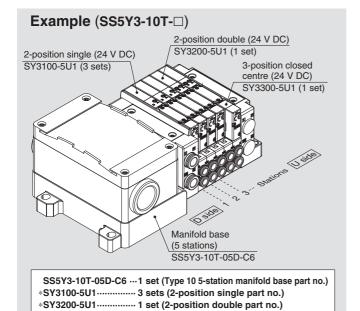

Prefix it to the part numbers of the valve etc.

\*SY3300-5U1......1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly.

- The valve arrangement is numbered as the 1st station from the D side.
  Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 122.

  In this case, use caution as there is also output on the A and B port on base side.

  Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

### **7** Mounting and Option

Symbol	Mounting	Option		
Symbol	Mounting	Name plate	Station number	
_	Divoct	_	_	
AA	Direct mounting	•	•	
BA		•	_	
D	DIN wait	_	_	
A□	DIN rail mounting			
В□	mounting	•	_	

- \*: Enter the number of stations inside ☐ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

_		Direct mounting		
0	Without DIN rail (with bracket)			
3	For 3 stations	Consider a language soil there the		
:	i	Specify a longer rail than the		
20	For 20 stations	total length of specified stations.		



6 A, B port size (Metric/One-touch fitting)

Cumbal	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
C2			Ø 2	•	_	_	_	_	
C3 C4			Ø 3.2	•	_	_	_	_	08
C4			Ø 4	•	•	_	•	_	
C6	ight		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	_	•	•	•	•	2 100
C10	"		Ø 10	_	_	•	_	•	1000
C12			Ø 12	_	_	•	_	•	No.
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		5	Ø6	•	•	•	_	_	
L8		Upward	Ø 8	_	•	•	_	_	
L10	10	J	Ø 10	_	_	•	_	_	
L12			Ø 12	_	_	•	_	_	elisar.
<b>B</b> 4	Elbow*2		Ø 4	•	•	_	_	_	
B6	ellbc	arc	Ø6	•	•	•	_	_	
B8	_	Downward	Ø 8	_	•	•	_	_	
B10		Do	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	_	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)			Ø8	Ø 10	Ø 12	Ø 10	Ø 12	

A, B port size (Inch/One-touch fitting)

Symbol		۸	R nort		10/Side		Type 11/Bo						
Syllibol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000						
N1			Ø 1/8"	•	_	_	_	_					
N3	_		Ø 5/32"	•	•	_	•	_					
N7	ight		Ø 1/4"	•	•	•	•	•					
N9	Straight	!	Ø 5/16"	_	•	•	•	•					
N11	0)		Ø 3/8"	_	_	•	_	•	9 10 ME				
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•					
LN3			Ø 5/32"	•	_	_	_	_					
LN7		arc	Ø 1/4"	•	•		_	_					
LN9	∃lbow*²	Jpward	Ø 5/16"	_	•	_	_	_					
LN11		_	_	_	_	_	Ø 3/8"	_	_	•	_	_	0 00000
BN3		Б	Ø 5/32"	•	_	_	_	_					
BN7		흶	Downward	Ø 1/4"	•	•	-	_	_				
BN9	_	JWC	Ø 5/16"	_	•	_	_	_					
BN11		ŏ	Ø 3/8"	_	_	•	_	_	To the last				
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_						
P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"						

**SMC** 


<sup>\*1:</sup> Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

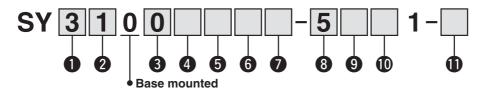

### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation					
1	2-position	Single			
2	2-position	Double			
3		Closed centre			
4 5	3-position	Exhaust centre			
		Pressure centre			
<b>A</b> *1	4 position	N.C./N.C.			
<b>B</b> *1	4-position dual 3-port	N.O./N.O.			
C*1		N.C./N.O.			

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

	71
	Internal pilot
R	External pilot

### Back pressure check valve (Built-in valve type)

	, processing of the control of the c
_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

— Standard (0.7 MPa)			
B Quick response type (0.7 MPa			
<b>K</b> *1	High pressure type (1.0 MPa)		

\*1: Only metal seal type is available for the high pressure type.

### Coil type

• con type				
_	Standard			
Т	With power saving circuit (Continuous duty type)			

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### 8 Rated voltage


5	24 V DC
6	12 V DC
6	12 V DC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
	_	_				
R	_		Non-polar			
U	•					
S	_		Positive			
Z	•		common			
NS	_		Negative			
NZ	•		common			

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

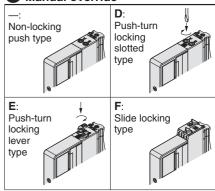

 Refer to page 31 for with the safety slide locking manual override.

### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

service.

- Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.





Plug-in Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

Dimensions: Series **SY3000** 

SS5Y3-10T-Stations D-C3, N1 (D)

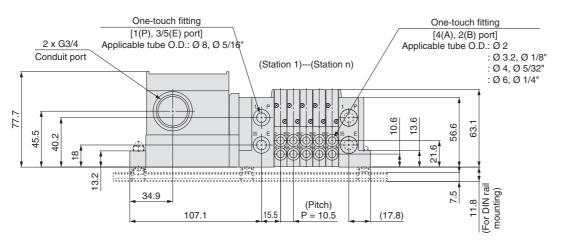

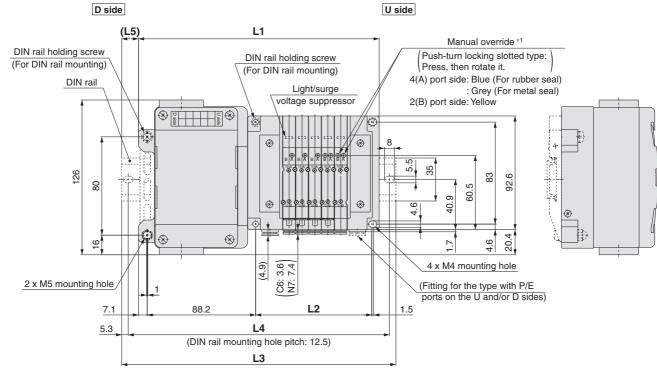

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10T-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16




Dimensions: Series SY5000

Plug-in Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y5-10T-Stations D-C6, N7 (D)

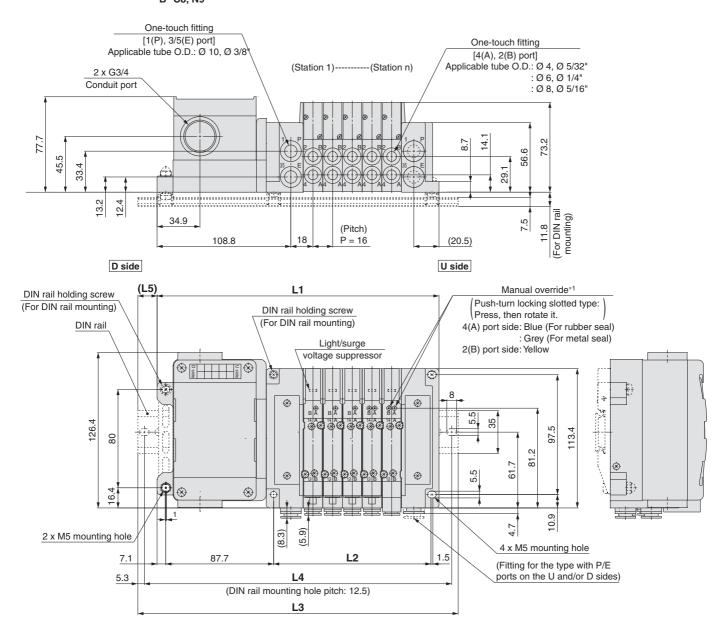

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10T-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5





Plug-in Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

Dimensions: Series **SY7000** 

SS5Y7-10T-Stations D C6, N7 D C8, N9 C10, N11 (D)

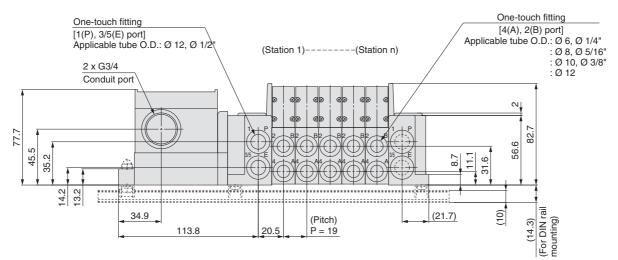

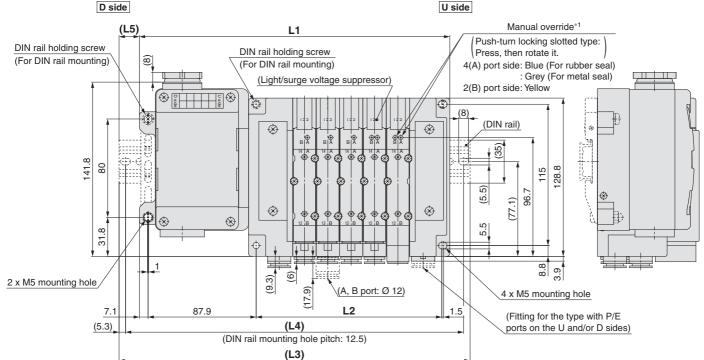

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10T-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18

# **Plug-in Connector Connecting Base**


Terminal Block Box

Type 12
Top Ported

# Series SY3000/5000/7000



### **How to Order Manifold**

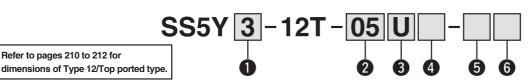

### 1 Series

3	SY3000
5	SY5000
7	SY7000

3 P, E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

### 2 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
10	10 stations	-
02	2 stations	Creekind lavout*2
:	:	Specified layout*2 (Available up to 20 solenoids)
20	20 stations	(Available up to 20 soleriolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

### 4 SUP/EXH block assembly

	<u> </u>
_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot


- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

# **5** P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000			
	Ø 8	Ø 10	Ø 12			
N	Ø 5/16"	Ø 3/8"	Ø 1/2"			

\*: For N. sizes are in inches.

### **How to Order Manifold Assembly**

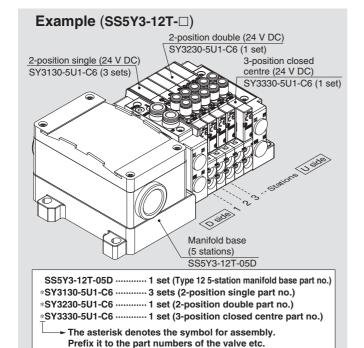

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification

### **6** Mounting


_		Direct mounting								
D		DIN rail mounting								
D		(With DIN rail)								
DO	DIN rail mounting									
D0	(Without DIN rail)									
D3	For 3 stations	Specify a longer rail than								
:	:	Specify a longer rail than								
D20	For 20 stations	the standard length.								

 Refer to page 271 for the fixation of DIN rail mounting type manifold.



### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

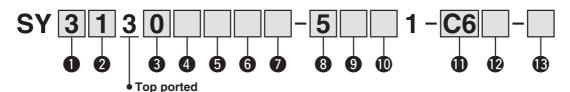

### Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single		
2		Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4-position dual 3-port	N.C./N.C.		
B*1		N.O./N.O.		
C*1	duai 5-port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

<u> </u>	ot typo
_	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

(Dulit-III valve type)	
_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

— Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

### Coil type

Con type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### 8 Rated voltage

	iaicu	voitage
5		24 V DC
6		12 V DC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

	-
-: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type

\*: Refer to page 31 for with the safety slide locking manual override.

### A, B port size

### Thread piping

	our bibing				
Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

#### One-touch fitting (Metric)

	- · · · · · · · · · · · · · · · · · · ·			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2		_	_
<b>C</b> 3	Ø 3.2		_	_
C4	Ø 4			_
C6	Ø 6	•		•
C8	Ø 8	_		•
C10	Ø 10	_		
C12	Ø 12	_	_	

#### One-touch fitting (Inch)

one-toden nitting (men)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"			_
N7	Ø 1/4"	•		•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•
	1			

### 12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

\*: Only — is available for M5.

### Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type
Н	Hexagon socket head cap screw (Falling-out-prevention type

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

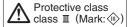




### **Terminal Block Connection**


#### Step 1. Removing the terminal block cover

Loosen the 4 mounting screws (M4) to remove the terminal block cover.

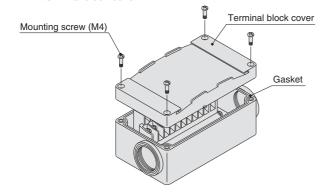

# Step 2. The below diagram shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

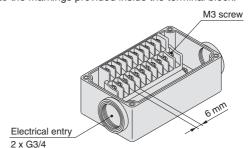


### Step 3. Mounting the terminal block cover

Securely tighten the screws to the torque shown in the below table only after confirming that the gasket is installed correctly.

Proper tightening torque [N⋅m]
0.7 to 1.2


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G 3/4): AXT100-B06A

### **Electrical Wiring Specifications (IP67 compatible)**

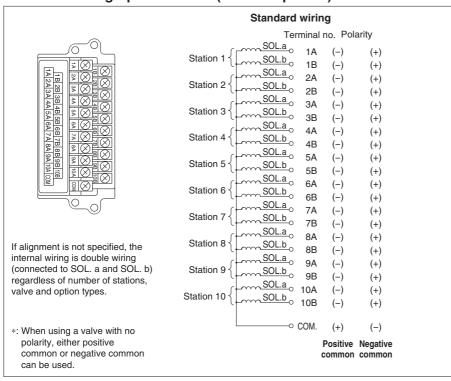

### **Specified Layout**

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

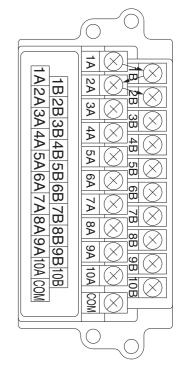

**SMC** 

Type 10
Side Ported

Type 11
Bottom Ported

# **Plug-in Connector Connecting Base**


Lead Wire

# Series SY3000/5000/7000

( E RoHS

### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

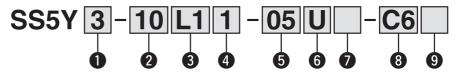

### 1 Series

3	SY3000
5	SY5000
7	SY7000

# Number of cores (Lead wire)

<u>'</u>	
L1	34 cores
L2	17 cores
L3	9 cores

### 2 Туре

10	Side ported
11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

### 4 Lead wire length

Lea	au wire ierigili
1	0.6 m
2	1.5 m
3	3 m

### Valve stations

<u>(LIL</u>	<b></b>	
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Specified layout*2
:	:	(Available up to
24	24 stations	32 solenoids)

(L3L	<b>」</b> )	
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
04	4 stations	
02	2 stations	Specified layout*2
:	- ;	(Available up to
08	8 stations	8 solenoids)


#### (L2□)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
:	:	(Available up to
16	16 stations	16 solenoids)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

### **Example** (SS5Y3-10L11-□)

**How to Order Manifold Assembly** 

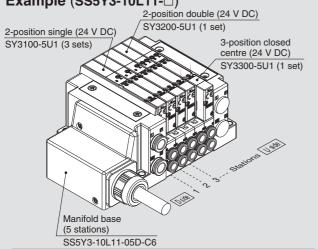

- SS5Y3-10L11-05D-C6  $\cdots$  1 set (Type 10 5-station manifold base part no.) \*SY3100-5U1  $\cdots$  3 sets (2-position single part no.)
- - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 132.

  In this case, use caution as there is also output on the A and B port on base side.

  Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

### 6 P, E port entry

	1
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

### SUP/EXH block assembly

	, = ,
_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.



A B port size (Metric/One-touch fitting)

A, B port size (Metric/One-touch fitting						mung	3)			
Symbol		۸	B port	Type <sup>1</sup>	10/Side	ported	Type 11/Bo	ttom ported		
Syllibol	A, b port		SY3000	SY5000	SY7000	SY5000	SY7000			
C2			Ø 2	•	_	_	_	_		
C3			Ø 3.2	•	_	_	_	_		
C4			Ø 4	•	•	_	•	_		
C6	igh		Ø 6	•	•	•	•	•		
C8	Straight		Ø 8	_	•	•	•	•	2 00	
C10	)		Ø 10	_	_	•	_	•	O DASSES	
C12			Ø 12	_	_	•	_	•	40	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			Ø 4	•	•		_	_		
L6		5	Ø6	•	•	•	_	_		
L8		Upward	Ø 8	_	•	•	_	_		
L10		5	Ø 10	_	_	•	_	_		
L12			Ø 12	_	_	•	_	_	al Base	
B4	Elbow*2	_	Ø 4	•	•	_	_	_		
B6	i po	/arc	arc	Ø6	•	•	•	_	_	
B8	_	Downward	Ø 8	_	•	•	_	_		
B10		8	Ø 10	_	_	•	_	_		
B12	2		Ø 12	_	_	•	_	_	To the second se	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
P, E port size (One-touch fittings)		Ø8	Ø 10	Ø 12	Ø 10	Ø 12				

A, B port size (Inch/One-touch fitting)

<del>, -</del>	A, B port size (inch/one-toden numg)								
Cumbal		^	Doort	Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"	•		_	_	_	
N3	_	9	Ø 5/32"	•	•	_	•	_	
N7	Straight		Ø 1/4"	•	•	•	•	•	
N9	Stra	9	Ø 5/16"	_	•	•	•	•	
N11	0)		Ø 3/8"	_	_	•	_	•	0 1983
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			Ø 5/32"	•	_	_	_	_	
LN7		Upward	Ø 1/4"	•	•	_	_	_	
LN9			Ø 5/16"	_	•	_	_	_	
LN11	ΟI		Ø 3/8"	_		•	_	_	0 5055
BN3	Elbow*2	ğ 💆	Ø 5/32"	•	_	_	_	_	
BN7	ilbc	Downward	Ø 1/4"	•	•	_	_	_	no
BN9	_	owr	Ø 5/16"	_	•	_	_	_	
BN11		Ó	Ø 3/8"	_		•	_	_	Tollar .
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"			

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

Mounting and Option

Symbol	Mounting	Option		
Symbol	Mounting	Name plate	Station number	
_	Divost	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN rail	_	_	
A□	mounting	•	•	
В□	mounting	•	_	


**DIN Rail Option** 

_	Direct mounting			
0	Without DIN rail (with brack			
<b>3</b> For 3 s	For 3 stations Specify a longer rail that			
: :		total length of specified		
<b>24</b> For 24 s	stations	stations.		

- \*: Enter the number of stations inside  $\square$  when it is larger than the number \* Effect the number of stations fiside \( \) when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
  \*: Only direct mounting is available for Type 11 (Bottom ported).
  \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

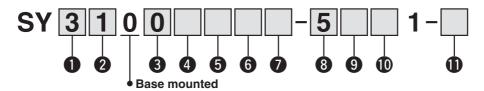

### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• Type of dotadilon			
1	2-position	Single	
2		Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
<b>A</b> *1	4iti	N.C./N.C.	
B*1	4-position dual 3-port	N.O./N.O.	
C*1		N.C./N.O.	

\*1: Only rubber seal is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

- 1 11	
— Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

Coil type

Oon type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.


8 Rated voltage

	• • • • • • • • • • • • • • • • • • • •
5	24 V DC
6	12 V DC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
		_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Manual override

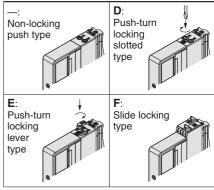

\*: Refer to page 31 for with the safety slide locking manual override.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

  \*: When ordering a valve individually, the
- base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.





Plug-in
Connector Connecting Base


**Lead Wire** 

SS5Y3-10L $_{3}^{1}$   $\square$ -Stations  $\stackrel{\mathsf{U}}{\underset{\mathsf{D}}{\overset{\mathsf{C2}}{\overset{\mathsf{C2}}{\overset{\mathsf{C2}}{\overset{\mathsf{N1}}{\overset{\mathsf{N1}}{\overset{\mathsf{C2}}{\overset{\mathsf{C}}{\overset{\mathsf{N}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}\overset{\mathsf{C}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}{\overset{\mathsf{C}}}}{\overset{\mathsf{C}}}$ 

Dimensions: Series SY3000

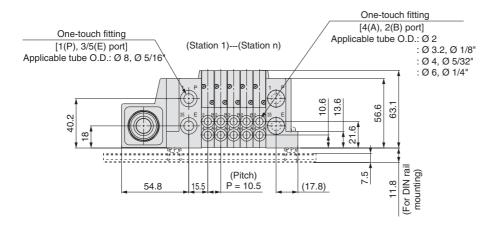

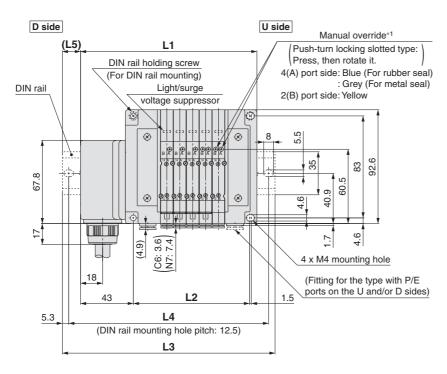

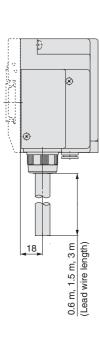

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10L1□-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15


Dimensions: Series SY5000


Plug-in Connector Connecting Base


Type 10/Side Ported

Lead Wire

**SS5Y5-10L** $_{3}^{1}$   $\square$ -Stations  $_{D}^{U}$   $_{C6, N7}^{C4, N3}$  (D)

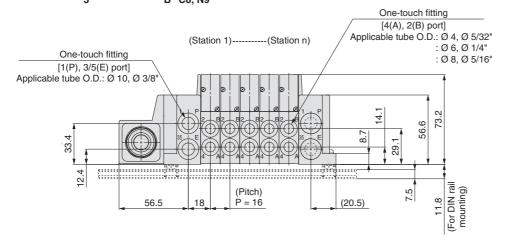

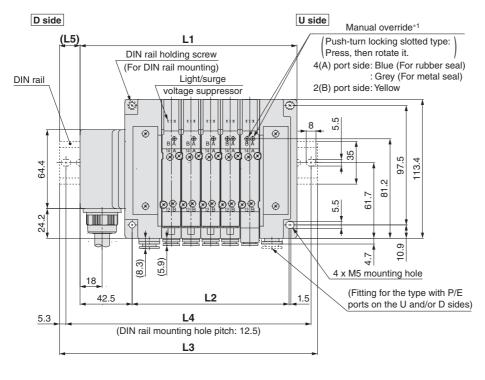

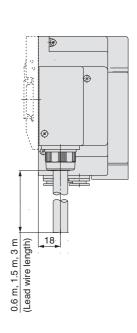

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10L1 -05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15




Plug-in
Connector Connecting Base


Type 10/Side Ported **Lead Wire** 


Dimensions: Series SY7000

 $SS5Y7-10L_{\frac{1}{3}}^{\frac{1}{2}} \square - \underline{Stations} \overset{U}{\overset{D}{\overset{1}{B}}}$ 

(Station 1)-----(Station n)

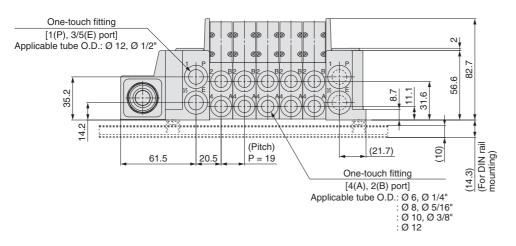

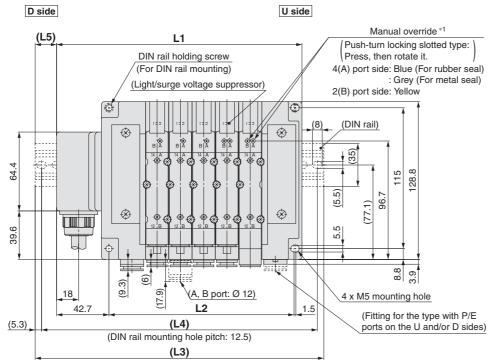

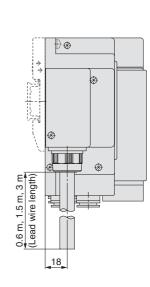

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10L1□-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



# **Plug-in Connector Connecting Base**

Lead Wire

Type 12
Top Ported

# Series SY3000/5000/7000




Note

Double wiring\*1

Specified layout\*2 (Available up to 8 solenoids)

### **How to Order Manifold**

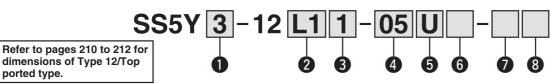

### 1 Series

3	SY3000
5	SY5000
7	SY7000

# Number of cores (Lead wire)

L1	34 cores
L2	17 cores
L3	9 cores

3 Lea	ad wire length
1	0.6 m


3 m

**5** P, E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

### **How to Order Manifold Assembly**

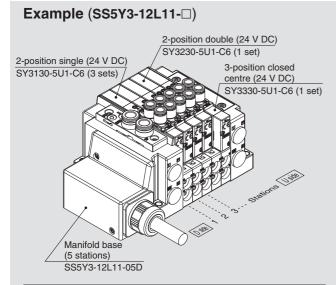

SS5Y3-12L11-05D ··· 1 set (Type 12 5-station manifold base part no.)

\*SY3130-5U1-C6...... 3 sets (2-position single part no.)
\*SY3230-5U1-C6...... 1 set (2-position double part no.)

\*SY3330-5U1-C6...... 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

### 4 Valve stations

(L1	□)		(L3	□)	
Symbol	Stations	Note	Symbol	Stations	
02	2 stations		02	2 stations	
÷	:	Double wiring*1	:	:	
16	16 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	
:	:	(Available up to	:	:	
24	24 stations	32 solenoids)	80	8 stations	

(L2	□)					
Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring*1				
08	8 stations					
02	2 stations	Specified layout*2				
:	:	(Available up to				
16	16 stations	16 solenoids)				

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control
- signal. If this is not desired, order with a specified layout.

  \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.


### 6 SUP/EXH block assembly

	·
_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

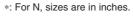

### **8** Mounting


Widditting			
_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length.	
:	:		
D24	For 24 stations	the standard length.	

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.



### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

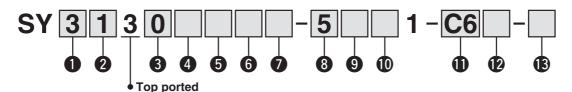

### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

	- , , , , , , , , , , , , , , , , , , ,		
1	0 11	Single	
2	2-position	Double	
3	3 4 3-position 5	Closed centre	
4		Exhaust centre	
5		Pressure centre	
<b>A</b> *1	4 position	N.C./N.C.	
B*1		N.O./N.O.	
C*1 dual 3-port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

(= 0.000 0.000)		
	_	None
	Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

### Coil type

Con type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### 8 Rated voltage


5	24 V DC
6	12 V DC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
		_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

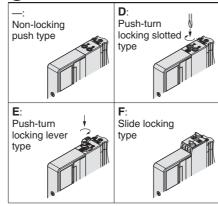

\*: Refer to page 31 for with the safety slide locking manual override.

### 1 A, B port size

### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2	•	_	_
C3	Ø 3.2	•	_	_
C4	Ø 4	•	•	_
C6	Ø 6	•		
C8	Ø 8	_		
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•
-				

#### One-touch fitting (Inch)

	chie te treit manning (mierr)					
Symbol	A, B port	SY3000	SY5000	SY7000		
N1	Ø 1/8"	•	_	_		
N3	Ø 5/32"	•	•	_		
N7	Ø 1/4"	•	•	•		
N9	Ø 5/16"	_	•	•		
N11	Ø 3/8"	_	_	•		

### Thread type

	Rc
F	G
N	NPT
Т	NPTF
Т	NPTF

\*: Only — is available for M5.

### 13 Type of mounting screw

- 71	
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the

manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

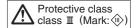



Lead wire no. Polarity

.a (-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(-)

(+)

(+)

Positive

common

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)

(+)


(+)

(-)

Negative

common

### **Electrical Wiring Specifications**

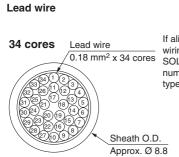

SOL.a

SOL.b\_o

SOL.a\_o

SOL.b

SOL.a

SOL.b

SOL.a

S<u>OL.b</u> ○ 10

SOL.a ○ 11

SOL.b ○ 12

SOL.a o 13

SOL.b o 14

SOL.a o 15

SOL.b ○ 16

SOL.a o 17

SOL.b ○ 18

SOL.a ○ 19

SOL.b ○ 20

SOL.a ○ 21

SOL.b ○ 22

SOL.a 0 23

SOL.b 0 24

SOL.a o 25

SOL.b ○ 26

SOL.a o 27

SOL.b 0 28

SOL.a o 29

SOL.b o 30

SOL.a o 31

SOL.b o 32

COM. ○ 33

COM. ○ 34

8

Station 1

Station 3

Station 4

Station 5

Station 6

Station 7

Station 8

Station 9

Station 10

Station 11

Station 12

Station 13

Station 14

Station 15

Station 16

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

Lead wire	Printed mark (Both sides)	
colour	Type	Colour
0		Red
Orange	_	Black
Light		Red
grey	_	Black
White		Red
vvriite	_	Black
Yellow		Red
reliow	_	Black
Diale		Red
Pink		Black
Orango		Red
Orange		Black
Light		Red
grey		Black
White		Red
vviiite		Black
Yellow		Red
reliow		Black
Pink		Red
FILIK		Black
Orange		Red
Orange		Black
Light		Red
grey		Black
White		Red
vviille		Black
Yellow		Red
TCIIOW		Black
Pink		Red
7 11 113		Black
Orange		Red
		Black
Light		Red
grey		Black

#### **Electrical characteristics**

Item	Property	
Conductor resistance $\Omega$ /km, 20 °C	143 or less	
Voltage limit V, 1 minute, AC	2000	
Insulation resistance M $\Omega$ /km, 20 °C	10 or more	

\*: Cannot be used for movable wiring. The minimum bending radius of the cable is 55 mm.


# \*: For negative common specification, a valve for negative common or a valve without polarity should be used.

### **Specified Layout**

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.



### **Electrical Wiring Specifications**

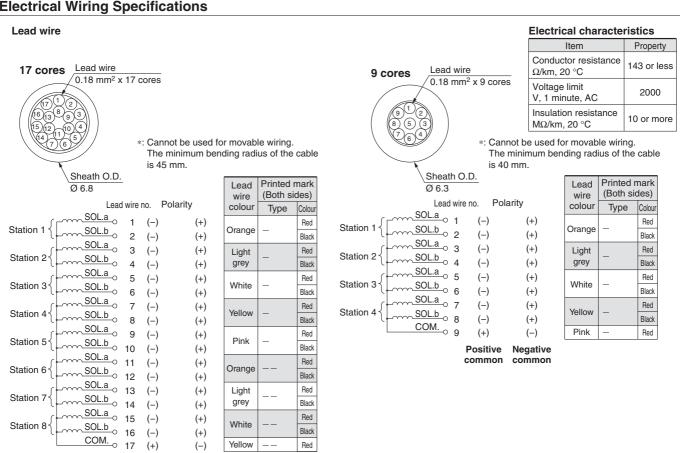

Positive Negative common common

(-)

Yellow

Red

(+)

<sup>\*:</sup> For negative common specification, a valve for negative common or a valve without polarity should be used

Type 10 Side Ported Type 11 **Bottom Ported** 


# Plug-in Connector Connecting Base

**Circular Connector** 

# Series SY3000/5000/7000

### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

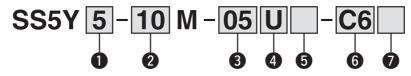

### Series

3	SY3000
5	SY5000
7	SY7000

### Type

<u> </u>	<b>.</b>
10	Side ported
11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

### **3** Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
12	12 stations	
02	2 stations	Creeking lavante?
:	:	Specified layout*2 (Available up to 24 solenoids)
24	24 stations	(Available up to 24 soleriolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

### 4 P, E port entry

	1
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


### 5 SUP/EXH block assembly

_	Internal pilot
S Internal pilot, Built-in silencer	
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 6.

### **How to Order Manifold Assembly**

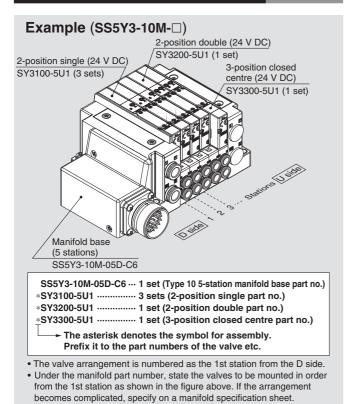

\*: When mixing top ported configurations, select from page 142. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port

### Mounting and Option

Woulding and Option				
Symbol	Mounting	Option		
Symbol	wounting	Name plate	Station number	
	Direct	_	_	
AA	mounting	•	•	
BA	mounting	•	_	
D	DIN rail mounting	_	_	
A□		•	•	
В□	mounting	•	_	

- \*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

### **DIN Rail Option**

_		Direct mounting		
0	Without DIN rail (with bracket			
3	For 3 stations	Charles a langur rail than the		
:	:	Specify a longer rail than the total length of specified stations.		
24	For 24 stations	total length of specified stations.		



6 A, B port size (Metric/One-touch fitting)

$\overline{}$	-,	<u> </u>	011 3120	(	0, 0			<u> </u>						
Symbol	A, B port					Type 11/Bo								
Syllibol			SY3000	SY5000	SY7000	SY5000	SY7000							
C2	Ø2		Ø 2	•	_	_	_	_						
C3			Ø 3.2	•	_	_	_	_	0.80					
C4			Ø 4	•	•	_	•	_						
C6	igh		Ø 6	•	•	•	•	•						
C8	Straight		Ø 8	_	•	•		•	100					
C10			Ø 10	_	_	•	_	•	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0					
C12			Ø 12	_	_	•	_	•	45					
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•						
L4			Ø 4	•	•	_	_							
L6		5	Ø6	•	•	•	_	_						
L8		Upward	Ø 8	_	•	•	_	_						
L10		Ž	Ø 10	_	_	•	_							
L12	٨		Ø 12	_	_	•	_	_	ol Sale					
B4	∃lbow*2	_	Ø 4	•	•	_	_	_						
B6	i i	Downward	/arc	/arc	/arc	/arc	/arc	/arc	/arc	Ø6	•	•	• •	
B8	_		Ø 8	_	•	•	_	_						
B10		Do	Ø 10	_	_	•	_	_	3					
B12			Ø 12	_	_	•	_	_						
LM*1		(Incli	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_						
P, E port size (One-touch fittings)			Ø8	Ø 10	Ø 12	Ø 10	Ø 12	6//014						

A, B port size (Inch/One-touch fitting)

							<u> </u>		
Symbol	A, B port		, .	10/Side	•	Type 11/Bo			
Syllibol			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			Ø 1/8"	•	_	_	_	_	
N3	_		Ø 5/32"	•	•	_	•	_	
N7	igh		Ø 1/4"	•	•		•		
N9	Straight		Ø 5/16"	_	•	•	•	•	
N11	0)		Ø 3/8"	_	_	•	_	•	0 10 mg
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			Ø 5/32"	•	_	_	_	_	
LN7		Jpward	Ø 1/4"	•	•	_	_	_	
LN9		ď	Ø 5/16"	_	•	_	_	_	
LN11	2.4	_	Ø 3/8"	_	_	•	_	_	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
BN3		5	Ø 5/32"	•		_	_	_	
BN7	all	EIDC Wa	Ø 1/4"	•	•	_	_	_	
BN9	_	Downward	Ø 5/16"	_	•	_	_	_	
BN11		Õ	Ø 3/8"	_	_		_	_	Tollar .
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		


<sup>\*1:</sup> Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

<sup>\*2:</sup> To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

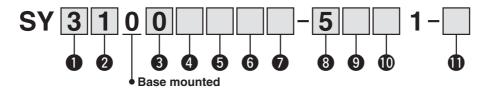

### Series

3	SY3000
	0)/=000
5	SY5000
7	SY7000
1	317000

2 Type of actuation

- 71	• 1)pe of detadition				
1	2-position	Single			
2		Double			
3		Closed centre			
4	3-position	Exhaust centre			
5		Pressure centre			
<b>A</b> *1	4 manitina	N.C./N.C.			
B*1	4-position dual 3-port	N.O./N.O.			
C*1	dual 5-port	N.C./N.O.			

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

Coil type

Con type				
_	Standard			
Т	With power saving circuit (Continuous duty type)			

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

8 Rated voltage


5	24 V DC
6	12 V DC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
_	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### **10** Manual override

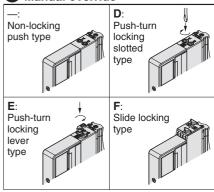

\*: Refer to page 31 for with the safety slide locking manual override.

### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc. \*: When ordering a valve individually, the
- base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Plug-in
Connector Connecting Base


Type 10/Side Ported

Circular Connector

Dimensions: Series SY3000

SS5Y3-10M-Stations D-C3, N1 (D)

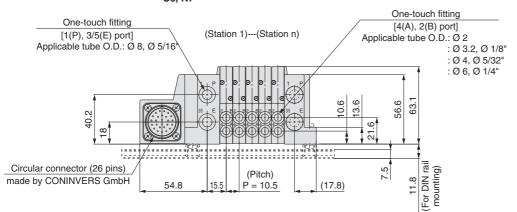

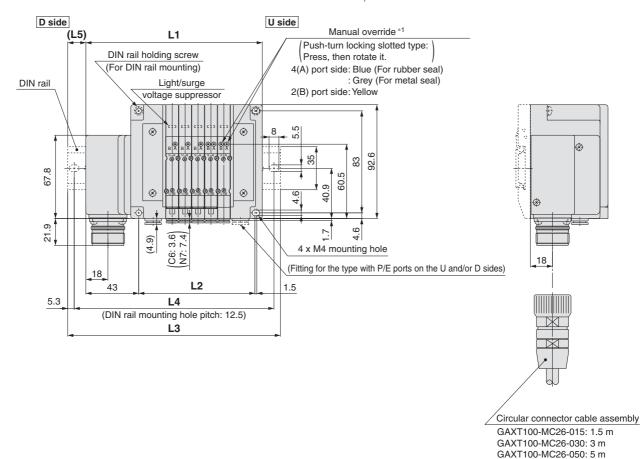

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10M-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15


Conn

Plug-in Connector Connecting Base

Type 10/Side Ported
Circular Connector

SS5Y5-10M-Stations B C C4, N3 D - C6, N7 (D)

Dimensions: Series SY5000

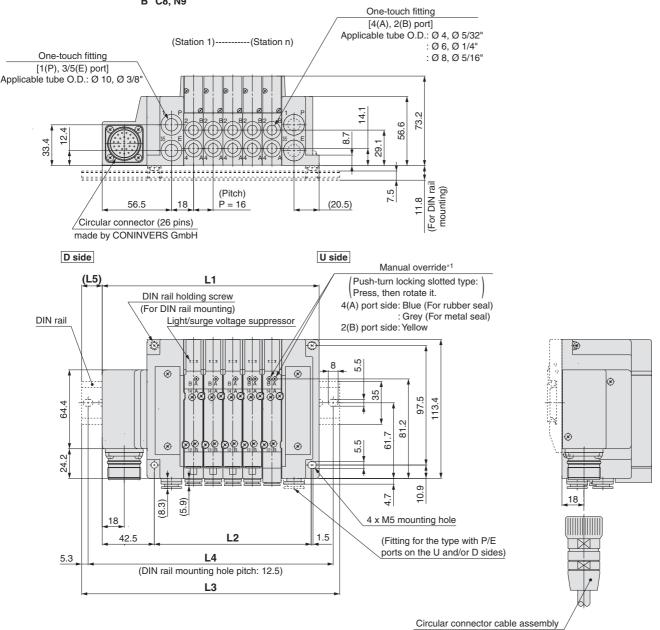

\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

GAXT100-MC26-015: 1.5 m GAXT100-MC26-030: 3 m GAXT100-MC26-050: 5 m

- \*: These figures show the "SS5Y5-10M-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15




Plug-in
Connector Connecting Base

Type 10/Side Ported

Circular Connector



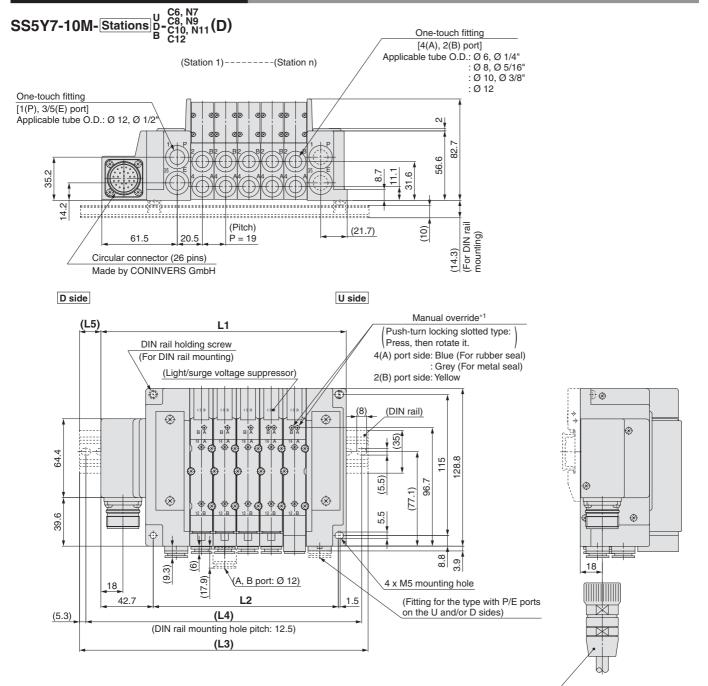

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10M-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

Circular connector cable assembly GAXT100-MC26-015: 1.5 m GAXT100-MC26-030: 3 m GAXT100-MC26-050: 5 m


# Plug-in Connector Connecting Base

**Circular Connector** 

**Type 12** Top Ported

# Series SY3000/5000/7000

### **How to Order Manifold**

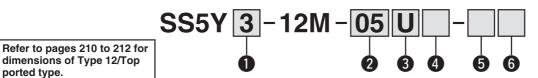

ported type. 1 Series

dimensions of Type 12/Top

3	SY3000
5	SY5000
7	SY7000

### Valve stations

Symbol	Stations	Note					
02	2 stations						
:	÷	Double wiring*1					
12	12 stations						
02	2 stations	Considered lawayet*?					
:	:	Specified layout*2 (Available up to 24 solenoids)					
24	24 stations	(Available up to 24 solenoids)					

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

### P. F. port entry

<u> </u>	- port chity
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


\*1: 4 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

### 4 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### **How to Order Manifold Assembly**

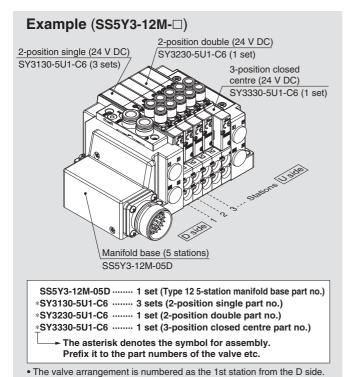

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

**5** P. E port size (One-touch fittings)

		•	<u> </u>	
Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.

### 6 Mounting


_		Direct mounting						
D		DIN rail mounting (With DIN rail)						
D0		IN rail mounting Vithout DIN rail)						
D3	For 3 stations	Consifer a language until them						
:	:	Specify a longer rail than the standard length.						
D24	For 24 stations	tile staridard lerigiti.						

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.



### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

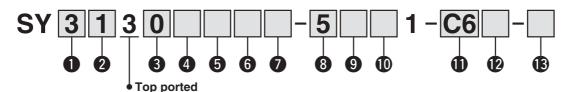

### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	O position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4 position	N.C./N.C.
B*1	4-position dual 3-port	N.O./N.O.
C*1	dual o-port	N.C./N.O.

\*1: Only rubber seal is available for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

A Pilot type

<u> </u>	ot typo
_	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

### Coil type

Con type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### 8 Rated voltage


5	24 V DC
6	12 V DC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
		Supplessoi	specification
_	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

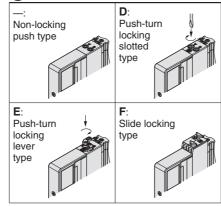

\*: Refer to page 31 for with the safety slide locking manual override.

### 1 A, B port size

### Thread piping

	Doub attack	A I' I. I
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		_	_
C3	Ø 3.2		_	_
C4	Ø 4			_
C6	Ø 6	•		•
C8	Ø 8	_		•
C10	Ø 10	_		
C12	Ø 12	_	_	•

One-touch fitting (Inch)

	· · · · · · · · · · · · · · · · · · ·			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"	•	•	_
N7	Ø 1/4"	•		•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•

12 Thread type

_	Rc
F	G
N	NPT
Т	NPTF

\*: Only — is available for M5.

### 13 Type of mounting screw

_	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket

separately if it is needed for maintenance service. Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.





### **Electrical Wiring Specifications**





If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

#### Terminal no. Polarity SOL.a (-)(+)Station 1 2 (-)(+)SOL.a 3 (-)(+)Station 2 SOL.b (-)(+) SOL.a 5 (-)(+)Station 3 SOL.b 6 (-)(+)SOL.a (-)(+)SOL.b Station 4 8 SOL.a 9 (-)(+)SOL.b o 10 Station 5 (+)SOL.a ○ 11 (-)(+)SOL.b 12 Station 6 (-)(+)SOL.a ○ 13 (-)(+)SOL.b ○ 14 Station 7 (-)(+)SOL.a o 15 (-)(+)\_\_\_\_ SOL.b ○ 16 Station 8 (-)(+)SOL.a ∘ 17 (-)(+)SOL.b ○ 18 Station 9 (-)(+)<u>SOL.a</u> ○ 19 (-)(+)SOL.b 0 20 Station 10 (-) (+)SOL.a 21 (-)(+) SOL.b 22 Station 11 (-)(+)SOL.a o 23 (-)(+)SOL.b 24 Station 12 (-)(+)COM. 0 25 (+) (-)<u>COM.</u> ○ 26

Positive Negative common common

(+)

(-)


\*: When using a valve with no polarity, either positive common or negative common can be used.


### **Specified Layout**

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

### **Cable Assembly**

#### 015 AXT100-MC26--030

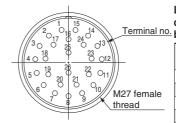

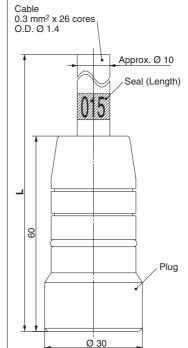

#### Lead wire colour for circular connector cable assembly Terminal no. by terminal number

y terminai number				
Terminal no.	Lead wire colour	Dot marking		
1	Black	None		
2	Brown	None		
3	Red	None		
4	Orange	None		
5	Yellow	None		
6	Pink	None		
7	Blue	None		
8	Purple	White		
9	Grey	Black		
10	White	Black		
11	White	Red		
12	Yellow	Red		
13	Orange	Red		
14	Yellow	Black		
15	Pink	Black		
16	Blue	White		
17	Purple	None		
18	Grey	None		
19	Orange	Black		
20	Red	White		
21	Brown	White		
22	Pink	Red		
23	Grey	Red		
24	Black	White		
25	White	None		
26	White	None		

### **Electrical characteristics**

	Item	Property
	Conductor resistance Ω/km, 20 °C	65 or less
	Voltage limit V, 1 minute, AC	1000
	Insulation resistance MΩ/km, 20 °C	5 or more

\*: The minimum bending radius of the circular connector cable is 20

### Circular connector cable assembly

Cable	Assembly part no.
length (L)	26 pins
1.5 m	GAXT100-MC26-015
3 m	GAXT100-MC26-030
5 m	GAXT100-MC26-050

- \*: Cannot be used for movable wiring.
- \*: Lengths other than the above is also available. Please contact SMC for details.

**SMC** 

Type 10
Side Ported

Type 11
Bottom Ported

## **Plug-in Connector Connecting Base**


**EX500 Gateway Decentralised System 2 (128 Points)** 

# Series SY3000/5000/7000



#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

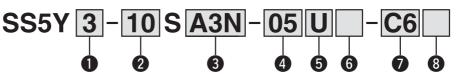

#### Series

	3	SY3000
	5	SY5000
	7	SY7000

\*: For mixed mounting, refer to page 213 and later.

#### **2** Type

	10	Side ported
Ì	11	Bottom ported*1

- \*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).
- \*: When mixing top ported configurations, select from page 158.

In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

# 3 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

max. nam	max. Hamber of varve stationer				
0 Without SI Unit					
A3N	32 outputs*1*4, 1 to 16 stations (24 stations*3), Negative common*2				

- \*1: 16 outputs can be set by switching the built-in setting switch.
- \*2: Ensure a match with the common specification of the valve.
- \*3: ( ): Maximum number of stations for mixed single and double wiring.
- \*4: When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 4 Valve stations

	_					
		Stations	Note			
	02	2 stations				
		:	Double wiring*1			
	16	16 stations				
	02	2 stations	Mixed wiring Chapified leveut*2			
:	:	Mixed wiring, Specified layout*2 (Available up to 32 solenoids)				
	24	24 stations	(Available up to 32 soleriolds)			

- \*1: Double wiring: 2-position single, double,
  3-position and 4-position valves can be used on all manifold stations.
  Use of a 2-position single solenoid will result
  - in an unused control signal.

    If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### How to Order Manifold Assembly

# Manifold base 2-position double SS5Y3-10SA3N-05D-C6...1 set (Manifold base part number)

\* SY3200-5U1 ......5 sets (2-position double part number)

The asterisk denotes the symbol for assembly.

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

#### **5** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### 6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer*1*2
R	External pilot

- \*1: 3/5(E) port is plugged for the built-in silencer type.
- \*2: When built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.
- \*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 235 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

A, B port size (Metric/One-touch fitting)

			Type 1	0/Side	Ported	Type 11/Bo	ttom Ported		
		Α,	B port			SY7000			
C2			Ø2	•	_	_	_	_	
СЗ			Ø 3.2	•	_	_	_	_	
C4	١		Ø 4	•	•	_	•	_	
C6	Straight		Ø 6	•	•	•	•	•	
<b>C8</b>	Stra		Ø 8	_	•	•	•	•	2 10
C10	] ,		Ø 10	_	_	•	_	•	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
C12			Ø 12	_	_	•	_		No.
CM*1		Mi	xed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		rd	Ø6	•	•	•	_	_	
L8		Upward	Ø 8	_	•	•	_	_	
L10	<b>2</b>	5	Ø 10	_	-	•	_	_	
L12			Ø 12	_	_	•	_	_	al Sale
B4		_	Ø 4	•	•	_	_	_	
B6	읦	/arc	Ø 6	•	•	•		_	
B8	_	Downward	Ø 8	_	•	•	_	_	
B10		Do	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	_	
LM*1		Mi	xed sizes	•	•	•	_	_	
	P, E port*3		Ø8	Ø 10	Ø 12	Ø 10	Ø 12		

A, B port size (Inch/One-touch fitting)

,			<u>v</u> ,		<u> </u>					
	A, B port		Type 1	10/Side	Ported	Type 11/Bo	ttom Ported			
			SY3000	SY5000	SY7000	SY5000	SY7000			
N1			Ø 1/8"	•	_	_	_	_		
N3			Ø 5/32"	•	•	_	•	_		
N7	ig		Ø 1/4"	•	•	•	•	•		
N9	Straight		Ø 5/16"	_	•	•	•	•		
N11	0,		Ø 3/8"	_	_	•	_	•	o Day	
CM*1		Mi	xed sizes	•	•	•	•	•		
LN3	Elbow*2		Ø 5/32"	•	_	_	_	_		
LN7		ard	Ø 1/4"	•	•	_	_	_		
LN9		ğ	Ø 5/16"	_	•	_	_	_		
LN11		_	Ø 3/8"	_	_	•	_	_	0 50 50 50	
BN3		N3 <sup>∞</sup> ≥	9	Ø 5/32"	•	_	_	_	_	
BN7		wal	Ø 1/4"	•	•	_	_	_		
BN9		NWC	Ø 5/16"	_	•	_	_	_		
BN11		ŏ	Ø 3/8"	_	_	•	_	_	Teller 1	
LM*1		Mi	xed sizes	•	•	•	_	_		
	P, E port*3		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"			

- \*1: Indicate the sizes on the manifold specification sheet.
- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).
- \*3: The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### 8 Mounting and Option

	Mounting	Option		
	Mounting		Station number	
_	Divost	_	_	
AA	Direct mounting	•	•	
BA		•	_	
<b>D</b> □*1	DIN!!	_	_	
<b>A</b> □*1	*1 DIN rail mounting			
<b>B</b> □*1		•	_	

- \*1: Refer to "DIN Rail Option" below.
- \*: Select the direct mounting type for Type 11 (Bottom ported).

#### **DIN Rail Option**

_	With DIN bracket, DIN rail with standard length
0	With DIN bracket, without DIN rail
<b>3</b> *1	With DIN bracket, DIN rail for 3 stations
:	:
24*1	With DIN bracket, DIN rail for 24 stations

- \*1: Specify a longer rail than the length of valve stations.
- \*: If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 249 for the DIN rail part number.
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.



#### How to Order Valves (With mounting screw)

Standard (0.7 MPa)

Quick response type (0.7 MPa)

High pressure type (1.0 MPa)

(Continuous duty type)\*1\*2

**▶** Base mounted

6 Pilot valve option

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation					
1	O manitiam	Single			
2	2-position	Double			
3	3 4 3-position 5	Closed centre			
4		Exhaust centre			
5		Pressure centre			
<b>A</b> *1	4 maniting dual	N.C./N.C.			
B*1	4-position dual 3-port valve	N.O./N.O.			
C*1		N.C./N.O.			

\*1: Select the rubber seal type for the 4-position dual 3-port valve.


#### \*1: Select the metal seal type for high pressure type.

**K**\*1

7 co	il type
_	Standard
т	With power saving circuit

- \*1: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*2: Be careful of the energising time when the power saving circuit is selected. For details, refer to page 268.

#### Manual override

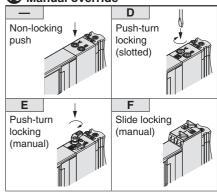

Refer to page 13 for valve specifications.

\*: Refer to page 31 for with the safety slide locking manual override.

#### 3 Seal type

=		
	0	Rubber seal
	1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

#### 5 Back pressure check valve

_	None
H*1	Built-in

- \*1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 256. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: Select "—" for 3-position type and the SY7000.

#### 8 Rated voltage

	atou rontago
5	24 V DC

# 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification			
R	_		Non nolor			
U	•		Non-polar			
NS	_	•	Negative			
NZ	•		common			

\*: Select "NZ" for with the power saving circuit.

#### Type of mounting screw

- 71	9
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)*1
Н	Hexagon socket head cap screw (Falling-out-prevention type)*1

- \*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: Select "—" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

Type 10/Side Ported EX500 (128 Points)


Valve


Plug-in Sub-plate

Plug-in Metal Base

Dimensions: Series SY3000

SS5Y3-10SA3N-Stations D-C2 C3, N1 (D) C6, N7 One-touch fitting [1(P), 3/5(E) port]

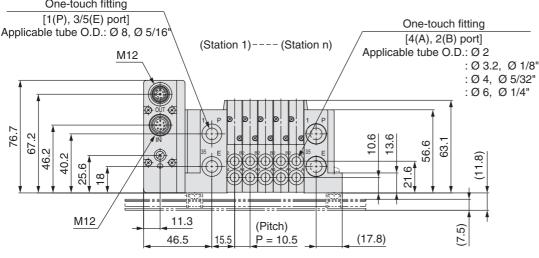

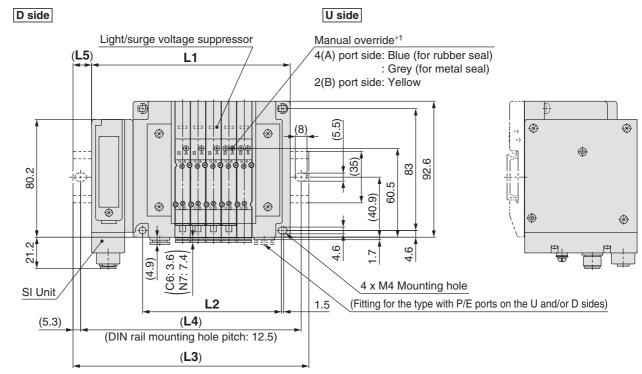

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10SA3N-05D-C6".

#### \*: Refer to page 210 for dimensions of A or B port top-ported type. L: Dimensions

L. Dillik	211310113											n: Static				
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	


L	17	18	19	20	21	22	23	24
L1	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	220.5	231	241.5	252	262.5	273	283.5	294
L3	285.5	298	310.5	323	335.5	348	348	360.5
L4	275	287.5	300	312.5	325	337.5	337.5	350
L5	12	13	14	15	16	17	12	13


Dimensions: Series SY5000

Plug-in Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

SS5Y5-10SA3N-Stations D-C6, N7 (D)

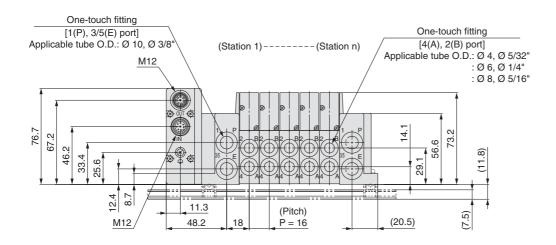

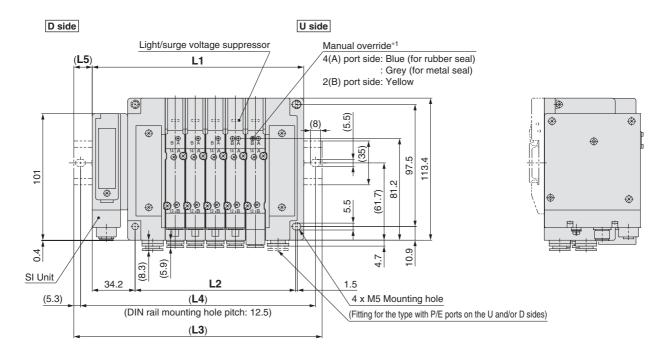

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10SA3N-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

L: Dimensions n: Stations

L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14


L	17	18	19	20	21	22	23	24
L1	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	320	336	352	368	384	400	416	432
L3	385.5	410.5	423	435.5	448	473	485.5	498
L4	375	400	412.5	425	437.5	462.5	475	487.5
L5	12.5	17	15	13.5	11.5	16	14.5	12.5


Plug-in
Connector Connecting Base

Type 10/Side Ported EX500 (128 Points)

# SS5Y7-10SA3N-Stations

Dimensions: Series SY7000

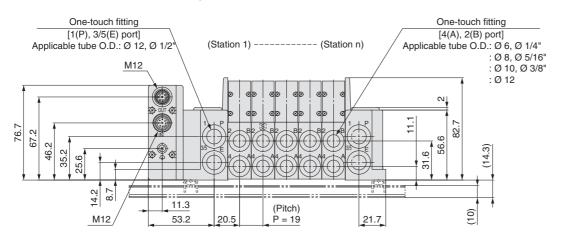

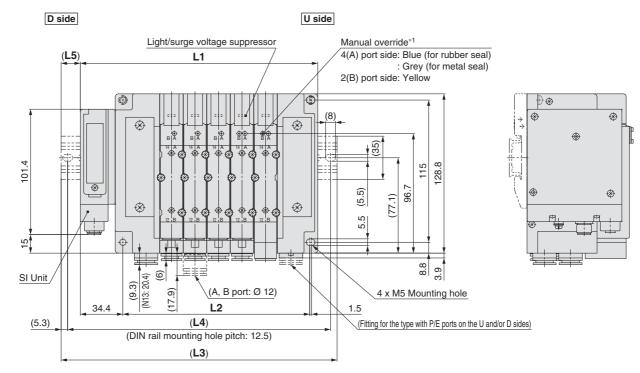

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10SA3N-05D-C10".
  - \*: Refer to page 212 for dimensions of A or B port top-ported type.

#### L: Dimensions

L

L_n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

L	17	18	19	20	21	22	23	24
L1	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	379	398	417	436	455	474	493	512
L3	448	473	485.5	510.5	523	548	560.5	585.5
L4	437.5	462.5	475	500	512.5	537.5	550	575
L5	14	17	14	17	13.5	16.5	13.5	16.5

n: Stations

Type 10
Side Ported

Type 11
Bottom Ported

## **Plug-in Connector Connecting Base**


**EX500 Gateway Decentralised System (64 Points)** 

# Series SY3000/5000/7000

( E RoHS

#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

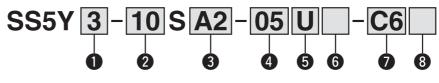

#### Series

3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 213 and later

#### 2 Type

10	Side ported
11	Bottom ported*1

- \*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).
- \*: When mixing top ported configurations, select from page 160. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

# 3 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit					
	16 outputs,					
A2	Positive common*1,					
	1 to 18 stations (16 stations)*2					
	16 outputs,					
A2N	Negative common*1,					
	1 to 18 stations (16 stations)*2					


- \*1: Ensure a match with the common specification of the valve to be used.
- \*2: ( ): Maximum number of stations for mixed single and double wiring.

#### 4 Valve stations

	Stations	Note							
02	2 stations								
:	;	Double wiring*1							
08	8 stations								
02	2 stations	Considered laws which							
:	:	Specified layout*2 (Available up to 16 solenoids)							
16	16 stations	(Available up to 16 soleriolds)							

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### How to Order Manifold Assembly

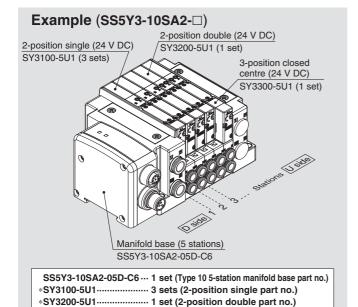

• The valve arrangement is numbered as the 1st station from the D side.

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

\*SY3300-5U1------ 1 set (3-position closed centre part no.)

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### **5** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

#### 6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

\*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 236 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

A, B port size (Metric/One-touch fitting)

				1				<u>,                                    </u>	
	A D		Type 1	10/Side	Ported	Type 11/Bo	ttom Ported		
		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø2	•	_	_	_	_	
СЗ			Ø 3.2	•	_	_	_	_	
C4			Ø 4	•	•	_	•	_	
C6	g		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	_	•	•	•	•	900
C10	0,		Ø 10	_	_	•	_	•	985.53
C12			Ø 12	<u> </u>	_	•	_	•	
CM*1		Mi	xed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		rd	Ø 6	•	•	•	_	_	
L8		Upward	Ø 8	_	•	•	_	_	
L10		υŗ	Ø 10	_	_	•	_	_	
L12			Ø 12	-	_	•	_	_	915
B4	Elbow*2		Ø 4	•	•	_	_	_	
B6	릚	ard	Ø 6	•	•		_	_	
B8		Downward	Ø 8	_	•	•	_	_	
B10		Dov	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	_	Toll
LM*1		Mixed sizes		•	•	•	_	_	
(Or	P, E port*3 (One-touch fittings)			Ø8	Ø 10	Ø 12	Ø 10	Ø 12	

A, B port size (Inch/One-touch fitting)

					<u> </u>								
		A, B port			0/Side								
				SY3000	SY5000	SY7000	SY5000	SY7000					
N1			Ø 1/8"	•	_	_	_	_					
N3			Ø 5/32"	•	•	_	•	_					
N7	ight		Ø 1/4"	•	•	•	•	•					
N9	Straight		Ø 5/16"	_	•	•	•	•					
N11	0)		Ø 3/8"	_	_	•	_	•	0 1983				
CM*1		Mi	xed sizes	•	•	•	•	•					
LN3			Ø 5/32"	•	_	_	_	_					
LN7		Jpward	Ø 1/4"	•	•								
LN9			Jpw	Ø 5/16"	_	•	_	_	_				
LN11	01	_	Ø 3/8"	_	_	•	_	_	el Sassan				
BN3	Elbow*2	rd	Ø 5/32"		_	_	_	_					
BN7	9	즲	albc	wa	wa	Wa	Ø 1/4"	•	•	_	_	_	
BN9	_	Downward	Ø 5/16"	_	•	_	_	-					
BN11		Ŏ	Ø 3/8"	_	_	•	_	_	To local de la constant de la consta				
LM*1		Mixed sizes		•	•	•	_	_					
(On	P, E port*3 (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"					

- \*1: Indicate the sizes on the manifold specification sheet.
- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).
- \*3: The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### **8** Mounting and Option

	Mounting	Option			
	Mounting	Name plate	Station number		
_	Divost	_	_		
AA	Direct mounting	•	•		
BA	mounting	•	_		
<b>D</b> □*1	DIN "	_	_		
<b>A</b> □*1	DIN rail mounting				
<b>B</b> □*1	mounting	•	_		

- \*1: Refer to "DIN Rail Option" below.
- \*: Select the direct mounting type for Type 11 (Bottom ported).

#### **DIN Rail Option**


_	With DIN bracket, DIN rail with standard length
0	With DIN bracket, without DIN rail
3*1	With DIN bracket, DIN rail for 3 stations
:	:
16*1	With DIN bracket, DIN rail for 16 stations

- \*1: Specify a longer rail than the length of valve stations.
- \*: If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 249 for the DIN rail part number.
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.



#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

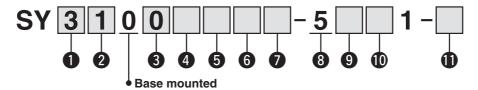

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

- ' '	oo o. aotaati	<b>V</b>					
1	2-position	Single					
2	z-position	Double					
3		Closed centre					
4	3-position	Exhaust centre					
5		Pressure centre					
<b>A</b> *1	4iti	N.C./N.C.					
<b>B</b> *1	4-position dual 3-port	N.O./N.O.					
C*1	dual 5-port	N.C./N.O.					

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	71
_	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

Coil type

	ii type
_	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

8 Rated voltage


5	24 V DC
-	27 0 00

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

\*: Only "Z" and "NZ" are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI Unit specification is A2N (negative common).

#### Manual override

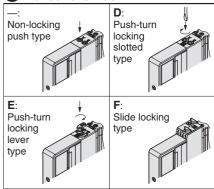

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Manifold Options


Plug-in Connector Connecting Base

Type 10/Side Ported EX500 (64 Points)

Dimensions: Series SY3000

# SS5Y3-10SA2-Stations D-C2, N1 (D)

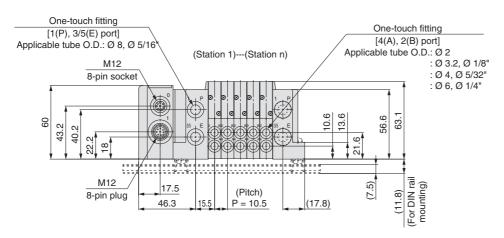

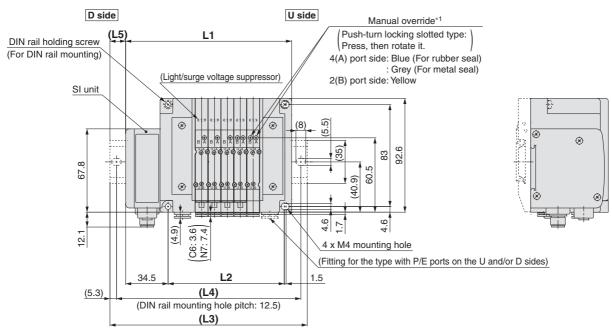

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10SA2-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5


Plug-in Connector Connecting Base


Type 10/Side Ported


**EX500 (64 Points)** 

Dimensions: Series SY5000

## SS5Y5-10SA2-Stations D - C6, N7 (D)

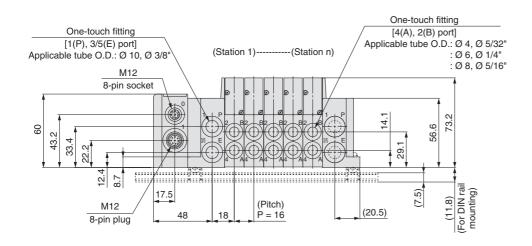

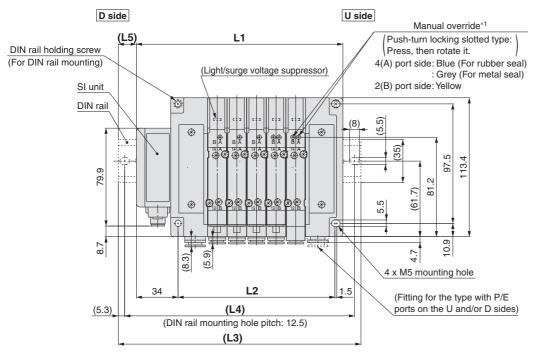

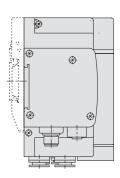

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10SA2-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5





Plug-in Connector Connecting Base


Type 10/Side Ported EX500 (64 Points)

Dimensions: Series SY7000

# SS5Y7-10SA2-Stations D - C6, N7 C8, N9 D - C12, N11 (D)

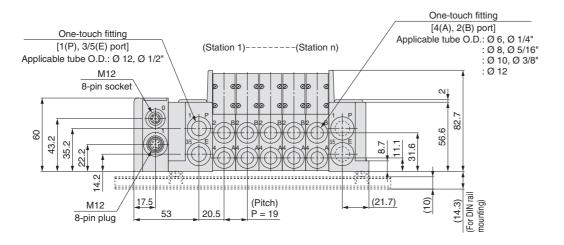

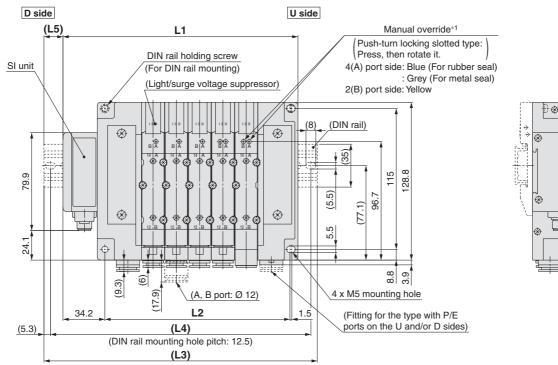

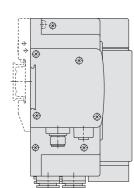

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10SA2-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.7	153.7	172.7	191.7	210.7	229.7	248.7	267.7	286.7	305.7	324.7	343.7	362.7	381.7	400.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

## Plug-in Connector Connecting Base

**EX500 Gateway Decentralised System 2 (128 Points)** 

# Type 12 Top Ported

# Series SY3000/5000/7000



#### **How to Order Manifold**



#### 1 Series

12/Top ported type.

9 33	
3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 213 and

#### 2 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
	32 outputs*1*4, 1 to 16 stations (24 stations*3), Negative common*2

- \*1: 16 outputs can be set by switching the built-in setting switch.
- \*2: Ensure a match with the common specification of the valve.
- \*3: ( ): Maximum number of stations for mixed single and double wiring.
- \*4: When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### **Valve stations**

		Stations	Note
	02	2 stations	
	:	:	Double wiring*1
Ì	16	16 stations	
	02	2 stations	Cranified leve whi?
	:	i	Specified layout*2 (Available up to 32 solenoids
	24	24 stations	(Available up to 32 solellolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### 4 P. E port entry

U*1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry.

#### 5 SUP/EXH block assembly

_	Internal pilot	
<b>S</b> *1	Internal pilot, Built-in silencer*2	
R	External pilot	

- \*1: For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*2: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### **How to Order Manifold Assembly**

# **Example** 2-position double Manifold base

SS5Y3-12SA3N-05D ......1 set (Manifold base part number) \* SY3230-5U1-C6-----5 sets (2-position double part number) The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. • Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

#### 6 P. E port size (One-touch fittings)

_ ,	• `			
	SY3000	SY5000	SY7000	D
_	Ø 8	Ø 10	Ø 12	
<b>N</b> *1	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*1: For "N", sizes are in inches.

#### Mounting

_	Direct mounting
D	With DIN bracket, DIN rail with standard length
D0	With DIN bracket, without DIN rail
D3*1	With DIN bracket, DIN rail for 3 stations
:	:
D24*1	With DIN bracket, DIN rail for 24 stations

- \*1: Specify a longer rail than the length of valve stations.
- \*: If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 249 for the DIN rail part number.
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.
- \*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 235 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

#### How to Order Valves (With mounting screw)

• Top ported

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>		
1	2-position	Single
2		Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4 111 1 1	N.C./N.C.
B*1	4-position dual 3-port valve	N.O./N.O.
C*1		N.C./N.O.

\*1: Select the rubber seal type for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

_	Internal pilot
R	External pilot

#### **5** Back pressure check valve (Built-in valve type)

	1 /1	<i>,</i> ,
_	None	
H*1	Built-in	

- \*1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 256. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \*: Select "—" for 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Select the metal seal type for high pressure type.

#### Coil type

• con type		
_	Standard	
Т	With power saving circuit (Continuous duty type)*1*2	

- \*1: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*2: Be careful of the energising time when the power saving circuit is selected. For details, refer to page 268.

#### 8 Rated voltage


5	24 V DC

# 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R U	_ •	•	Non-polar
NS	_		Negative
NZ	•		common

\*: Select "NZ" for with the power saving circuit.

#### Manual override

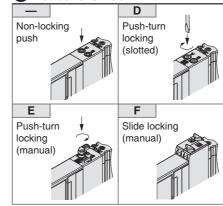

\*: Refer to page 31 for with the safety slide locking manual override.

#### 1 A, B port size

#### Thread piping

	Port size	SY3000	SY5000	SY7000
M5	M5 x 0.8		_	_
01	1/8	_		_
02	1/4	_	_	•

Refer to page 13 for valve specifications.

#### One-touch fitting (Metric)

	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		_	_
СЗ	Ø 3.2	•	_	_
C4	Ø 4	•	•	_
C6	Ø 6	•	•	•
C8	Ø 8	_		
C10	Ø 10	_		
C12	Ø 12	_	_	

#### One-touch fitting (Inch)

	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	_	_
N3	Ø 5/32"	•	•	_
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•

#### 12 A, B port thread type

_	Rc
F	G
N	NPT
Т	NPTF

\*: Select "—" for M5.

#### 13 Type of mounting screw


_	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type*1)	
Н	Hexagon socket head cap screw (Falling-out-prevention type*1)	

- \*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: Select "—" or "K" for the optional individual SUP/EXH spacer assembly or interface regulator.

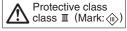

# Plug-in Connector Connecting Base


**EX500 Gateway Decentralised System (64 Points)** 

Type 12
Top Ported

# Series SY3000/5000/7000



#### **How to Order Manifold**

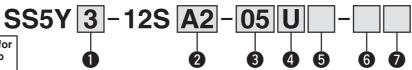

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

U Sei	ries
3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 213 and later.

# 2 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit	
A2 Positive common*1, 1 to 8 stations (16 stations)*2		
A2N	16 outputs, Negative common*1, 1 to 8 stations (16 stations)*2	

- \*1: Ensure a match with the common specification of the valve to be used.
- \*2: ( ): Maximum number of stations for mixed single and double wiring.

#### 4 P, E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

\*1: ⑤ For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

_	Internal pilot	
S	Internal pilot/Built-in silencer	
R	External pilot	


- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### 3 Valve stations

_			
Symbol	Stations	Note	
02	2 stations		
:	:	Specified layout*2	
08	8 stations		
02	2 stations		
:	:		
16	16 stations		

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout. \*2: Specified layout: Indicate the wiring.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### How to Order Manifold Assembly

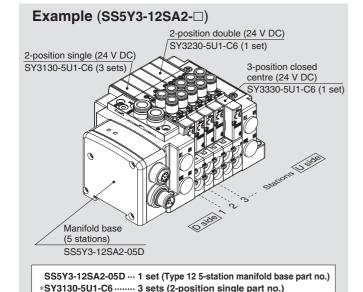

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*SY3230-5U1-C6 ········ 1 set (2-position double part no.)

\*SY3330-5U1-C6 ······· 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.

#### Mounting

_	Direct mounting		
D	With DIN bracket, DIN rail with standard length		
D0	With DIN bracket, without DIN rail		
D3*1	With DIN bracket, DIN rail for 3 stations		
:	:		
D16*1	With DIN bracket, DIN rail for 16 stations		


- \*1: Specify a longer rail than the length of valve stations.
- \*: If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 249 for the DIN rail part number.
- Refer to page 271 for the fixation of DIN rail mounting type manifold.
- \*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 236 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



#### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

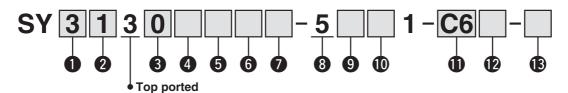

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

- 1)   0   1   1   1   1   1   1   1   1   1		
1	2-position	Single
2		Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	<b>A</b> *1 <b>B</b> *1 4-position dual 3-port	N.C./N.C.
		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

9 00.	a, po
0	Rubber seal
1	Metal seal

#### 4 Pilot type

	Internal pilot	_
R	External pilot	

# Back pressure check valve (Built-in valve type)

(= 0		
	_	None
	Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

<u> </u>	
_	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage


Tia	eu voitage	
5	24 V DC	

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

\*: Select "Z" or "NZ" for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI Unit specification is A2N (negative common).

#### Manual override

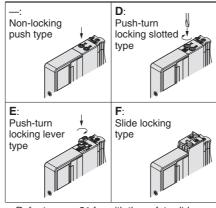

\*: Refer to page 31 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

		,		
Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2		_	_
C3	Ø 3.2		_	_
C4	Ø 4	•		_
C6	Ø 6	•	•	•
C8	Ø 8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•

#### One-touch fitting (Inch)

00	todon ntting (n	,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"	•		_
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	_	
			•	•

Thread type

_	Rc
F	G
N	NPT
Т	NPTF

\*: Only — is available for M5.

#### 13 Type of mounting screw

	· · · · · · · · · · · · · · · · ·
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.
\*: "B" and "H" cannot be selected for the

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

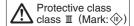



Type 10
Side Ported
Type 11
Bottom Ported

# **Plug-in Connector Connecting Base**

**EX600** 

# Series SY3000/5000/7000

( E RoHS

#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

# SS5Y3-10S6Q 2-05U-C6 0 0 0 0 0 0 0

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### **2** Type

	10	Side ported
	11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

#### 3 SI Unit

0	Without SI Unit	
Q	DeviceNet™	
N	PROFIBUS DP	
V	CC-Link	
ZE	EtherNet/IP™ (1 port)	
EA	EtherNet/IP™ (2 ports)	
D	EtherCAT®	
F	PROFINET	

- \*: I/O Unit cannot be mounted without SI Unit.
- \*: Valve plate which connects manifold and SI Unit is not mounted to a valve without SI Unit. Refer to the EX600 catalogue (CAT.EU02-24E-UK) for mounting.

#### 4 SI Unit output polarity, end plate type

O or other back have	,, e	17 19 19
SI Unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector
Without SI Unit	_	_
SI Unit positive common	2	3
SI Unit negative common	4	5

- \*: Ensure a match with the common specification of the valve to be used.
- \*: Without SI Unit, the symbol is -..

**5** I/O Unit stations

_	None
1	1 station
:	:
9	9 stations

- \*: Without SI Unit, the symbol is -
- \*: SI Unit is not included in I/O Unit stations.
- \*: When I/O Unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

#### 6 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Considered laws with 2
:	:	Specified layout*2 (Available up to 32 solenoids)
24	24 stations	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

9 Mounting and Option

Symbol	Marratina	Option		
Symbol	Mounting	Name plate	Station number	
_	B: .	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN rail	_	_	
A□	mounting	•	•	
В□	mounting	•	_	

- \*: Enter the number of stations inside 
   □ when it
   is larger than the number of valve stations.
   (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

_	Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Consider a language wail them the		
:	:	Specify a longer rail than the total length of specified stations.		
24	For 24 stations	total length of specified stations.		

\*: If the DIN rail must be mounted without an SI Unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 249 for the DIN rail part number.)

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 8.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 237 and 238 in this catalogue. (IP40 specifications may be required according to the I/O Unit to be selected.) Please download the Operation Manual via SMC website, **http://www.smc.eu** 



8 A, B port size (Metric/One-touch fitting)

	, ,							1	
Symbol		۸	B port		0/Side			ttom ported	
Syllibol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø2	•	_	_	_	_	_
СЗ			Ø 3.2	•	_	_	_	_	
C4	l		Ø 4	•	•	_	•	_	
C6	ight		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	_	•	•	•	•	
C10	0,		Ø 10	_	_	•	_	•	9 3 5
C12			Ø 12	_	_	•	_	•	- Jan
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		5	Ø6	•	•	•	_	_	
L8		Upward	Ø 8	_	•	•	_	_	
L10		J	Ø 10	_	_	•	_	_	
L12			Ø 12	_	_	•	_	_	Jel 1940
B4	Elbow*2		Ø 4	•	•	_	_	_	
B6	쯽	Downward	Ø6	•	•	•	_	_	
B8	_	۸U	Ø 8	_	•	•	_	_	
B10		Dov	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	_/	Toll Toll
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)		Ø8	Ø 10	Ø 12	Ø 10	Ø 12			


A, B port size (Inch/One-touch fitting)

							<u> </u>			
Cumbal		۸	D nort			•	Type 11/Bo			
Symbol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000			
N1			Ø 1/8"	•	_	_	_	_		
N3		!	Ø 5/32"	•	•	_	•	_		
N7	igh	Ø 1/4"		•	•	•	•	•		
N9	Straight		Ø 5/16"	_	•	•	•	•		
N11	0,		Ø 3/8"	_	_	•	_	•	0 1585	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
LN3			Ø 5/32"	•	_	_	_	_		
LN7		Jpward	Ø 1/4"	•	•	_		_		
LN9		ď	Ø 5/16"	_	•	_	_	_		
LN11	01		Ø 3/8"	_	_			_	O De Santa	
BN3	Elbow*2	rd	Ø 5/32"	•	_	_	_	_		
BN7	흶	Ellbc	Wa	Ø 1/4"	•	•	-	_	_	
BN9		<b>Downward</b>	Ø 5/16"	_	•	-	_	_		
BN11	۵	Ŏ	Ø 3/8"	_	_			_	To be	
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
			rt size h fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

- \*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".


  The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.
- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

#### **How to Order Manifold Assembly**

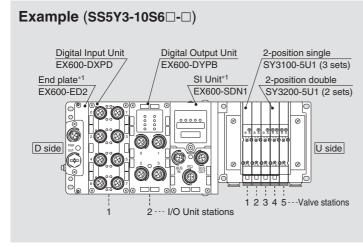

- - → The asterisk denotes the symbol for assembly.


    Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure on the left.
   If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together.
- \*: When mixing top ported configurations, select from page 172. In this case, use caution as there is also output on the A and B port on base side.
- Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

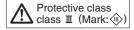



#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

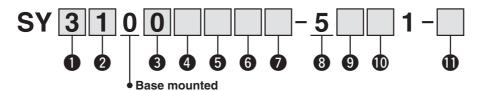

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• Type of detadlion					
1	O position	Single			
2	2-position	Double			
3		Closed centre			
4	3-position	Exhaust centre			
5		Pressure centre			
<b>A</b> *1	4-position dual 3-port	N.C./N.C.			
<b>B</b> *1		N.O./N.O.			
C*1		N.C./N.O.			

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

	_	None
ſ	Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)		
B Quick response type (0.7 MPa)			
<b>K</b> *1	High pressure type (1.0 MPa)		

\*1: Only metal seal type is available for the high pressure type.

Coil type

	Con type				
_	Standard				
Т	With power saving circuit (Continuous duty type)				

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

8 Rated voltage

5 24 V DC


# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Non-polai
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI Unit output polarity is negative common.
- output polarity is negative common.

  \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

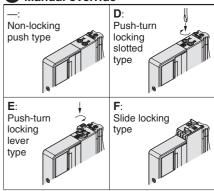

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance
  - Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Plug-in
Connector Connecting Base

Type 10/Side Ported EX600 (M12 Connector)

Dimensions: Series SY3000

One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: Ø 2 : Ø 3.2, Ø 1/8" (Station 1)---(Station n) : Ø 4, Ø 5/32" : Ø 6, Ø 1/4" 56.6 63. (X) (X) ⊗ ⊗ 9 8 2 (For DIN rail mounting) One-touch fitting (Pitch) [1(P), 3/5(E) port] P = 10.518.3 15.5 (17.8)Applicable tube O.D.: Ø 8, Ø 5/16"

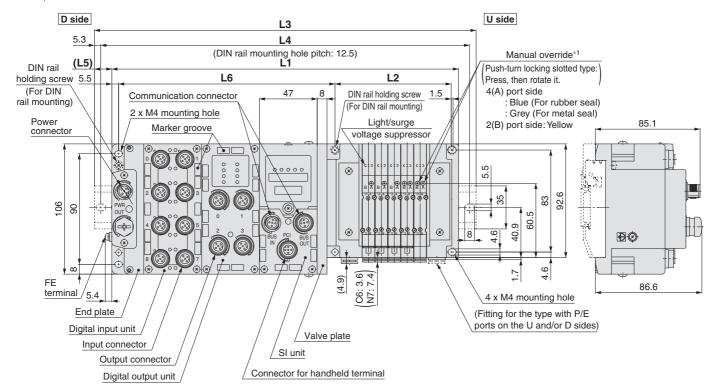

L1 = 10.5 x n1 + 135.5 + 47 x n2

 $L2 = 10.5 \times n1 + 42$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = 47 x n2 + 82

n1: Valve stations n2: I/O Unit stations


- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10S6Q22-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

#### L3: DIN Rail Overall Length

L3: DIN R		eran	rení	Jui																			
Valve stations (n1) stations (n2)	1	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5
2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5
3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5
4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5
5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648
6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698
7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798
9	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798	810.5	823	835.5	835.5

Plug-in Type 10/Side Ported
Connector Connecting Base EX600 (7/8 Inch Connector)

Dimensions: Series SY3000

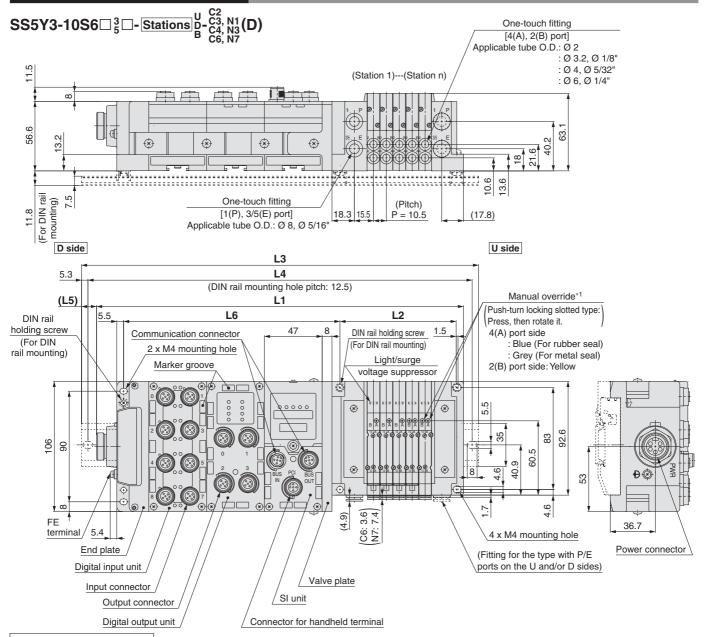

 $L1 = 10.5 \times n1 + 152 + 47 \times n2$ 

 $L2 = 10.5 \times n1 + 42$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 82$ 


n1: Valve stations n2: I/O Unit stations

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10S6Q32-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

#### L2: DIN Pail Overall Length

L3: DIN Ra		reraii	rend	jui																			
Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5

Plug-in Connector Connecting Base Type 10/Side Ported EX600 (M12 Connector)

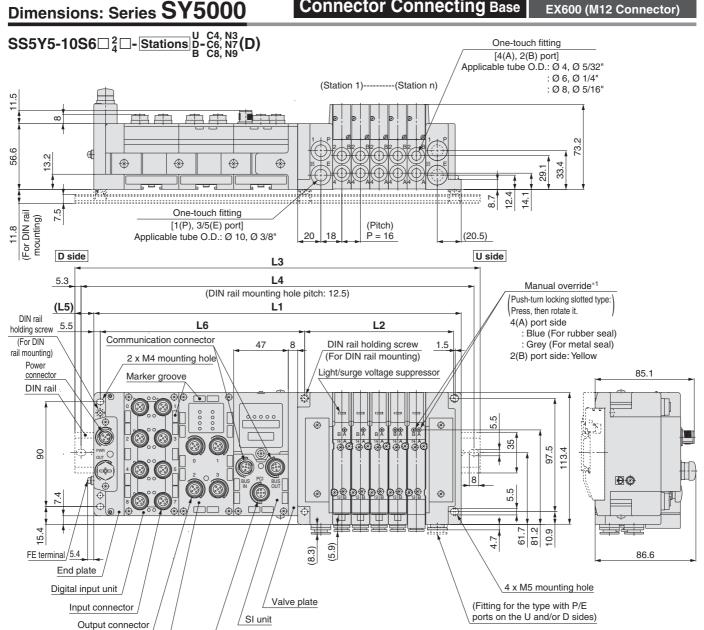

L1 = 16 x n1 + 141.5 + 47 x n2

Digital output unit

 $L2 = 16 \times n1 + 48$ L4 = L3 - 10.5

L5 = (L3 - L1)/2

L6 = (L3 - L1)/2 $L6 = 47 \times n2 + 81.5$ 

n1: Valve stations n2: I/O Unit stations

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10S6Q22-05D-C8".

Connector for handheld terminal


\*: Refer to page 211 for dimensions of A or B port top-ported type.

#### L3: DIN Rail Overall Length

L3: DIN R	all Ov	eraii	Leng	jtn																			
Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973

Plug-in **Connector Connecting Base**  Type 10/Side Ported

EX600 (7/8 Inch Connector)

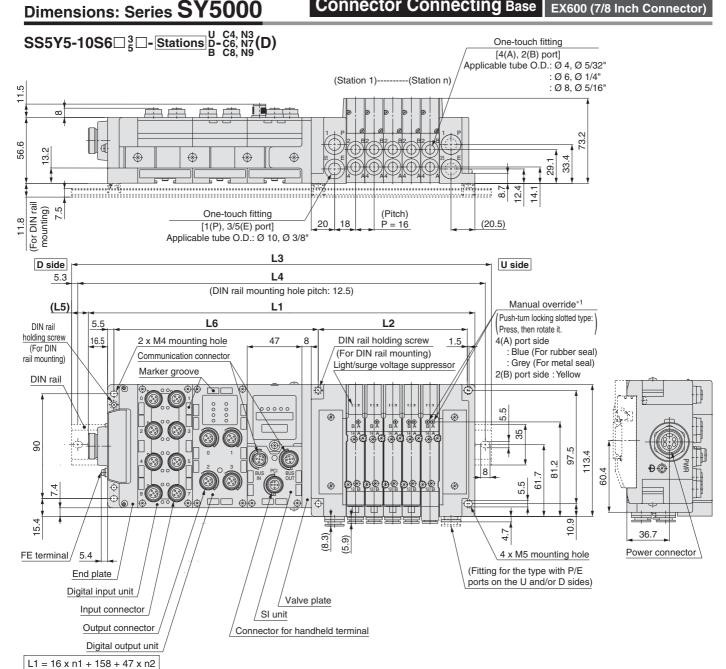

- $L2 = 16 \times n1 + 48$ L4 = L3 - 10.5
- L5 = (L3 L1)/2 $L6 = 47 \times n2 + 81.5$ n1: Valve stations

n2: I/O Unit stations

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10S6Q32-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

#### L2: DIN Pail Overall Length

L3: DIN R		eran	rend	Jui																			
Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	_


Manifold Options

Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

Plug-in Type 10/Side Ported Connector Connecting Base EX600 (M12 Connector)

Dimensions: Series SY7000

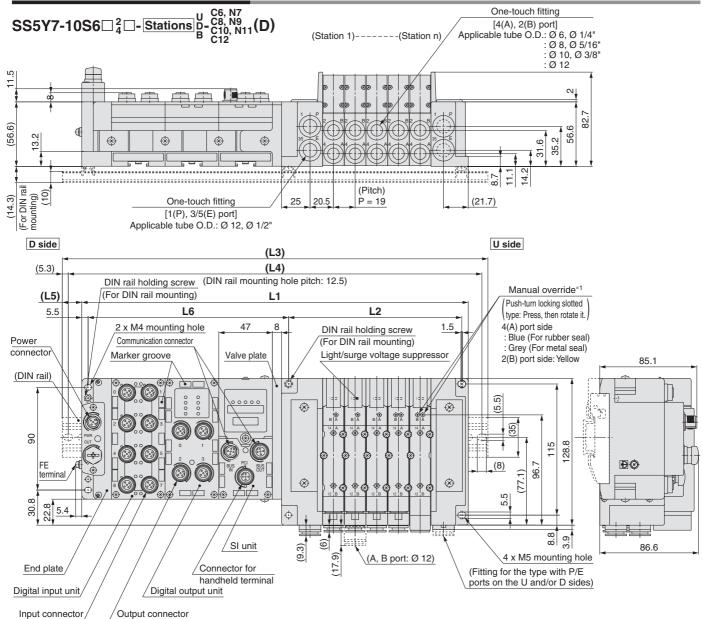

- $L1 = 19 \times n1 + 149.7 + 47 \times n2$
- $L2 = 19 \times n1 + 56$
- L3 = DIN rail dimension
- L4 = L3 10.5
- L5 = (L3 L1)/2
- $L6 = 47 \times n2 + 81.7$
- n1: Valve stations n2: I/O Unit stations
- L3: DIN Rail Overall Length

EO. DIIT III	• •	O. a		<u>,</u>																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5
2	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723
3	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	760.5	773
4	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823
5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	648	660.5	685.5	698	723	735.5	760.5	773	798	810.5	835.5	848	873
6	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	923
7	548	560.5	585.5	598	623	635.5	660.5	673	698	723	735.5	760.5	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5
8	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	_	_
9	635.5	660.5	673	698	710.5	735.5	748	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5	985.5	_	_	_	_


\*: These figures show the "SS5Y7-10S6Q22-05D-C10".

\*: Refer to page 212 for dimensions of A or B port top-ported type.

\*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Plug-in **Connector Connecting Base**  Type 10/Side Ported

EX600 (7/8 Inch Connector)

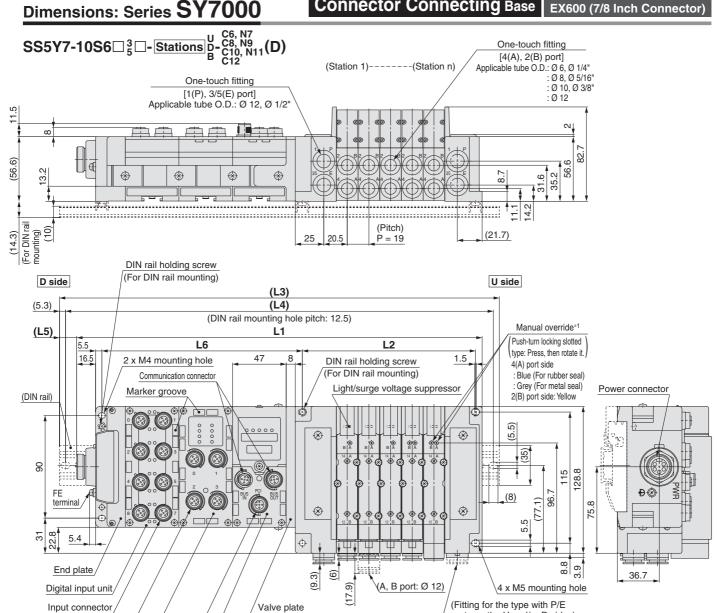

 $L1 = 19 \times n1 + 166.2 + 47 \times n2$ 

Digital output unit

Output connector

 $L2 = 19 \times n1 + 56$ 

L4 = L3 - 10.5L5 = (L3 - L1)/2

 $L6 = 47 \times n2 + 81.7$ 

n1: Valve stations n2: I/O Unit stations \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

ports on the U and/or D sides)

- \*: These figures show the "SS5Y7-10S6Q32-05D-C10". \*: Refer to page 212 for dimensions of A or B port top-ported type.

/SI unit

Connector for handheld terminal

L3: DIN Rail Overall Length

LJ. DIN NO	411 O V	Ciuii	FCII	J																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	_	_
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	_	_	_	_	_

**SMC** 

# Plug-in Connector Connecting Base

**EX600** 

Type 12
Top Ported

# Series SY3000/5000/7000 CE

**How to Order Manifold** 

SS5Y 3-12S6 Q 2-05 U-

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI Unit

_	
0	Without SI Unit
Q	DeviceNet™
N	PROFIBUS DP
V	CC-Link
ZE	EtherNet/IP™ (1 port)
EA	EtherNet/IP™ (2 ports)
D	EtherCAT®
F	PROFINET

- \*: I/O Unit cannot be mounted without SI Unit.
- \*: Valve plate which connects manifold and SI Unit is not mounted to a valve without SI Unit. Refer to the EX600 catalogue (CAT.EU02-24-UK) for mounting.

#### 3 SI Unit output polarity, end plate type

SI Unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector
Without SI Unit	_	-
SI Unit positive common	2	3
SI Unit negative common	4	5

- \*: Without SI Unit, the symbol is -
- \*: Ensure a match with the common specification of the valve to be used.

#### 4 I/O Unit stations

_	None
1	1 station
:	:
9	9 stations


- \*: Without SI Unit, the symbol is -
- \*: SI Unit is not included in I/O Unit stations.
- \*: When I/O Unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

#### 5 Valve stations

_		
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Considered lawayee*2
:	:	Specified layout*2 (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soleriolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

#### **How to Order Manifold Assembly**

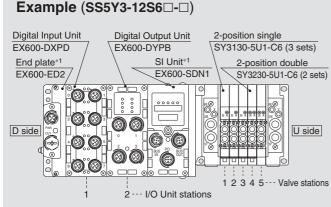

SS5Y3-12S6Q42-05B 1 set (Type 12 5-station manifold base part no.)
*SY3130-5U1-C6 3 sets (2-position single part no.)
*SY3230-5U1-C62 sets (2-position double part no.)
*EX600-DXPD 1 set I/O Unit part number (Station 1)
*EX600-DYPB 1 set I/O Unit part number (Station 2)
The asterisk denotes the symbol for assembly.  Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted, then
  the I/O Units in order from the 1st station as shown in the figure above.
  If the arrangement becomes complicated, specify on a manifold specification
  sheet.
- \*1: Do not enter the SI Unit part number and the end plate part number together.

#### 6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C*1	G
D side (2 to 10 stations)	D	E*1	Н
Both sides (2 to 24 stations)	В	_	J

- \*1: For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	D
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.

#### **8** Mounting

	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations	Specify a longer rail
:	:	than the standard length.
D24	For 24 stations	than the standard length.


- \*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 237 and 238 in this catalogue. (IP40 specifications may be required according to the I/O Unit to be selected.) Please download the Operation Manual via SMC website, http://www.smc.eu



#### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

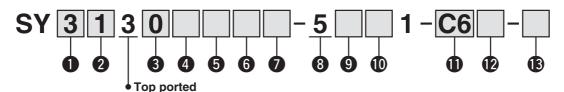

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

O Type of dotadtion		
1	2-position	Single
2		Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> *1		N.O./N.O.
C*1		N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

#### **5** Back pressure check valve

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Con type	
_	Standard
T	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage


5	24 V DC

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		
S	_	•	Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI Unit output polarity is negative common.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

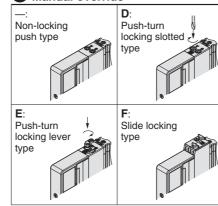

\*: Refer to page 31 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

	11 0				
Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000	
C2	Ø2	•	_	_	
C3	Ø 3.2	•	_	_	
C4	Ø 4	•		_	
C6	Ø 6				
C8	Ø 8	_	•		
C10	Ø 10	_	_		
C12	Ø 12		_	•	

#### One-touch fitting (Inch)

00	one reason maning (mon)				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	Ø 1/8"		_	_	
N3	Ø 5/32"	•	•	_	
N7	Ø 1/4"	•	•	•	
N9	Ø 5/16"	_	•		
N11	Ø 3/8"	_	_	•	
			•	•	

#### 12 Thread type

_	71
_	Rc
F	G
N	NPT
Т	NPTF

\*: Only - is available for M5.

#### Type of mounting screw


_		Round head combination screw
B Hexagon socket head ca		Hexagon socket head cap screw
K Rou		Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

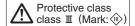



Type 10
Side Ported

Type 11
Bottom Ported

# **Plug-in Connector Connecting Base**

**EX250** 

# Series SY3000/5000/7000

 $\epsilon$ 

#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

# SS5Y3-10SQ -05U-C6 0 2 6 4 5 6 9 8 9

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type

<u> </u>		
10	Side ported	
11	Bottom ported*1	

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

#### 4 Input block stations

_	None	
1	1 station	
:	:	
8	8 stations	

\*: Without SI Unit, the symbol is —. The maximum number of stations is limited for the AS-Interface applicable SI Unit.

#### 3 SI Unit

0	Without SI Unit			
Q	DeviceNet™ (Negative common)			
N	PROFIBUS DP (Negative common)			
V	CC-Link (Positive common)			
TA			8 in/8 out, 31 slave modes	
TB	AS-Interface		4 in/4 out, 31 slave modes	
TC	(Negative common)	1 power	8 in/8 out, 31 slave modes	
TD	oommon)	supply systems	4 in/4 out, 31 slave modes	
Υ	CANopen (Negative common)			
ZE	EtherNet/IP™ (Negative common)			

- \*: Ensure a match with the common specification of the valve to be used.
- \*: Input block cannot be mounted without SI Unit.
- \*: The supply current from the SI Unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

#### **5** Input block type

<u> </u>				
	PNP	NPN		
	sensor input	sensor input		
Without input block	_	_		
M12, 2 inputs	Α	D		
M12, 4 inputs	В	E		
M8, 4 inputs	С	F		


\*: Without SI Unit, the symbol is -..

#### **6** Valve stations

	<u> </u>					
Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring*1				
16	16 stations					
02	2 stations	Considered lawares				
:	:	Specified layout*2 (Available up to 32 solenoids)				
24	24 stations					

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
  - 8 in/8 out specification: Max. 8 solenoids
  - 4 in/4 out specification: Max. 4 solenoids
- \*: This also includes the number of blanking plate assembly.
- \*: For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

# How to Order Manifold Assembly

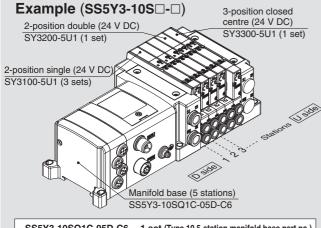

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 180. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 239 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



A. B port size (Metric/One-touch fitting)

	н,	P	ort size	(wetri	c/One	-toucn	mung	3)	
Cumbal	A, B port		Type <sup>-</sup>	10/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
C2			Ø 2	•	_	_	_	_	
СЗ			Ø 3.2	•	_	_	_	_	DE
C4			Ø 4	•	•	_	•	_	
C6	Straight		Ø 6	•	•	•	•	•	
<b>C8</b>	Stra		Ø 8	_	•	•	•	•	100
C10			Ø 10	_	_	•	_	•	O S S S S
C12			Ø 12	_	_	•	_	•	<b>₩</b>
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		5	Ø6	•	•	•	_	_	
L8		Upward	Ø8	_	•	•	_	_	
L10	=	5	Ø 10	_	_	•	_	_	
L12			Ø 12	_	_	•	_	_	العالمات الع
B4	Elbow*2	_	Ø 4	•	•	_	_	_	
B6	e e	/arc	Ø6	•	•	•	_	_	
B8		Downward	Ø 8	_	•	•	_	_	
B10		õ	Ø 10	_	_	•	_	_	3555
B12	2		Ø 12	_	_	•	_	_	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)			Ø8	Ø 10	Ø 12	Ø 10	Ø 12	

A, B port size (Inch/One-touch fitting)

	1-		3126 (1116				3/			
Cumbal		A. D. mont		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000			
N1			Ø 1/8"	•	_	_	_	_		
N3	_	9	Ø 5/32"	•	•	_	•	_		
N7	igh		Ø 1/4"	•	•	•	•	•		
N9	Straight	,	Ø 5/16"	_	•	•	•	•		
N11	٠,		Ø 3/8"	_	_	•	_	•	01897	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
LN3			Ø 5/32"	•	_	_	_	_		
LN7		ow*2 rd Upward	Ø 1/4"	•	•	_	_	_		
LN9			Ø 5/16"	_	•	_	_	_		
LN11	٥.		Ø 3/8"	_	_	•	_		O See See	
BN3	,* MC		Ø 5/32"	•						
BN7	Elbow*2	Elbo	을 음	Ø 1/4"	•	•		_	_	
BN9			owr	Ø 5/16"	_	•	_	_	_	
BN11			Ø 3/8"	—	_	•	_	_	To the state of th	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
P, E port size (One-touch fittings)				Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

- \*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting
- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

9 Mounting and Option


Symbol	Mounting	Option		
Syllibol	wounting	Name plate	Station number	
_	Discost	_	_	
AA	Direct mounting	•	•	
BA		•	_	
D□	DIM	_	_	
A□	DIN rail mounting	•	•	
В□		•	_	

DIN Rail Option

_	Direct mounting				
0	Without DIN rail (with bracke				
3	For 3 stations	Specify a longer			
:	:	rail than the total length of specified			
24 For 24 stations		stations.			

- \*: Enter the number of stations inside ☐ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)


  \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.
- \*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)

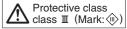



#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

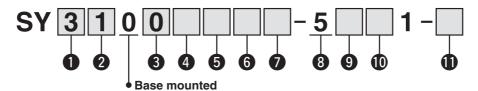

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single		
2		Double		
3	3-position	Closed centre		
4		Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4iti	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1		N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

# Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

	O I had take a parati					
— Standard (0.7 MPa)						
В	Quick response type (0.7 MPa)					
<b>K</b> *1	High pressure type (1.0 MPa)					

\*1: Only metal seal type is available for the high pressure type.

Coil type

9	ni type
_	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

8 Rated voltage


5	24 V DC
---	---------

# 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
		Suppressor	Specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: "R" and "U" are applicable for every SI Unit. However, "S" and "Z" can be used only for CC-Link applicable Unit and "NS" and "NZ" are for Units which are not CC-Link applicable.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

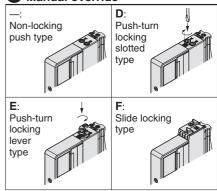

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Plug-in Connector Connecting Base


Type 10/Side Ported

EX250

Dimensions: Series SY3000

SS5Y3-10S - Stations D

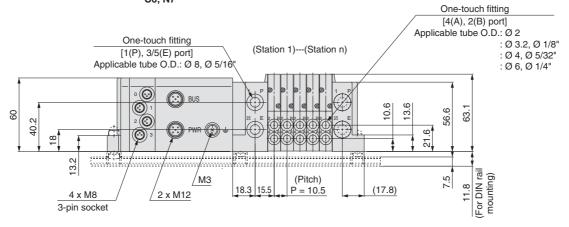

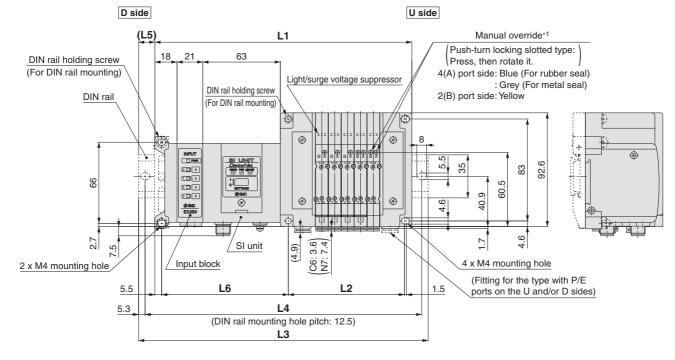

 $L1 = 10.5 \times n1 + 135.5 + 21 \times n2$ 

 $L2 = 10.5 \times n1 + 42$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 82$ 

n1: Valve stations

n2: Input block stations

L3: DIN Ra	ail Ov	erall	Leng	gth																			
Valve stations (n1) block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5

\*: These figures show the "SS5Y3-10SQ1A-05D-C6"

\*: Refer to page 210 for dimensions of A or B port top-ported type.

\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

**SMC** 

Plug-in Sub-plate

Valve

Plug-in Metal Base


Type 50, 51, 52 Manifold Exploded View


Dimensions: Series SY5000

Plug-in
Connector Connecting Base

Type 10/Side Ported

EX250

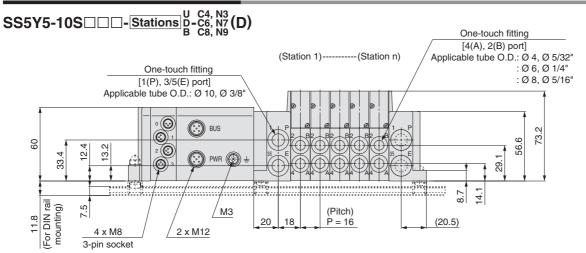

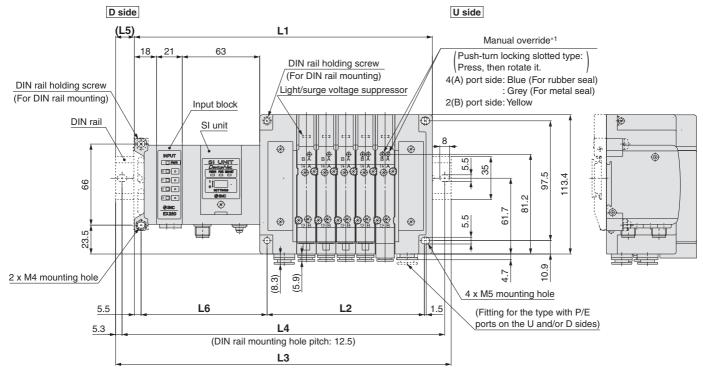

- $L1 = 16 \times n1 + 141.5 + 21 \times n2$  $L2 = 16 \times n1 + 48$
- L4 = L3 10.5
- L5 = (L3 L1)/2
- $L6 = 21 \times n2 + 81.5$
- n1: Valve stations
- n2: Input block stations
- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10SQ1A-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.


L3: DIN Ra	ail Ov	erall/	Leng	gth																			
Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
stations (n2)																							
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623
4	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
8	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5	673	685.5	710.5	723


Dimensions: Series SY7000

Plug-in
Connector Connecting Base

EX250

SS5Y7-10S - Stations D

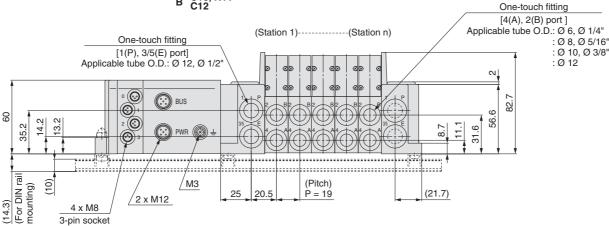

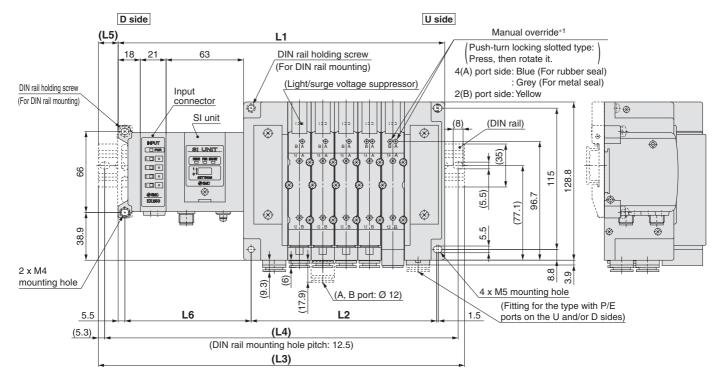

 $L1 = 19 \times n1 + 149.7 + 21 \times n2$  $L2 = 19 \times n1 + 56$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 21 \times n2 + 81.7$ 

n1: Valve stations n2: Input block stations

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10SQ1A-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall Length


Valve stations (n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
I/O Unit stations (n2)	1	J		3	,	•	3	3	.0	•		.0				.,	.0			-	1	1	<u>-</u> -T
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798

# Plug-in Connector Connecting Base

Type 12 Top Ported

# Series SY3000/5000/7000 < €

#### **How to Order Manifold**

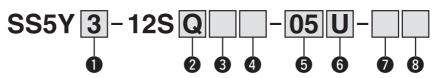

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

#### Series

3	SY3000
5	SY5000
7	SY7000

3 Input block stations

_	None								
1	1 1 station								
:	:								
8	8 stations								

\*: Without SI Unit, the symbol is -.. The maximum number of stations is limited for the AS-Interface applicable SI Unit.

4 Input block type

- Input bloom	, 60	
	PNP	NPN
	sensor input	sensor input
Without input block	_	_
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

\*: Without SI Unit, the symbol is --

#### 2 SI Unit

0	Without SI Unit									
Q		DeviceNet™ (Negative common)								
N	PROFIB	PROFIBUS DP (Negative common)								
V	CC-I	CC-Link (Positive common)								
TA		2 power	8 in/8 out, 31 slave modes							
TB	AS-Interface (Negative	AS-Interface supply systems 4 in/4 out, 31 slave mode:								
TC	common)	1 power	8 in/8 out, 31 slave modes							
TD		supply systems	4 in/4 out, 31 slave modes							
Υ	CANo	pen (Ne	gative common)							
ZE	EtherNe	EtherNet/IP™ (Negative common)								


- \*: Ensure a match with the common specification of the valve to be used.
- \*: Input block cannot be mounted without SI Unit.
- \*: The supply current from the SI Unit of AS-Interface applicable 1 power supply system specification to the input block and valve is

#### **5** Valve stations

$\overline{}$		
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	_
02	2 stations	Charified lavout*2
:	:	Specified layout*2 (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soletiolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
  - 8 in/8 out specification: Max. 8 solenoids 4 in/4 out specification: Max 4 solenoids
- \*: This also includes the number of blanking plate assembly.
- \*: For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### **How to Order Manifold Assembly**

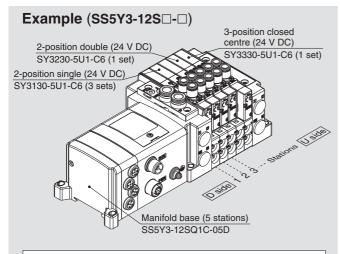

SS5Y3-12SQ1C-05D ··· 1 set (Type 12 5-station manifold base part no.) \*SY3130-5U1-C6...... 3 sets (2-position single part no.)

\*SY3230-5U1-C6...... 1 set (2-position double part no.) \*SY3330-5U1-C6------ 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order
- from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot		
U side (2 to 10 stations)	U	C*1	G		
D side (2 to 10 stations)	D	E*1	Н		
Both sides (2 to 24 stations)	В	_	J		

- \*1: For SUP/EXH block assembly specifications, built-in silencer types will have
- P port entry stipulated.

  \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.

#### Mounting

_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer	
:	:	rail than the	
D24	For 24 stations	standard length.	


- \*: If the DIN rail must be mounted without an SI Unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 249 for the DIN rail part number.)
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 239 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

# Manifold Options

#### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

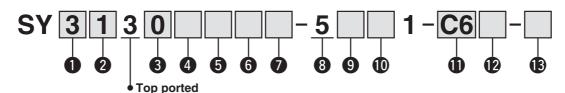

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• 1)   0   1   1   1   1   1   1   1   1   1				
1	0	Single		
2	2-position	Double		
3		Closed centre		
4 5	3-position	Exhaust centre		
		Pressure centre		
<b>A</b> *1	4	N.C./N.C.		
<b>B</b> *1	4-position dual 3-port	N.O./N.O.		
C*1		N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

	7.1	
0	Rubber seal	
1	Metal seal	

4 Pilot type

<u> </u>	ot typo
_	Internal pilot
R	External pilot

#### **5** Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

— Standard (0.7 MPa)				
B Quick response type (0.7 MPa				
<b>K</b> *1	High pressure type (1.0 MPa)			

\*1: Only metal seal type is available for the high pressure type.

#### Cail turns

Con type		
— Standard		
T With power saving circuit (Continuous du		

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### Rated voltage

#### Use in the second of the se and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	_		Non-polar		
U	•				
S			Positive		
Z	•		common		
NS			Negative		
NZ	•		common		

- \*: "R" and "U" are applicable for every SI Unit. However, "S" and "Z" can be used only for CC-Link applicable Unit and "NS" and "NZ" are for Units which are not CC-Link applicable.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

-: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type
D-f t 04 f	Calle Alle and a discussion of the late.

\*: Refer to page 31 for with the safety slide locking manual override.

#### A. B port size

#### Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
<b>01</b> 1/8 SY50		SY5000	
02 1/4		SY7000	

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2	•	_	_
C3	Ø 3.2	•	_	_
C4	Ø 4	•		_
C6	Ø 6			•
C8	Ø 8	_	•	•
C10	Ø 10	_	_	
C12	Ø 12		_	•

#### One-touch fitting (Inch)

0	one teach hang (men)				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	Ø 1/8"		_	_	
N3	Ø 5/32"	•	•	_	
N7	Ø 1/4"	•	•	•	
N9	Ø 5/16"	_	•	•	
N11	Ø 3/8"	_	_	•	

12 Thread type

_	71
_	Rc
F	G
N	NPT
Т	NPTF

\*: Only - is available for M5.

#### Type of mounting screw


<ul> <li>Round head combination screw</li> </ul>		
B Hexagon socket head cap screw		
Round head combination screw (Falling-out-prevention		
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

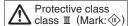



Type 10
Side Ported
Type 11
Bottom Ported

## **Plug-in Connector Connecting Base**

**EX260** 

## Series SY3000/5000/7000

( RoHS

#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.



#### Series

#### 2 Type

- 1)  -		
10	Side ported	
11	Bottom ported*1	

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Type Manifold" (from page 213).

#### 3 SI Unit specifications

O of other specifications					
Symbol	Protocol	Number of outputs	Communication connector		
0	W	ithout SI Ur	nit		
QA	DeviceNet™	32	1440		
QB	Devicemet	16	M12		
NA		32	M12		
NB	<b>PROFIBUS</b>	16	IVI I Z		
NC	DP	32	D-sub*1		
ND		16	D-Sub		
VA	001:1	32	M12		
VB	CC-Link	16	IVI I∠		
DA	Ethor CAT®	32	M12		
DB	EtherCAT®	16	IVI I Z		
FA	PROFINET	32	Milo		
FB		16	M12		
EA	Eth - M - 4/IDIM	32	Milo		
EB	EtherNet/IP™	16	M12		

\*1: IP40 for the D-sub applicable communication connector specification. DIN rail cannot be mounted without SI Unit.

#### 4 SI Unit output polarity

O C C C C C C C C C C C C C C C C C C C				
_	Positive common (NPN)			
N	Negative common (PNP)			

- \*: Ensure a match with the common specification of the valve to be used.
- \*: Without SI Unit, the symbol is —

#### **5** Valve stations

#### In the case of the 32-output SI Unit

Symbol	Stations	Note
02	2 stations	
:	÷	Double wiring*1
16	16 stations	-
02	2 stations	0
:	:	Specified layout*2 (Available up to 32 solenoids)
24	24 stations	

#### In the case of the 16-output SI Unit

Symbol Stations		Note	
02	2 stations		
:	:	Double wiring*1	
08	8 stations		
02	2 stations	0 % 11 %	
:	:	Specified layout*2	
16	16 stations	(Available up to 16 solenoids)	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where
- single wiring has been specified.)
  \*: This also includes the number of blanking plate assembly.
- \*: For the model without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### SUP/EXH block assembly

	<u> </u>		
_	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### Refer to the page on the right for 8.

#### 9 Mounting and Option

Cumbal	Mounting	Option	
Symbol		Name plate	Station number
_	Direct	_	_
AA	Direct mounting	•	•
BA		•	_
D□	DIN!!	_	_
A	DIN rail mounting	•	•
В□		•	_

- \*: Enter the number of stations inside 
   □ when it
   is larger than the number of valve stations.
   (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

_		Standard length
0	With	out DIN rail (with bracket)
3	For 3 stations	Charify a langur rail than the
:	:	Specify a longer rail than the total length of specified stations.
24	For 24 stations	total length of specified stations.

\*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 240 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



8	A, E	3 port size	(Metric/One-touch	fitting)


	Ĺ	Ė		Type	10/Side	norted		ttom ported	
Symbol		Α,	B port						
·				SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø 2	•	_	_	_	_	
C3			Ø 3.2	•	_	_	_	_	
C4			Ø 4	•	•	_	•	_	
C6	ig		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	_	•	•	•	•	2 3 5 5
C10	"		Ø 10	_	_	•	_	•	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
C12			Ø 12	_	_	•	_	•	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		5	Ø6	•	•	•	_	_	
L8		Upward	Ø8	_	•	•	_	_	
L10		)	Ø 10	_	_	•	_	_	
L12			Ø 12	_	_	•	_	_	Jel State
<b>B</b> 4	Elbow*2		Ø 4	•	•	_	_	_	
<b>B6</b>	all	Downward	Ø6	•	•	•	_	_	
B8	_	۸u۸	Ø8	_	•	•	_	_	
B10		Dov	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	/	
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	Ø8	Ø 10	Ø 12	Ø 10	Ø 12	

A, B port size (Inch/One-touch fitting)


Symbol		۸	B port		0/Side	<u>.                                      </u>	Type 11/Bo		
Syllibol		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"	•	_	_	_	_	
N3			Ø 5/32"	•	•	_	•	_	
N7	ight		Ø 1/4"	•	•	•	•	•	
N9	Straight		Ø 5/16"	_	•	•	•	•	
N11	0,		Ø 3/8"	_	_	•	_	•	0 1883
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			Ø 5/32"	•	_	_	_	_	
LN7		Jpward	Ø 1/4"	•	•	_		1	
LN9		ď	Ø 5/16"	_	•	_	_	_	
LN11	0.1	_	Ø 3/8"	_	_	•	_	_	O DE STEER
BN3	Elbow*2	rd D	Ø 5/32"	•		_	_	_	
BN7	Elbc	wa	Ø 1/4"	•	•	_	_	_	
BN9	ш	<b>Downward</b>	Ø 5/16"	_	•	_	_	_	
BN11		ŏ	Ø 3/8"	_	_	•	_	_	
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	

- \*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting
- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

#### **How to Order Manifold Assembly**

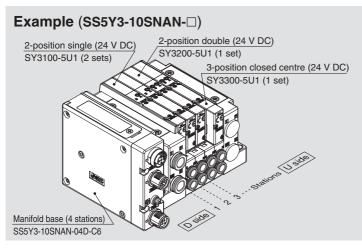


- SS5Y3-10SNAN-04D-C6···1 set (Type 10 4-station manifold base part no.) \*SY3100-5U1-----2 sets (2-position single part no.) \*SY3200-5U1-----1 set (2-position double part no.)
- \*SY3300-5U1-----1 set (3-position closed centre part no.)
  - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure on the left. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 188. Specify on a manifold specification sheet if plugs are required on the A and B port on the manifold.

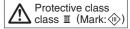



#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

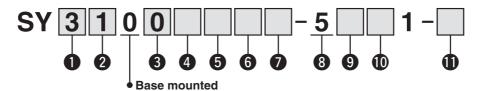

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

- ')'	o or aotaati	•
1	2-position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4iti	N.C./N.C.
B*1	4-position dual 3-port	N.O./N.O.
C*1	dual 5-port	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

_	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	•	Standard (0.7 MPa)
В		Quick response type (0.7 MPa)
K*	1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

9 00	, po
_	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when a valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage


24 V DC
---------

## Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Non-polai
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit output polarity is — (positive common). Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

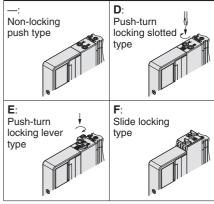

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the
  - Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



Plug-in
Connector Connecting Base

Type 10/Side Ported


Valve

Plug-in Sub-plate

Dimensions: Series SY3000

EX260


SS5Y3-10S $\square$ -Stations $\stackrel{\mathsf{U}}{\mathsf{B}}$ - $\stackrel{\mathsf{C2}}{\overset{\mathsf{C2}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}{\overset{\mathsf{I}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}}}}$ 

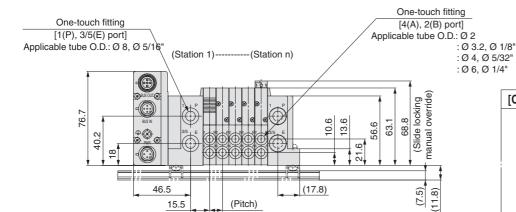



(Pitch)

P=10.5

15.5

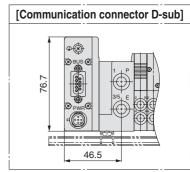

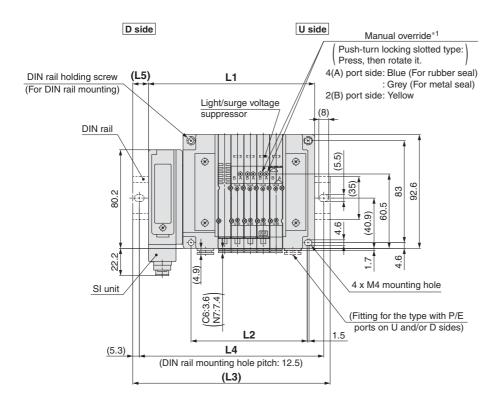

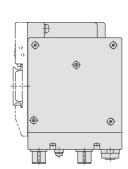

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10SQA-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12

n: Stations	18	19	20	21	22	23	24
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	231	241.5	252	262.5	273	283.5	294
L3	298	310.5	323	335.5	348	348	360.5
L4	287.5	300	312.5	325	337.5	337.5	350
L5	13	14	15	16	17	12	13


Dimensions: Series SY5000


Plug-in Connector Connecting Base

Type 10/Side Ported

EX260

SS5Y5-10S $\square$ -Stations  $\stackrel{\text{U}}{\text{D}}$  -  $\stackrel{\text{C4}}{\text{C6}}$ ,  $\stackrel{\text{N3}}{\text{N7}}$  (D)

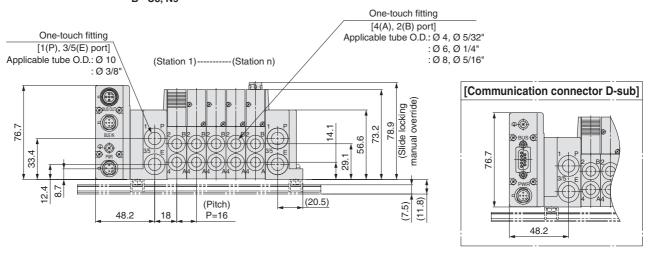

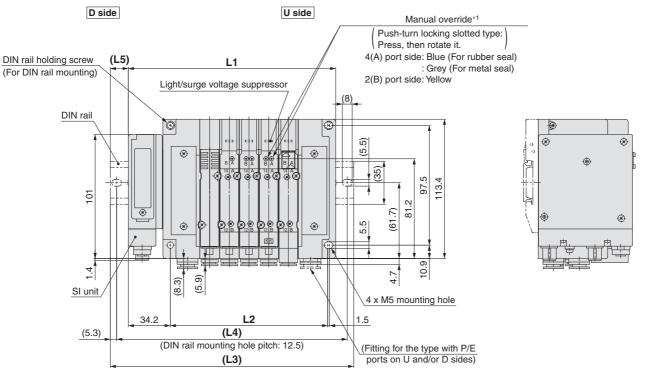

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10SQA-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5


n: Stations	18	19	20	21	22	23	24
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	336	352	368	384	400	416	432
L3	410.5	423	435.5	448	473	485.5	498
L4	400	412.5	425	437.5	462.5	475	487.5
L5	17	15	13.5	11.5	16	14.5	12.5

Plug-in
Connector Connecting Base

Type 10/Side Ported

Dimensions: Series SY7000


SS5Y7-10S - Stations D C6, N7 C8, N9 C10, N11 (D)

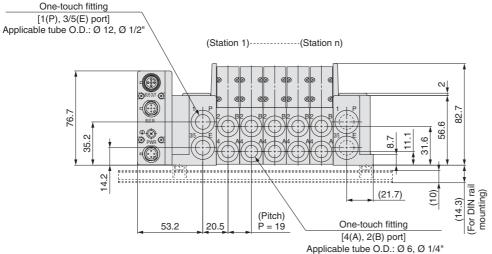


[Communication connector D-sub] 76.7 ...... 53.2

Applicable tube O.D.: Ø 6, Ø 1/4" : Ø 8, Ø 5/16" : Ø 10, Ø 3/8"

: Ø 12

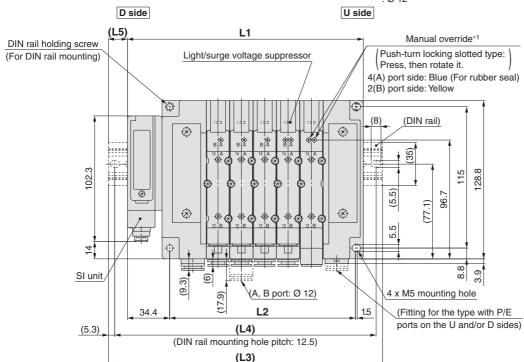

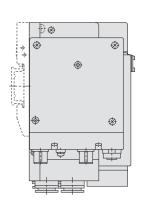

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10SQA-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5

## **Plug-in Connector Connecting Base**

**EX260** 

Type 12
Top Ported

## Series SY3000/5000/7000 €

**How to Order Manifold** 

Refer to pages 210 to 212 for Type 12/Top ported dimensions.

#### Series

3	SY3000
5	SY5000
7	SY7000

2 SI Unit specifications

	•	Number of	Communication
Symbol	Protocol	outputs	connector
0	٧	Vithout SI Ur	nit
QA	DeviceNet™	32	M12
QB	Devicemet	16	IVIIZ
NA		32	M12
NB	<b>PROFIBUS</b>	16	IVIIZ
NC	DP	32	D
ND		16	D-sub*1
VA	CC-Link	32	M12
VB	OO-LIIK	16	IVITZ
DA	EtherCAT®	32	M12
DB	EllierCAI	16	IVITZ
FA	PROFINET	32	M12
FB	THOPINE	16	IVITZ
EA	EtherNet/IP™	32	M12
EB	LUIGIING(/IF ····	16	IVITZ

\*1: IP40 for the D-sub applicable communication connector specification. DIN rail cannot be mounted without SI Unit.

#### 3 SI Unit output polarity

_	Positive common (NPN)
N	Negative common (PNP)

- \*: Ensure a match with the common specification of the valve to be used.
- \*: Without SI Unit, the symbol is -..

#### 4 Valve stations

In the case of the 32-output SI Unit

Symbol	Stations	Note					
02	2 stations						
:	:	Double wiring*1					
16	16 stations	-					
02	2 stations	0					
:	:	Specified layout*2 (Available up to 32 solenoids)					
24	24 stations	(Available up to 32 soleriolds)					

#### In the case of the 16-output SI Unit

Symbol	Stations	Note					
02	2 stations						
:	:	Double wiring*1					
80	8 stations	-					
02	2 stations	0:6:11*2					
:	:	Specified layout*2					
16	16 stations	(Available up to 16 solenoids)					

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
  Leg of a 2-position single seleptoid will result.
  - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet.
  - (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.
- \*: For the model without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

**5** P, E port entry

• 1, 2 port entry	
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*1: 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 6 SUP/EXH block assembly

_	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.


#### **8** Mounting

_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations		
:	:	Specify a longer rail than the standard length.	
D24	For 24 stations	the standard length.	

- \*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to page 249 for part numbers of DIN rail.
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 240 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

#### **How to Order Manifold Assembly**

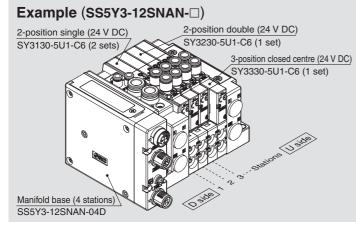

- SS5Y3-12SNAN-04D ..... 1 set (Type 12 4-station manifold base part no.)


  \*SY3130-5U1-C6 ............. 2 sets (2-position single part no.)

  \*SY3230-5U1-C6 ................ 1 set (2-position double part no.)

  \*SY3330-5U1-C6 ........................... 1 set (3-position closed centre part no.)
  - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure on the left.
   If the arrangement becomes complicated, specify on a manifold specification sheet.

#### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

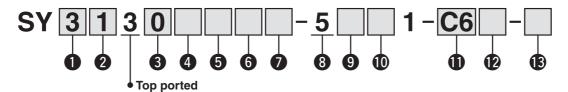

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

2-position	Single	
	Double	
3-position	Closed centre	
	Exhaust centre	
	Pressure centre	
<b>A</b> *1 <b>B</b> *1 <b>C</b> *1 <b>A</b> -position dual 3-port	N.C./N.C.	
	N.O./N.O.	
	N.C./N.O.	
	3-position 4-position	

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot	
R	External pilot	

## Back pressure check valve (Built-in valve type)

	71
_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when a valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

8 Rated voltage

5	24 V DC

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: Select a valve from R, U, S or Z when the SI Unit output polarity is (positive common). Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

—: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type
Defende neme Of fem.	مامناه بشمكمه مملا ملاني

\*: Refer to page 31 for with the safety slide locking manual override.

#### 1 A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2	•	_	_
<b>C</b> 3	Ø 3.2	•	_	_
C4	Ø 4	•	•	_
C6	Ø 6	•		•
C8	Ø 8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•

#### One-touch fitting (Inch)

0		,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"	•		_
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•
		•	•	

12 Thread type

Rc
G
NPT
NPTF

\*: Only — is available for M5.

#### 13 Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


\*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

### \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

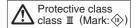



Type 10
Side Ported

Type 11
Bottom Ported

## **Plug-in Connector Connecting Base**


**EX126** 

## Series SY3000/5000/7000

( E RoHS

#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

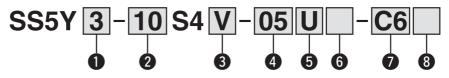

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### **2** Type

10 Side ported	
11 Bottom ported*1	

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

#### 3 SI Unit

0	Without SI Unit
V	CC-Link (Positive common NPN)


 Only a terminal block plate is mounted for the valve without SI Unit.

#### 4 Valve stations

_			
Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
08	8 stations		
02	2 stations	0	
:	:	Specified layout*2 (Available up to 16 solenoids)	
16	16 stations		

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

## How to Order Manifold Assembly

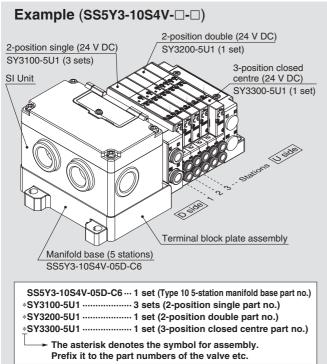

- $\bullet$  The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 196.

  In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### **6** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

#### 6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer type
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 241 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



#### A, B port size (Metric/One-touch fitting)

	T .		Tues	10/C:d-	اممسمدا	Tuna 11/Da			
Symbol	A, B port			10/Side			ttom ported		
Cymbol			SY3000	SY5000	SY7000	SY5000	SY7000		
C2			Ø 2	•	_	_	_	_	
СЗ			Ø 3.2	•	_	_	_	_	
C4			Ø 4	•	•	_	•	_	
C6	igh		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	_	•	•	•	•	10
C10	"		Ø 10	_	_	•	_	•	O BASES
C12			Ø 12	_	_	•	_	•	- Var
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		5	Ø6	•	•	•	_	_	
L8	Ma	Upward	Ø 8	_	•	•	_	_	
L10		)	Ø 10	_	_	•	_	_	
L12			Ø 12	_	_	•	_	_	Jel 1988
B4	Elbow*2		Ø 4	•	•	_	_	_	
B6	篇	/arc	Ø 6	•	•	•	_	_	
B8	_	Downward	Ø8	_	•	•	_	_	
B10		Do	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	_/	To Part of the Par
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•		_		
P, E port size (One-touch fittings)			Ø 8	Ø 10	Ø 12	Ø 10	Ø 12		

A, B port size (Inch/One-touch fitting)

<u> </u>	÷		0.20 (						1	
Cumbal		A D ====		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol A, B port		B port	SY3000	SY5000	SY7000	SY5000	SY7000			
N1			Ø 1/8"	•	_	_	_	_		
N3		!	Ø 5/32"	•	•	_	•	_		
N7	Straight		Ø 1/4"	•	•	•	•	•		
N9	Stra		Ø 5/16"	_	•	•	•	•		
N11	0)		Ø 3/8"	_	_	•	_	•	0 1587	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•		
LN3			Ø 5/32"	•	_	_	_	_		
LN7		Jpward	Ø 1/4"	•	•	_	_	_		
LN9		ď	Ø 5/16"	_	•	_	_	_		
LN11	01	_	Ø 3/8"	_	_	•	_	_	0150555	
BN3	∃lbow*2	rd	Ø 5/32"	•	_	_	_	_		
BN7	all	Downward	Ø 1/4"	•	•	_	_	_		
BN9	"		owr	Ø 5/16"	_	•	_	_	_	
BN11		Ŏ	Ø 3/8"	_	_	•	_	_	To look	
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"			

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

**8** Mounting and Option

Symbol	Mounting	Option		
Syllibol	Mounting	Name plate	Station number	
_	Discort	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN wait	_	_	
A□	DIN rail mounting	•	•	
В□		•	_	


- \*: Enter the number of stations inside  $\square$  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

_	Direct mounting				
0	Without DIN	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail			
:	:	than the total length			
16	For 16 stations	of specified stations.			

#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

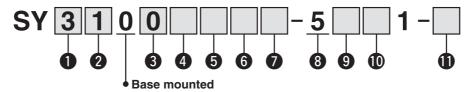

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation				
1	2-position	Single		
2		Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4iti	N.C./N.C.		
B*1	4-position dual 3-port	N.O./N.O.		
C*1		N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

Coil type

9 00	
_	Standard
Т	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

8 Rated voltage


5	24 V DC
---	---------

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R U			Non-polar
S	_		Positive
Z	•		common

\*: Only "Z" type is available for with the power saving circuit.

10 Manual override

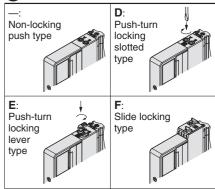

\*: Refer to page 31 for with the safety slide locking manual override.

Type of mounting screw

	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)
K	Round head combination screw (Falling-out-prevention type

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
  \*: When ordering a valve individually, the
- base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
  - Refer to page 244 for part numbers of base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.





Plug-in
Connector Connecting Base

Type 10/Side Ported EX126

Dimensions: Series SY3000

## SS5Y3-10S4V - Stations D - C2, N1 (D) C3, N1 (C2) C3, N1 (C3) C6, N7

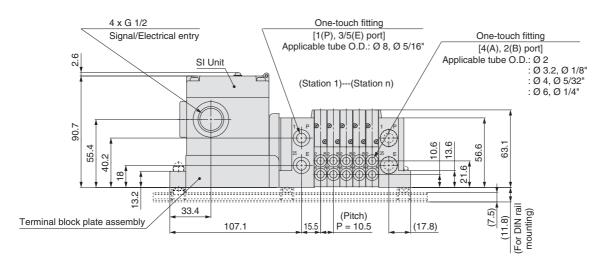

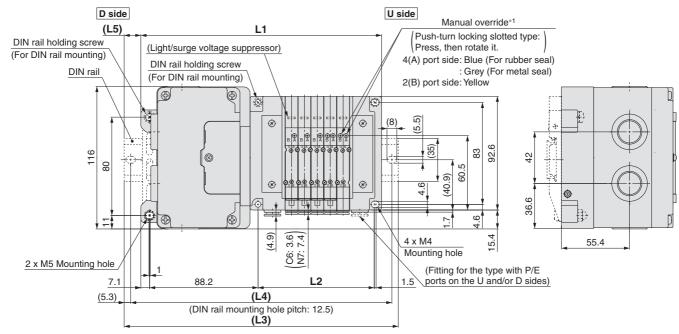

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10S4V-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12




Dimensions: Series SY5000


Plug-in Connector Connecting Base

Type 10/Side Ported

EX126

SS5Y5-10S4V - Stations D - C6, N7 (D)

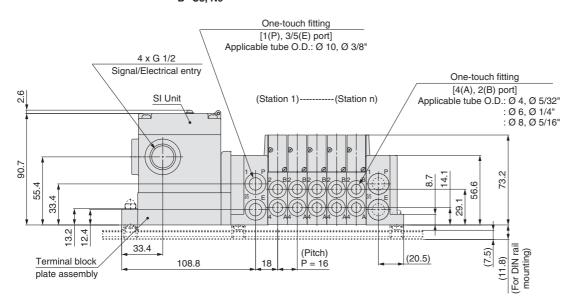

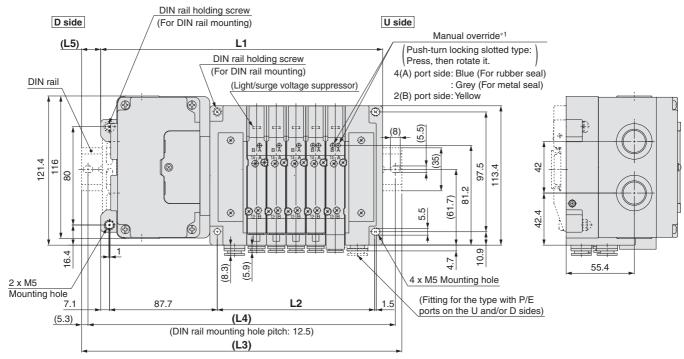

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10S4V-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15




Plug-in Connector Connecting Base

Type 10/Side Ported EX126

## SS5Y7-10S4 - Stations D - C58, N9 C10, N11 (D)


Dimensions: Series SY7000

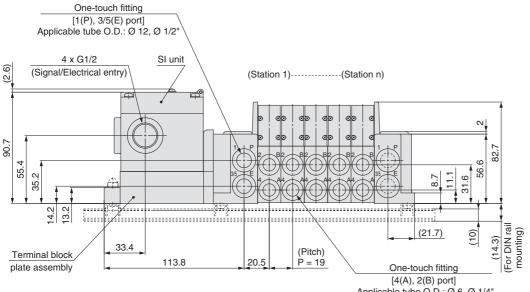

Applicable tube O.D.: Ø 6, Ø 1/4"

: Ø 8, Ø 5/16" : Ø 10, Ø 3/8"

: Ø 12

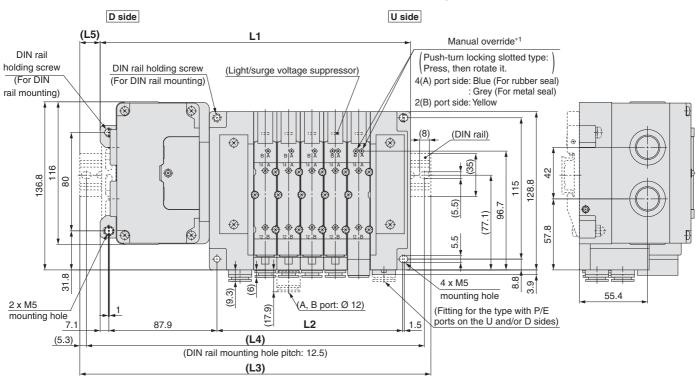

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10S4V-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

## Plug-in Connector Connecting Base

**EX126** 


Type 12
Top Ported

## Series SY3000/5000/7000

RoHS

#### **How to Order Manifold**

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

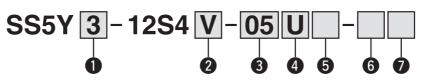

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI Unit

0	Without SI Unit
V	CC-Link (Positive common NPN)

\*: Only a terminal block plate is mounted for the valve without SI Unit.

#### 3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	0
:	:	Specified layout*2 (Available up to 16 solenoids)
16	16 stations	(Available up to 16 solelloids)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not
- desired, order with a specified layout.

  \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

#### 4 P, E port entry

<u> </u>	= port ontry
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


\*1: § For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### **How to Order Manifold Assembly**

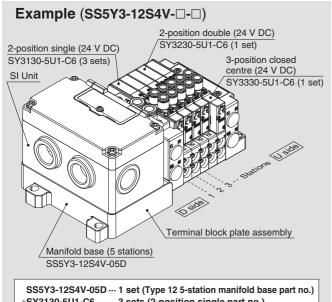

\*SY3130-5U1-C6----- 3 sets (2-position single part no.)

\*SY3230-5U1-C6...... 1 set (2-position double part no.)

\*SY3330-5U1-C6········ 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	D
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N. sizes are in inches.

#### Mounting

_	Direct mounting  DIN rail mounting (With DIN rail)  DIN rail mounting (Without DIN rail)		
D			
D0			
D3	For 3 stations	Specify a longer rail	
:	:	than the standard	
D16	For 16 stations	length.	


\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 241 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



#### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

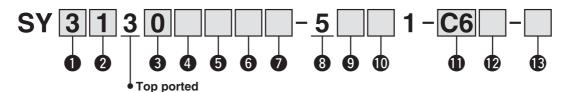

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

- 71	• 1,60 01 0010000000000000000000000000000			
1	2-position	Single		
2		Double		
3	3-position	Closed centre		
4		Exhaust centre		
5		Pressure centre		
A*1 B*1 C*1	4 maniting	N.C./N.C.		
	4-position dual 3-port	N.O./N.O.		
		N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

	7.1	
_	Internal pilot	
R	External pilot	

## Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	— Standard (0.7 MPa)	
B Quick response type (0.7 MPa)		
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

Con type		
_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage


5	24 V DC

## Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	_		Non-polar	
U	•	•	Non-polai	
S	_		Positive	
Z	•		common	

\*: Only "Z" type is available for with the power saving circuit.

#### Manual override

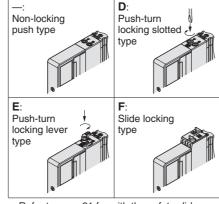

\*: Refer to page 31 for with the safety slide locking manual override.

#### 1 A, B port size

#### Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

#### One-touch fitting (Metric)

	ene reaction (means)				
Symbol	A, B port	SY3000	SY5000	SY7000	
C2	Ø 2	•	_	_	
СЗ	Ø 3.2		_	_	
C4	Ø 4			_	
C6	Ø 6	•		•	
C8	Ø 8	_	•	•	
C10	Ø 10	_	_	•	
C12	Ø 12	_	_	•	

#### One-touch fitting (Inch)

0		,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"			_
N7	Ø 1/4"	•		•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•

Thread type

	71
_	Rc
F	G
N	NPT
Т	NPTF

\*: Only — is available for M5.

#### 13 Type of mounting screw

<ul> <li>Round head combination screen</li> </ul>				
B Hexagon socket head cap scre				
	K	Round head combination screw (Falling-out-prevention type)		
	Н	Hexagon socket head cap screw (Falling-out-prevention type)		


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

base gasket is not included.
Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of base gasket and mounting screw

gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

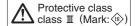



Type 10 Side Ported Type 11 **Bottom Ported** 


## **Plug-in Connector Connecting Base**

**EX120** 

## Series SY3000/5000/7000

#### **How to Order Manifold**

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

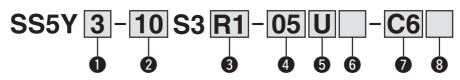

#### Series

3	SY3000
5	SY5000
7	SY7000

#### Tvpe

ועי	
10	Side ported
11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

#### **3** SI Unit

0	Without SI Unit						
Q	DeviceNet™ (Positive common NPN)						
R1	OMRON CompoBus/S 16 outputs						
R2	(Positive common NPN)	8 outputs					
V	CC-Link (Positive common NPN)						
ZB*1	CompoNet™	Positive common NPN					
ZBN*1	Componer	Negative common PNP					


- \*1: The communication connector (for the opposite side) is not provided. Please order it separately.
- \*: Ensure a match with the common specification of the valve to be used.

#### 4 Valve stations

_							
Symbol	Stations	Note					
02	2 stations						
:	:	Double wiring*1					
08	8 stations						
02	2 stations	Cracified lave*2					
:	:	Specified layout*2					
16	16 stations	(Available up to 16 solenoids)					

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking
- plate assembly.
  \*: Since R2 type SI Unit has 8 outputs, note that up to 8 solenoids can be accommodated.

## **How to Order Manifold Assembly**

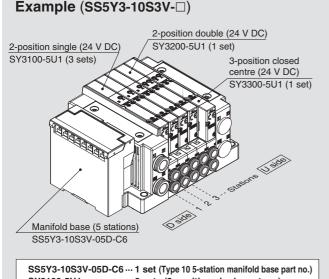

- \*SY3100-5U1 ...... 3 sets (2-position single part no.) \*SY3200-5U1 ...... 1 set (2-position double part no.) \*SY3300-5U1 ...... 1 set (3-position closed centre part no.)
  - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 204. In this case, use caution as there is also output on the A and B port on base

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

A P F port entry

o i, E port citary								
U	U side (2 to 10 stations)							
D	D side (2 to 10 stations)							
В	Both sides (2 to 16 stations)							

#### 6 SUP/EXH block assembly

_	<ul><li>Internal pilot</li></ul>			
S	Internal pilot, Built-in silencer			
R	External pilot			

\*: 3/5(E) port is plugged for the built-in silencer

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 242 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



7 A, B port size (Metric/One-touch fitting)

_		<u> </u>		<u> </u>					
Cumahad	A D		Type <sup>1</sup>	0/Side	ported	Type 11/Bo	ttom ported		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø 2	•	_	_	_	_	_
СЗ			Ø 3.2	•	_	_	_	_	
C4			Ø 4	•	•	_	•	_	
C6	ight		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	_	•	•	•	•	2 10
C10	0,		Ø 10	_	_	•	_	•	999
C12			Ø 12	_	_	•	_	•	
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4	•	•	_	_	_	
L6		5	Ø6	•	•	•	_	_	
L8		Upward	Ø 8	_	•	•	_	_	
L10	0	J	Ø 10	_	_	•	_	_	
L12	١		Ø 12	_	_	•	_	_	Jel Sur
B4	∃lbow*2		Ø 4	•	•	_	_	_	
B6	릚	Downward	Ø6	•	•	•	_	_	
B8	_	۸u	Ø 8	_	•	•	_	_	
B10		Dov	Ø 10	_	_	•	_	_	
B12			Ø 12	_	_	•	_	_/	To leave
LM*1		(Incli	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
P, E port size (One-touch fittings)		Ø 8	Ø 10	Ø 12	Ø 10	Ø 12			

A, B port size (Inch/One-touch fitting)

Symbol		A, B port			10/Side		Type 11/Bo					
Syllibol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000				
N1			Ø 1/8"		_	_	_	_				
N3			Ø 5/32"	•	•	_	•	_				
N7	ight		Ø 1/4"	•	•	•	•	•				
N9	Straight		Ø 5/16"	_	•	•	•	•				
N11	0,		Ø 3/8"	_	_	•	_	•	0 1500 E			
CM*1	Ī	Straig	ht port, mixed sizes	•	•	•	•	•				
LN3			Ø 5/32"	•	_	_	_	_				
LN7	7		Jpward	Ø 1/4"	•	•	_		1			
LN9		Jpw	Ø 5/16"	_	•	_	_	/				
LN11	.	01	01	01		Ø 3/8"	_	_		_	_	G G G G G G G G G G G G G G G G G G G
BN3	,* ,*	5	Ø 5/32"	•		_	_	_				
BN7	Elbow*2	Elbo	Elbc	흶	wa	Ø 1/4"						
BN9				<b>Downward</b>	Ø 5/16"	_		_			8	
BN11		Ŏ	Ø 3/8"	_	_	•	_		Toll Toll			
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_				
	P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"				

- \*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

  The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.
- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

8 Mounting and Option


• Mounting and option									
Symbol	Mounting	Option							
Syllibol	Mounting	Name plate	Station number						
_	Direct	_	_						
AA	Direct mounting	•	•						
BA	mounting	•	_						
D	DIN rail	_	_						
A□	mounting	•	•						
В□	mounting	•	_						

- \*: Enter the number of stations inside 
   □ when it
   is larger than the number of valve stations.
   (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

_	Direc	t mounting									
0	Without DIN rail (with bracket)										
3	For 3 stations	Specify a longer rail									
:	:	than the total length									
16	For 16 stations	of specified stations.									


\*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)

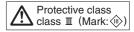



#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

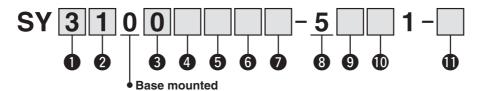

#### Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>								
1	2-position	Single						
2	2-008111011	Double						
3		Closed centre						
4	3-position	Exhaust centre						
5		Pressure centre						
<b>A</b> *1	4iti	N.C./N.C.						
B*1 C*1	4-position dual 3-port	N.O./N.O.						
	duai 5-port	N.C./N.O.						

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### 3 Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

	71
_	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

_	Standard
T	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage


5 24 V DC

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
R	_		Non-polar			
U	•		Non-polai			
S			Positive			
Z	•		common			
NS	_		Negative			
NZ	•		common			

- \*: Select a valve from R, U, S or Z when the SI Unit specification is positive common. Select a valve from R, U, NS or NZ when the SI Unit specification is ZBN (negative common).
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

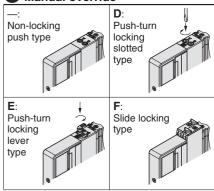

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.


  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve. SS5Y3-10S3 - Stations D - C3, N1 (D)

Dimensions: Series SY3000

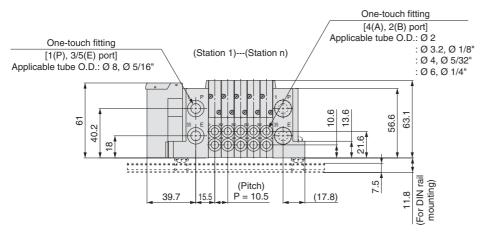

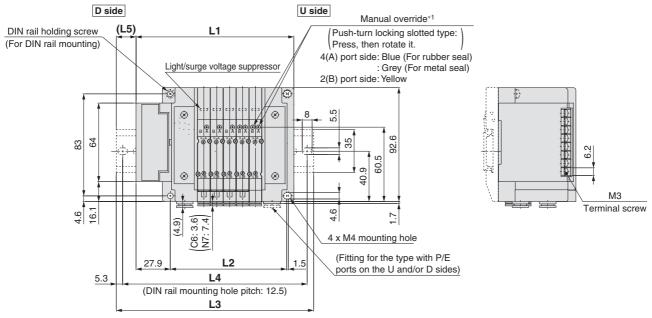

- \*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y3-10S3V-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5


Dimensions: Series SY5000


Plug-in Connector Connecting Base


Type 10/Side Ported

EX120

SS5Y5-10S3 - Stations D - C6, N7 (D)

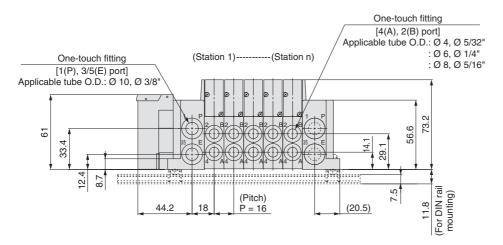

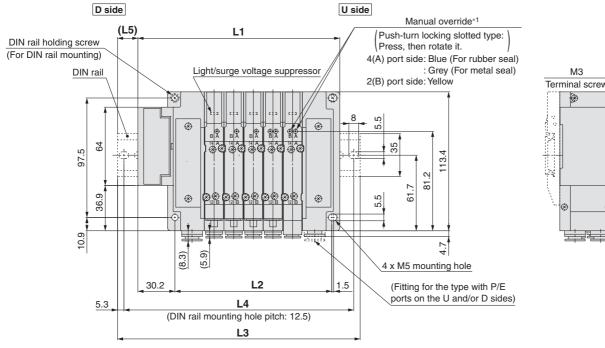

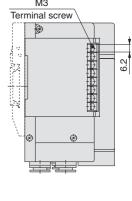

- \*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y5-10S3V-05D-C8".
- \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16





Plug-in
Connector Connecting Base

Type 10/Side Ported EX120

Dimensions: Series SY7000

SS5Y7-10S3 - Stations D - C6, N7 C8, N9 D - C10, N11 (D)

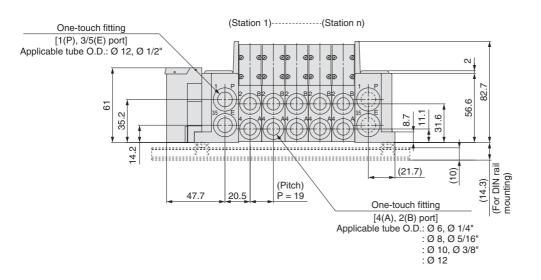

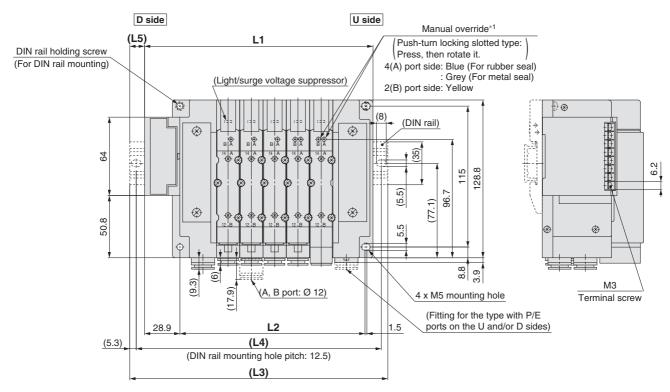

- \*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- \*: These figures show the "SS5Y7-10S3V-05D-C10".
- \*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Station	s <b>2</b>	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14



## Plug-in Connector Connecting Base

**EX120** 


Type 12
Top Ported

## Series SY3000/5000/7000

RoHS

#### **How to Order Manifold**

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

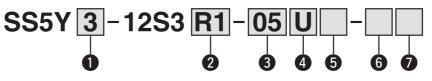

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI Unit

0	Without SI Unit  DeviceNet™ (Positive common NPN)		
Q			
R1	OMRON CompoBus/S	16 outputs	
R2	(Positive common NPN)	8 outputs	
V	CC-Link (Positiv	e common NPN)	
ZB*1	CompoNet™	Positive common NPN	
ZBN*1	Componer	Negative common PNP	

- \*1: The communication connector (for the opposite side) is not provided. Please order it separately.
- \*: Ensure a match with the common specification of the valve to be used.

#### 3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	0
:	:	Specified layout*2 (Available up to 16 solenoids)
16	16 stations	(Available up to 16 soleriolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result
  - in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.
- \*: Since R2 type SI Unit has 8 outputs, note that up to 8 solenoids can be accommodated.

#### 4 P, E port entry

	1
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

\*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

#### **How to Order Manifold Assembly**

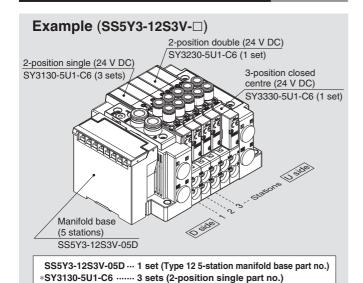

• The valve arrangement is numbered as the 1st station from the D side.

\*SY3230-5U1-C6 ...... 1 set (2-position double part no.)

\*SY3330-5U1-C6 ...... 1 set (3-position closed centre part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	ĵ
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N. sizes are in inches.

#### Mounting


• meaning			
_	Direct mounting		
D	DIN rail mounting (With DIN rai		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail	
:	:	than the standard	
D16	For 16 stations	length.	

- \*: When mounted on the DIN rail without the SI Unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 249 for the DIN rail part number.)
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 242 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



#### How to Order Valves (With mounting screw) Refer to page 13 for valve specifications.

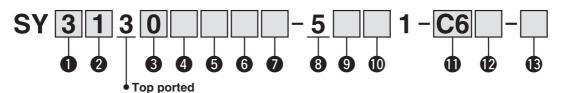

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single		
2		Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4	N.C./N.C.		
B*1 C*1	4-position dual 3-port	N.O./N.O.		
	duai o-port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	Internal pilot
R	External pilot

## Back pressure check valve (Built-in valve type)

_	None	
Н	Built-in	

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	

\*1: Only metal seal type is available for the high pressure type.

Coil type

	Con type		
— Standard			
	Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

8 Rated voltage


	041/00
5	24 V DC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	_		Non-polar	
U	•		Non-polai	
S	_		Positive	
Z	•		common	
NS			Negative	
NZ	•		common	

- \*: Select a valve from R, U, S or Z when the SI Unit specification is positive common. Select a valve from R, U, NS or NZ when the SI Unit specification is ZBN (negative common).
- \*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

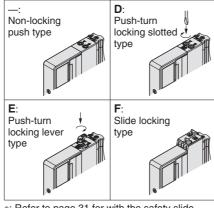

\*: Refer to page 31 for with the safety slide locking manual override.

#### A, B port size

Thread piping

Symbol	Port size Applicable serie	
M5	M5 x 0.8 SY3000	
01	1 1/8 SY5000	
02	2 1/4 SY7000	

One-touch fitting (Metric)

-				
Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2	•	_	_
<b>C</b> 3	Ø 3.2		_	_
C4	Ø 4			_
C6	Ø 6	•		•
C8	Ø 8	_		
C10	Ø 10	_	_	
C12	Ø 12	_	_	•

One-touch fitting (Inch)

0	todon numg (mon)			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"			_
N7	Ø 1/4"	•		•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•
				•

12 Thread type

G
NPT
NPTF

\*: Only — is available for M5.

#### Type of mounting screw


<ul> <li>Round head combination screen</li> </ul>		Round head combination screw	
	В	Hexagon socket head cap screw	
	K	Round head combination screw (Falling-out-prevention type)	
	Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

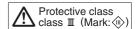





## Series SY3000/5000/7000 **Common Dimensions**

Plug-in Series SY3000 Connector Connecting Base Type 10/Side Ported

External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

SS5Y3-10 $\square$ -Stations  $_{B}^{U}(S, R)$ - $_{B}^{L}\square$ 

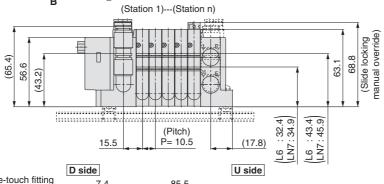

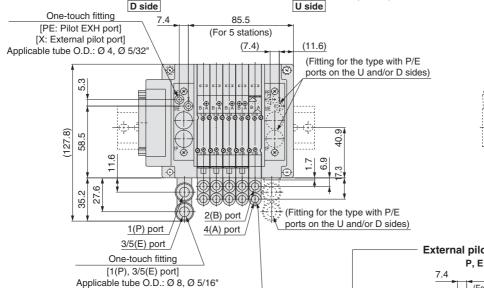



(73.2)


One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: Ø 2

Ø 3.2, Ø 1/8" Ø 4, Ø 5/32" : Ø 6, Ø 1/4"

\*: These figures show the "SS5Y3-10F2-05DR-L6".

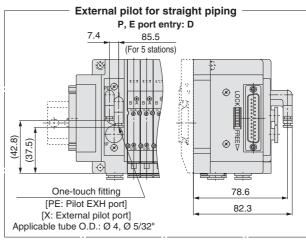

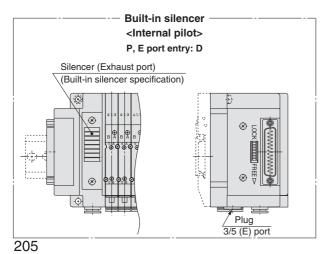

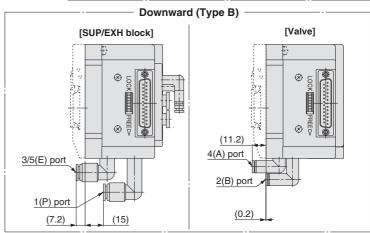

(59.8)

36.1

One-touch fitting

[PE: Pilot EXH port]


[X: External pilot port]


113.4


36.9

7

(159.5)

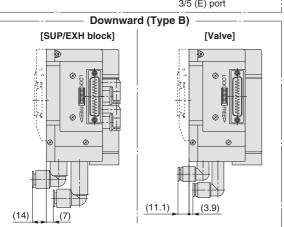

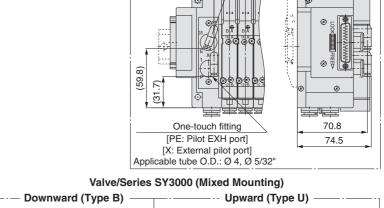

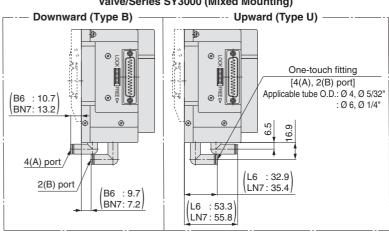

**SMC** 

Valve

Plug-in Sub-plate

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View


One-touch Fittings/ Plug Assembly Part No. Manifold Options


206


Plug-in
Connector Connecting Base

External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

External pilot for straight piping
P, E port entry: D
(138.1)
(For 5 stations)
(Station 1)
(Station 1)
(Station n)

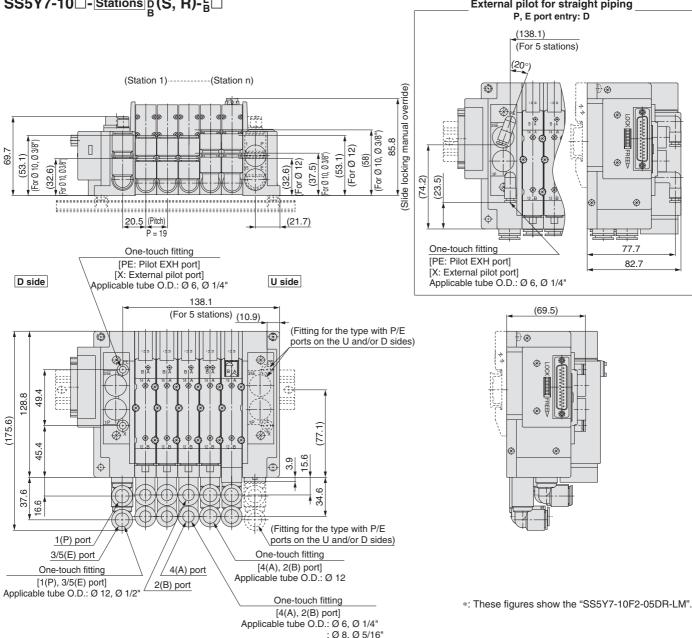

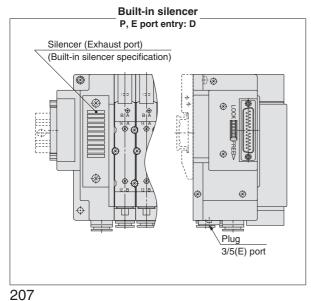

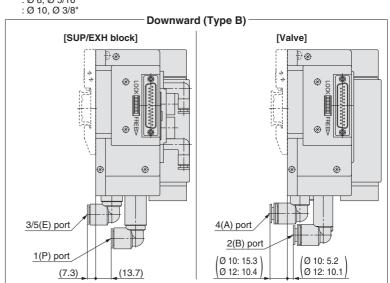


#### Plug-in Connector Connecting Base


Type 11/Bottom Ported


All Wirings





Series SY5000

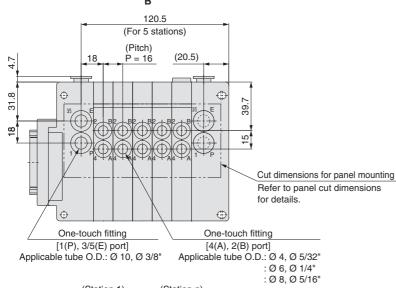


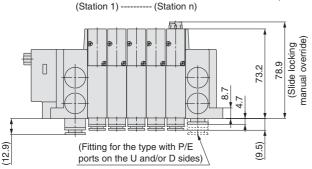


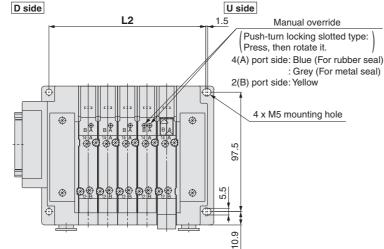

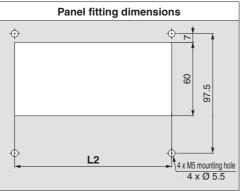

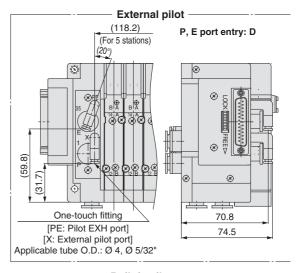

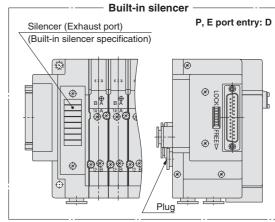

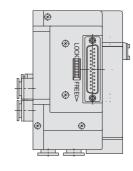

- \*: These figures show the "SS5Y5-11F2-05D-C8".
- \*: Refer to the below pages for L2 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 101 D-sub connector <IP67>: P. 104 Flat ribbon cable : P. 107 : P. 119 Terminal block box Lead wire : P. 129 : P. 139 Circular connector EX500 (128 points) : P. 149 EX500 (64 points) : P. 155 EX600 : P. 166, 167 EX250 : P. 177 EX260 : P. 185 : P. 193 EX126 EX120 : P. 201


Series SY7000


Plug-in Connector Connecting Base


Type 11/Bottom Ported


**All Wirings** 

#### SS5Y7-11□-Stations p

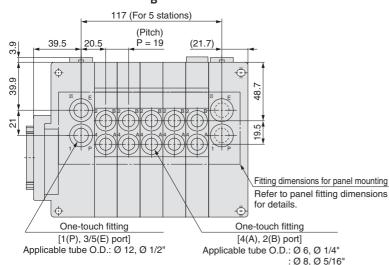


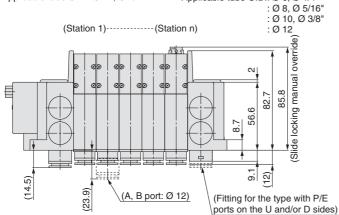


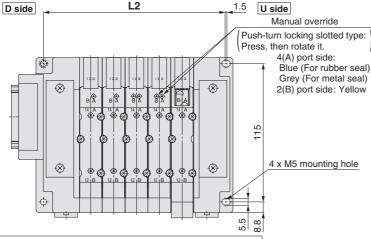


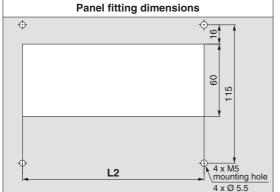

209

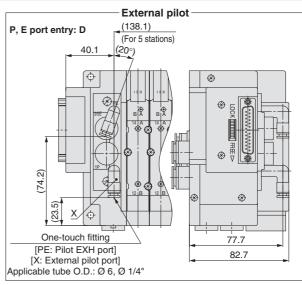

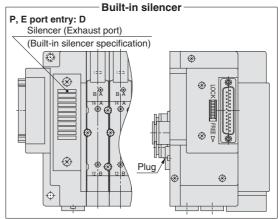

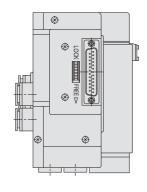

- \*: These figures show the "SS5Y7-11F2-05D-C10".
- \*: Refer to the below pages for L2 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 102 D-sub connector <IP67>: P. 105 Flat ribbon cable : P. 108 : P. 120 Terminal block box Lead wire : P. 130 Circular connector : P. 140 EX500 (128 points) : P. 150 : P. 156 EX500 (64 points) : P. 168, 169 EX600 EX250 : P. 178 : P. 186 FX260 : P. 194 EX126 : P. 202 EX120



Plug-in Ty
Connector Connecting Base


Common Dimensions Series SY3000/5000/7000


Type 12/Top Ported
All Wirings

### Series SY3000

SS5Y3-12 $\square$ -Stations  $\stackrel{\text{U}}{\stackrel{\text{P}}{\stackrel{\text{R}}{\stackrel{\text{O}}}{\stackrel{\text{O}}{\stackrel{\text{O}}{\stackrel{\text{O}}}{\stackrel{\text{O}}{\stackrel{\text{O}}{\stackrel{\text{O}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}{\stackrel{\text{O}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}}{\stackrel{\text{O}}}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}}}{\stackrel{\text{O}}{\stackrel{\text{O}}}}}{\stackrel{\text{O}}}}{\stackrel{\text{O}}}}$ 

(Station 1)---(Station n)

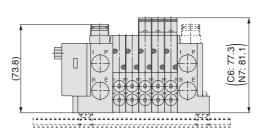

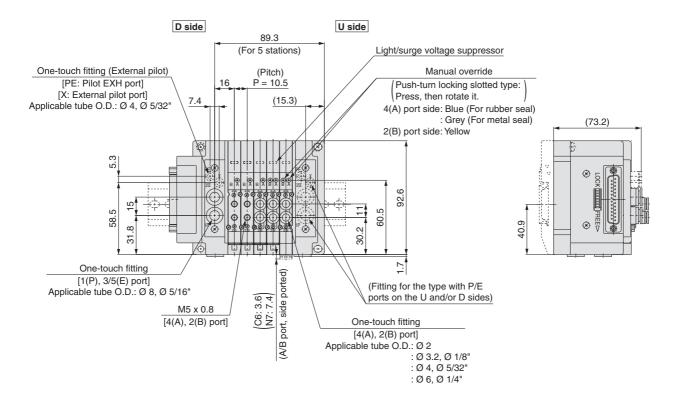

- \*: These figures show the "SS5Y3-12F2-05D".
- \*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 205 for dimensions of silencer.
- \*: Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 100 D-sub connector <IP67>: P. 103 Flat ribbon cable : P. 106 Terminal block box : P. 118 : P. 128 Lead wire Circular connector : P. 138 EX500 (128 points) : P. 148 : P. 154 EX500 (64 points) EX600 : P. 164, 165 : P. 176 EX250 EX260 : P. 184

: P. 192 : P. 200

EX126

EX120

**SMC** 


Series SY5000


Plug-in Connector Connecting Base

Type 12/Top Ported

All Wirings

SS5Y5-12 $\square$ -Stations  $\stackrel{\mathsf{U}}{\stackrel{\mathsf{D}}{\triangleright}}(\mathsf{R})$ 

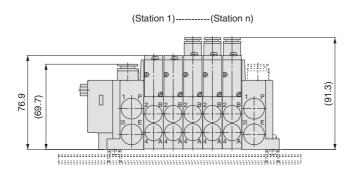

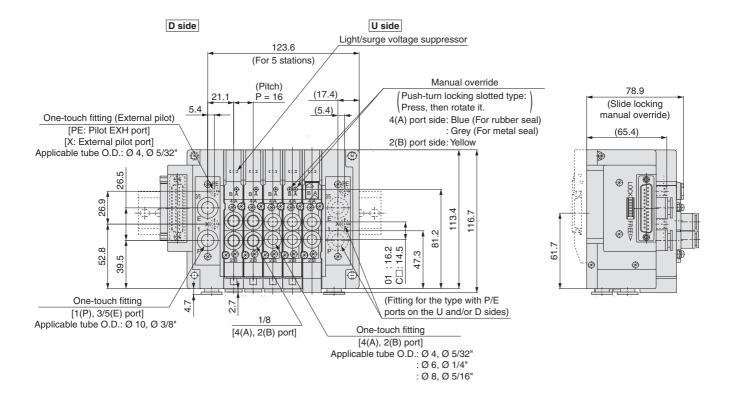

- \*: These figures show the "SS5Y5-12F2-05D".
- \*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 206 for dimensions of silencer.
- \*: Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 101 D-sub connector <IP67>: P. 104 Flat ribbon cable : P. 107 Terminal block box : P. 119 Lead wire : P. 129 : P. 139 Circular connector EX500 (128 points) : P. 149 EX500 (64 points) : P. 155 EX600 : P. 166, 167 EX250 : P. 177 : P. 185 EX260 : P. 193 EX126 EX120 : P. 201



Manifold Options


Plug-in Connector Connecting Base


: Ø 12

Type 12/Top Ported All Wirings

Series SY7000

SS5Y7-12□-Stations D(R)

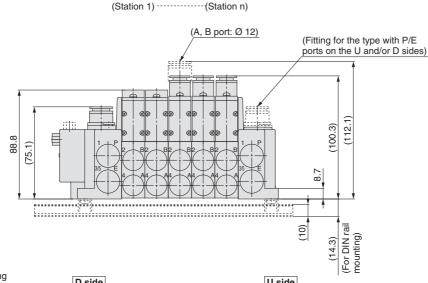

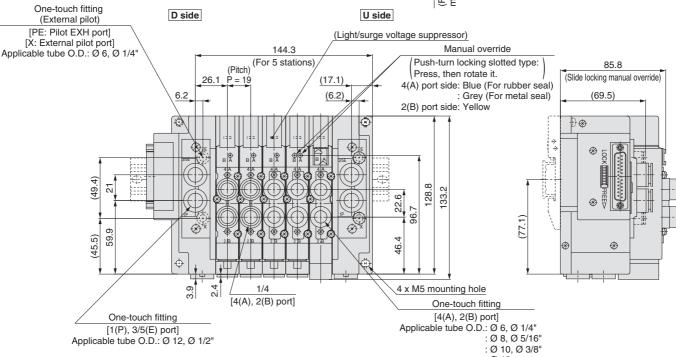

\*: These figures show the "SS5Y7-12F2-05D".

\*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 207 for dimensions of silencer.

Refer to the below pages for dimensions that are not specified in each wiring specification.
 D-sub connector <IP40>: P. 102

D-sub connector <IP67>: P. 105 Flat ribbon cable : P. 108 : P. 120 Terminal block box : P. 130 Lead wire : P. 140 Circular connector : P. 150 EX500 (128 points) : P. 156 EX500 (64 points) : P. 168, 169 EX600 EX250 : P. 178 : P. 186 EX260 EX126 : P. 194 : P. 202 EX120



Type 10 Side Ported

Type 11
Bottom Ported

#### Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67)

Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120


## Series SY3000/5000

to Order Manifold

The SY3000 can be mounted onto the SY5000 size manifold.

#### **How to Order Manifold**

Refer to page 222 for dimensions of Type 11/Bottom ported type.

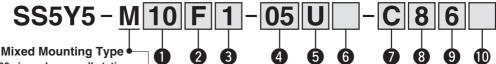

It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 12.5 mm.

#### **1** Туре

10	Side ported
11	Bottom ported

2 Connector type

Connector type				
Symbol	Туре		Page	
F	D-sub connector	IP40		
FW	(25 pins)	IP67		
Р		26 pins		
PG	Flat ribbon cable	20 pins	97	
PH		10 pins		
J	PC wiring			
G	(20 pins)	With power supply terminal		
Т	Terminal blo	ck box	115	
L1		34 cores		
L2	Lead wire	17 cores	125	
L3		9 cores		
M	Circular cor	nector	135	
S□		EX500 Gateway Decentralised System 2 (128 Points)	145	
S□	Serial transmission	EX500 Gateway Decentralised System (64 Points)	151	
S6□		EX600	161	
S□		EX250	173	
S□		EX260	181	
S4□		EX126	189	
<b>S3</b> □		EX120	197	

<sup>\*:</sup> Refer to the pages shown in the table above for details.

#### 4 Valve stations

Symbol	Stations	Note		
02	2 stations	Some connectors have a limitation		
:		on the number of stations. Refer to the pages shown in the table		
24	24 stations	"Connector type" for details.		

#### **5** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

<sup>\*:</sup> Refer to page 161 for the EX600 and 7 on page 173 for the EX250.

#### 6 SUP/EXH block assembly

_		
	_	Internal pilot
	S	Internal pilot, Built-in silencer
	R	External pilot

- 3/5(E) port is plugged for the built-in silencer type.
- \*: Refer to page 161 for the EX600 and 7 on page 173 for the EX250.

Fitting type: One-touch fitting

Symbol		A, B port		
С		Stra	ight	
L	Metric size	Elbour	Upward*2	
В		Elbow	Downward*2	
N	Inch size	Straight		
LN		Elbow	Upward*2	
BN		⊏ibow	Downward*2	
CM*1	Mixed sizes	Straight		
LM*1	IVIIXEU SIZES	Elbow (Including upward	and downward piping)*2	

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252). Elbow fittings are not available for Type 11 (Bottom ported).
- \*: Elbow fittings: Ø 2, Ø 3.2 and Ø 1.8" are not available for the SY3000 series. Ø 2, Ø 3.2, Ø 1.8" and Ø 5/32" are not available for the SY5000

#### 3

#### With Lead wire

#### Lead wire length

Leau wire length					
1	0.6 m				
2	1.5 m				
3	3 m				

• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

#### Connector entry direction

1	Upward
2	Lateral

<sup>\*:</sup> It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### 8 SY5000: A, B port size

(Metric/One-touch fitting)

<u> </u>	<u> </u>
Symbol	Port size
4	Ø 4
6	Ø 6
8	Ø 8
_	For all stations of SY3000

	nc	h/	Or	ıe-	to	uc	h	tit	tir	ıg)	)
7	<u> </u>	- I-	- 1					<u> </u>		- 1	

Symbol	Port size				
3	Ø 5/32"				
7	Ø 1/4"				
9	Ø 5/16"				
	For all stations of SY3000				

\*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### 9 SY3000: A, B port size

(Metric/One-touch fitting)

Symbol	Port size	
2	Ø2	
3	Ø 3.2	
4	Ø 4	
6	Ø 6	
8	Ø 8*1	
. d. The conduct with the first the consequence		

(Inch/One-touch fitting)

Symbol	Port size
1	Ø 1/8"
3	Ø 5/32"
7	Ø 1/4"
9	Ø 5/16"* <sup>1</sup>


- \*1: The valve pitch is the same as the SY5000.
- \*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### **M**ounting


	_	Direct mounting				
	D	DIN rail mounting (With DIN rail)				
	D0		DIN rail mounting (Without DIN rail)			
	D3	For 3 stations	Specify a longer rail than the standard length.			
	:	:	[The SY5000 valve is now at a mountable length			
D	)24	For 24 stations	ons (manifold block length of 16 mm).]			

- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 220 to determine the L3 using "Calculation formula" for the DIN rail length.
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **How to Order Manifold Assembly**

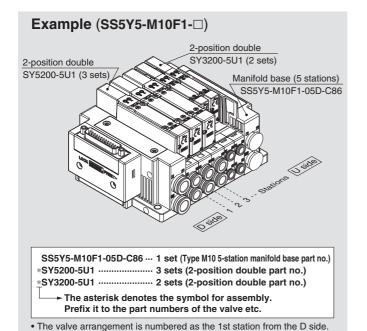


- Under the manifold part number, state the valves to be mounted in order
- from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 226. In this case, use caution as there is also output on the A and B port on base
  - Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

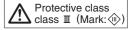



#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

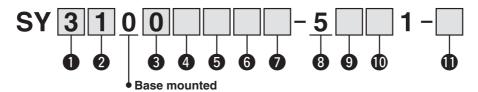

#### Series

OCI ICS		
	3	SY3000
	5	SY5000

2 Type of actuation

• Type of detadtion			
1	O maniting	Single	
2	2-position	Double	
3	3 4 3-position 5	Closed centre	
4		Exhaust centre	
5		Pressure centre	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
B*1		N.O./N.O.	
C*1	duai 3-poit	N.C./N.O.	

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if back pressure check valve is required for the valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_		
_	_	Standard (0.7 MPa)
B Quick response type (0.7 M		Quick response type (0.7 MPa)
K	*1	High pressure type (1.0 MPa)


\*1: Only metal seal type is available for the high pressure type.

Coil type

C com type		
	_	Standard
	T	With power saving circuit (Continuous duty type)

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

Manual override

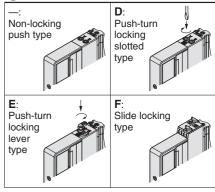

\*: Refer to page 31 for with the safety slide locking manual override.

#### 8 Rated voltage

_	
5	24 V DC
6	12 V DC

\*: Only 24 V DC is available for the serial transmission type.

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
_		_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: "—" is not available for the SI Unit manifold.
  \*: Only "Z" and "NZ" types are available for with
  the power saving circuit. Select a valve which
- the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

Refer to the pages below for details. EX500: P.147, 153 EX600: P.163 EX250: P.175 EX260: P.183 EX126: P.191 EX120: P.199

Type of mounting screw

- 71	
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.
  Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



**SMC** 

216

Type 10 Side Ported

Type 11
Bottom Ported

# Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67)

Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120

# Series SY5000/7000

The SY5000 can be mounted onto the SY7000 size manifold.

**How to Order Manifold** 

Refer to page 223 for dimensions of Type 11/Bottom ported type.

SS5Y7 - M 10 F 1 - 05 U - C 10 8 Mixed Mounting Type 1 2 3 4 5 6 7 8 9 0

It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 19 mm.

#### 1 Type

10	Side ported
11	Bottom ported

2 Connector type

Connector type				
Symbol	Туре	Page		
F	D-sub connector IP40			
FW	(25 pins) IP67			
Р		26 pins		
PG	Flat ribbon cable	20 pins	97	
PH		10 pins		
J	PC wiring			
G	(20 pins)	With power supply terminal		
Т	Terminal blo	ck box	115	
L1		34 cores		
L2	Lead wire	17 cores	125	
L3	9 cores			
M	Circular connector		135	
S□		EX500 Gateway Decentralised System 2 (128 Points)	145	
S□	Serial transmission	EX500 Gateway Decentralised System (64 Points)	151	
S6□		EX600	161	
S□		EX250	173	
S□		EX260	181	
S4□		EX126	189	
<b>S3</b> □		EX120	197	

<sup>\*:</sup> Refer to the pages shown in the table above for details.

#### 4 Valve stations

Symbol	Stations	Note		
02	2 stations	Some connectors have a limitation on the number of stations. Refer to the pages shown in the table		
:				
24	24 stations	"Connector type" for details.		

#### **5** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)
	_

<sup>\*:</sup> Refer to page 161 for the EX600 and 7 on page 173 for the EX250.

#### 6 SUP/EXH block assembly

	,
_	Internal pilot
s	Internal pilot, Built-in silencer
R	External pilot

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: Refer to page 161 for the EX600 and 7 on page 173 for the EX250.

Fitting type: One-touch fitting

	3 71				
Symbol	A, B port				
С		Straight			
L	Metric size	Elbow	Upward*2		
В			Downward*2		
N		Straight			
LN	Inch size	Elbow	Upward*2		
BN			Downward*2		
CM*1	Mixed sizes	Straight			
LM*1	Mixeu Sizes	Elbow (Including upward and downward piping)*2			

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

- \*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252). Elbow fittings are not available for Type 11 (Bottom ported).
- \*: Elbow fittings: Ø 1/4" and Ø 5/16" are not available.

#### 3

#### With Lead wire

#### Lead wire length

Leau wire length		
1	0.6 m	
2	1.5 m	
3	3 m	

• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

#### Connector entry direction

1	Upward
2	Lateral

<sup>\*:</sup> It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### 8 SY7000: A, B port size

(Metric/One-touch fitting)

(		
Port size		
Ø 6		
Ø 8		
Ø 10		
Ø 12		
For all stations of SY5000		

(Inch/One-touch fitting)

	Symbol	Port size
<b>7</b> Ø 1/4"		Ø 1/4"
<b>9</b> Ø 5/16"		Ø 5/16"
	<b>11</b> Ø 3/8"	
	_	For all stations of SY5000
١		

\*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### 9 SY5000: A, B port size

(Metric/One-touch fitting)

(Inch	One-	touch	fitting
-------	------	-------	---------

Symbol	Port size	Symbol	Port size
6	Ø 6	7	Ø 1/4"
8	Ø 8	9	Ø 5/16"
10	Ø 10	11	Ø 3/8"
12	Ø 12		

- \*: The valve pitch is 19 mm, the same as the SY7000.
- \*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### Mounting and Option

woulding and option				
Cumbal	Mounting	Opt	tion	
Symbol		Name plate	Station number	
_	Divast	_	_	
AA	Direct mounting	•		
BA		•	_	
D□	DIN rail mounting	_	_	
A□		•		
В□		•	_	
_				


**DIN Rail Option** 

_	Direct mounting		
0	Without DIN rail (with bracket)		
3	For 3 stations	Specify a longer rail	
:		than the total length	
24	For 24 stations	of specified stations.	


- \*: Enter the number of stations inside 

  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 220 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- \*: The manifold block width is 19 mm for both the SY5000 and SY7000
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **How to Order Manifold Assembly**

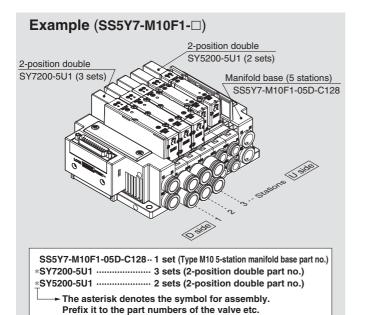

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- \*: When mixing top ported configurations, select from page 226. In this case, use caution as there is also output on the A and B port on base
  - Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

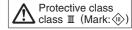




# Series SY5000/7000

#### **How to Order Valves (With mounting screw)**

Refer to page 13 for valve specifications.

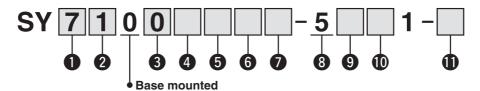

#### Series

OCI ICS		
	5	SY5000
	7	SY7000

2 Type of actuation

- Type of dotadtion				
1	0	Single		
2	2-position	Double		
3	3-position	Closed centre		
4		Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4-position dual 3-port	N.C./N.C.		
		N.O./N.O.		
	duai 3-poit	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	_	None
	Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if back pressure check valve is required for the valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	o i not taite option		
— Standard (0.7 MPa)		Standard (0.7 MPa)	
B Quick response type (0.7 MPa)		Quick response type (0.7 MPa)	
K*1 High pressure type (1.0 MF		High pressure type (1.0 MPa)	


\*1: Only metal seal type is available for the high pressure type.

Coil type

Oon type			
_	Standard		
Т	With power saving circuit (Continuous duty type)		

- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

Manual override

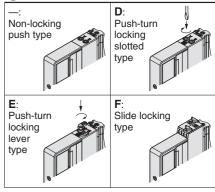

\*: Refer to page 31 for with the safety slide locking manual override.

#### 8 Rated voltage

5	24 V DC
6	12 V DC

\*: Only 24 V DC is available for the serial transmission type.

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
_	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: "—" is not available for the SI Unit manifold.
  \*: Only "Z" and "NZ" types are available for with
  the power saving circuit. Select a valve which
- the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

Refer to the pages below for details. EX500: P.147, 153 EX600: P.163 EX250: P.175 EX260: P.183 EX126: P.191 EX120: P.199

Type of mounting screw

	- 71	· · · · · · · · · · · · · · · · ·
<ul> <li>Round head combination screw</li> </ul>		Round head combination screw
B Hexagon socket head cap screw		Hexagon socket head cap screw
	K	Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
  \*: When ordering a valve individually, the
- base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Plug-in

Dimensions: Series SY3000/5000


**Connector Connecting Base** 

Plug-in Type 10/Side Ported Mixed Mounting Type

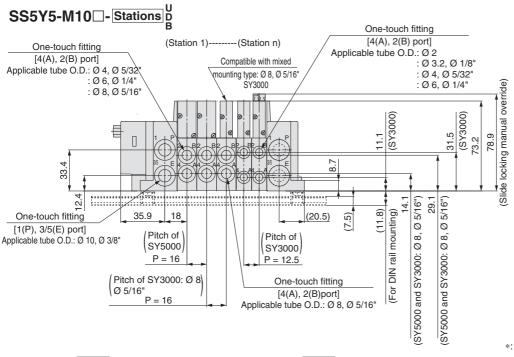

D side U side Manual override Push-turn locking slotted type: DIN rail holding screw Press, then rotate it. 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) : Grey (For metal seal) DIN rail Light/surge voltage suppresso 2(B) port side: Yellow ₹Ÿ? 35 a a a 97 8 61.7 5.5 0.0 4 x M5 (8.3) (5.9)mounting hole (Fitting for the type with P 21.9 and E ports on both sides) 5.3 (L4) (DIN rail mounting hole pitch: 12.5) (L3)

\*: Refer to pages 205 and 206 for dimensions of external pilot, built-in silencer and elbow fittings.

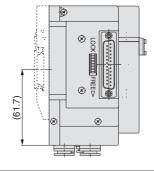

#### Calculation formula for dimensions with D-sub connector <IP40>, Flat ribbon cable and PC wiring

 $L1 = 12.5 \times n1 + 16 \times n2 + 76.4$  $L2 = 12.5 \times n1 + 16 \times n2 + 48$ 

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5 L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø 8, Ø 5/16")

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralised System 2 (128 Points)	88.7	_	_
EX500 Gateway Decentralised System (64 Points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø 8, Ø 5/16")

Decimal fractions are truncated.

n3: Number of I/O units or input block stations

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box, Lead

EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ 

 $L2 = 12.5 \times n1 + 16 \times n2 \times 48$  M = L1/12.5 + 1 Decimal fract

wire. Circular connector


 $L3 = 12.5 \times M + 23$ L4 = L3 - 10.5L5 = (L3 - L1)/2 $L6 = b \times n3 + c$ 


Refer to pages 166 to 167 for dimensions of the EX600 serial transmission with I/O unit and page 177 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.



Dimensions: Series SY5000/7000

Plug-in Type 10/Side Ported
Connector Connecting Base Mixed Mounting Type

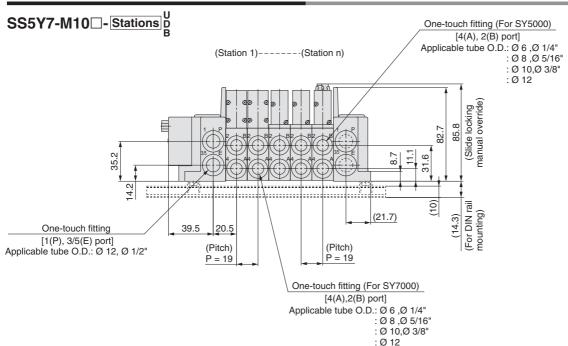

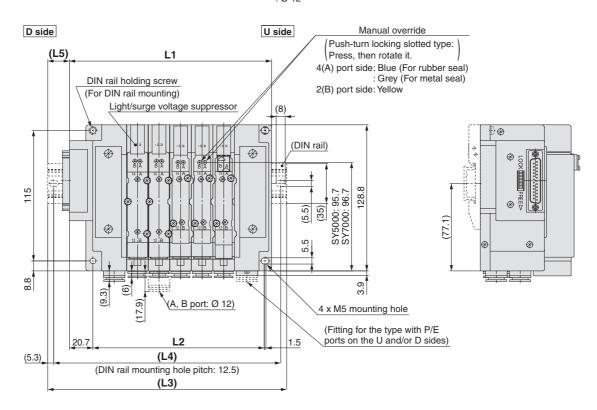


\*: Refer to page 207 for dimensions of external pilots and built-in silencers.

\*: Refer to the below pages for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 102 D-sub connector <IP67>: P. 105 Flat ribbon cable : P. 108 : P. 120 Terminal block box : P. 130 Lead wire Circular connector : P. 140 EX500 (128 points) : P. 150 : P. 156 EX500 (64 points) : P. 168, 169 EX600 EX250 : P. 178 EX260 : P. 186 : P. 194 EX126 : P. 202 EX120

221

Plug-in **Connector Connecting Base**  Type 11/Bottom Ported **Mixed Mounting Type** 

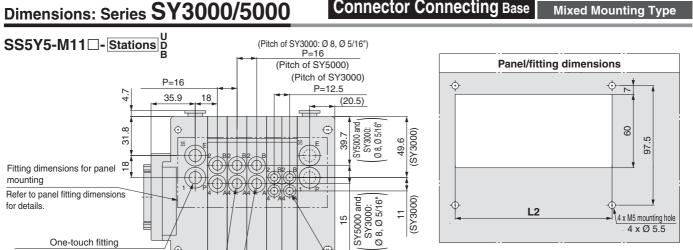

[1(P), 3/5(E) port] Applicable tube O.D.: Ø 10, Ø 3/8' One-touch fitting [4(A), 2(B) port] One-touch fitting Applicable tube O.D.: Ø 2 [4(A), 2(B) port] One-touch fitting Ø 3.2, Ø 1/8" Applicable tube O.D.: Ø 4, Ø 5/32' [4(A), 2(B) port] Ø 4, Ø 5/32" : Ø 6, Ø 1/4" Applicable tube O.D.: Ø 8, Ø 5/16" : Ø 6, Ø 1/4" : Ø 8, Ø 5/16"

(Station 1)----(Station n)

One-touch fitting

Compatible with mixed mounting type: Ø 8, Ø 5/16 SY3000 (Slide locking manual override) 78.9 73.2 (SY3000) (Fitting for the type with P (SY5000) (12.9)€. 2 and E ports on both sides) 7 6) L1 D side U side Manual override Push-turn locking slotted type:

Press, then rotate it. 4(A) port side: Blue (For rubber seal) 4 x M5 mounting hole Grey (For metal seal) 2(B) port side: Yellow 8 (8) 113.4 97. 8 8 21.9 L2 1.5


21:0		1.0	
Coefficient	а	b	С
D-sub connector <ip40>, Flat ribbon cable or PC wiring</ip40>	76.4		_
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3		_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralised System 2 (128 Points)	88.7		_
EX500 Gateway Decentralised System (64 Points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

#### Calculation formula for dimensions

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$  $L2 = 12.5 \times n1 + 16 \times n2 + 48$ 

 $L6 = b \times n3 + c$ 

- n1: Number of valve stations of the SY3000
- n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø 8, Ø 5/16")
- n3: Number of I/O units or input block stations
- \*: Refer to pages 166 and 167 for dimensions of the EX600 serial transmission with I/O Unit and page 177 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

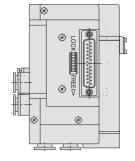

\*: Refer to page 208 for dimensions of external pilots and built-in silencers.

Dimensions: Series SY5000/7000

Plug-in Connector Connecting Base Type 11/Bottom Ported

**Mixed Mounting Type** 

SS5Y7-M11 - Stations D

39.5

Φ

39.

20.5

- \*: Refer to page 209 for dimensions of external pilots and built-in silencers.
- \*: Refer to the below pages for L1, L2 dimensions and other dimensions that are not specified in each wiring specification.

Dimensions of Type 11/Bottom ported: P. 209 D-sub connector <IP40> : P. 102 D-sub connector <IP67> : P. 105 : P. 108 Flat ribbon cable : P. 120 Terminal block box Lead wire : P. 130 : P. 140 Circular connector : P. 150 EX500 (128 points) : P. 156 EX500 (64 points) : P. 168, 169 EX600 EX250 : P. 178 EX260 : P. 186

Fitting dimensions for panel mounting

EX126 EX120

Refer to panel fitting dimensions for details.

One-touch fitting (For SY7000)

[4(A), 2(B) port]

One-touch fitting (For SY5000)

[4(A), 2(B) port]

(Station 1)----(Station n)

ļintei:

(Pitch)

P = 19

(Pitch)

P = 19

(21.7)


ф


48.

19.5

1" Applicable tube O.D.: Ø 6 ,Ø 1/4" 16" : Ø 8 ,Ø 5/16"


: Ø 8 ,Ø 5/16 : Ø 10,Ø 3/8" : Ø 12

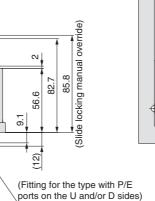

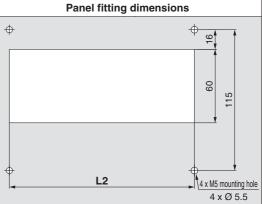


: P. 194

: P. 202

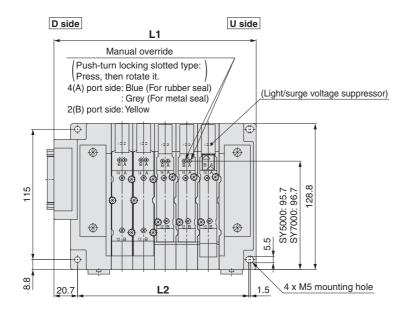

(A, B port: Ø 12)

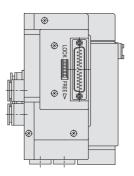

**SMC** 

# Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67)

Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120


#### Type 12 Top Ported

# Series **SY**3000/5000/7000 ∈ €

For the SY5000 series, the SY5000 and the SY3000 can be mounted on the same manifold. For the SY7000 series, the SY7000 and the SY5000 can be mounted on the same manifold.

#### **How to Order Manifold**

Refer to pages 211 and 212 for dimensions of Type 12/Top ported type.

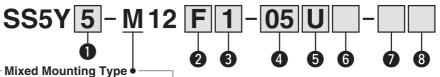

Page

For the SY5000 series, it is possible to mount the SY3000 size valves on all stations. However, the SY3000 manifold block width should be 12.5 mm. (16 mm for Ø 8 or Ø 5/16" One-touch fitting)

Also, for the SY7000 series, it is possible to mount the SY5000 size valves on all stations. However, the SY3000 cannot be mounted onto the SY7000 series.

#### Series

- 00.	100
5	SY5000
7	SY7000

# With Lead wire

Lead v	vire length
1	0.6 m
2	1.5 m
3	3 m

• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

#### Connector entry direction

0011110	otor ontry an ootion
1	Upward
2	Lateral

\*: It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### 4 Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

#### P. E port size (One-touch fittings)

			<u> </u>
Symbol	SY5000	SY7000	Note
	Ø 10	Ø 12	Metric size
N	Ø 3/8"	Ø 1/2"	Inch size

## Connector type

Syllibol	i ype		raye	
F	D-sub connector	IP40		
FW	(25 pins)	IP67		
Р		26 pins		
PG	Flat ribbon cable	20 pins	109	
PH		10 pins		
J	PC wiring	_		
G T	(20 pins)	With power supply terminal		
	Terminal blo	ck box	121	
L1		34 cores		
L2	Lead wire	17 cores	131	
L3		9 cores		
M	Circular cor	nector	141	
S□		EX500 Gateway Decentralised System 2 (128 Points)	157	
S□	Serial transmission	EX500 Gateway Decentralised System (64 Points)	159	
S6□		EX600	171	
S□		EX250	179	
S□		EX260	187	
S4□		EX126	195	
S3□		EX120	203	
*: Refer to the pages shown in the table above				

for details.

#### **5** P. E port entry

	, ,
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

- \*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.
- \*: Refer to page 171 for the EX600 and 6 on

#### 6 SUP/EXH block assembly

_	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	


- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: Refer to page 171 for the EX600 and 6 on page 179 for the EX250.

#### 8 Mounting

	_	Direct mounting		
	D	DIN rail mounting (With DIN rail) DIN rail mounting (Without DIN rail)		
	D0			
	D3	stations	r 3 Specify a longer rail than the standard length.	
ĺ	:	:	[For the SS5Y5-M12, the SY5000 valve is now at a mountable	
	D24 For 24 ler stations 16	length (manifold block length of 16 mm).]		

- \*: Refer to page 227 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

# **How to Order Manifold Assembly**

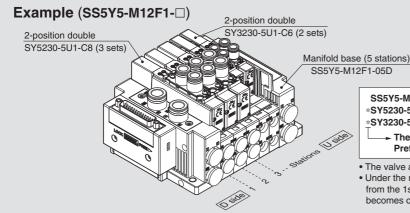

SS5Y5-M12F1-05D ... 1 set (Type M12 5-station manifold base part no.) \*SY5230-5U1-C8 ...... 3 sets (2-position double part no.)

\*SY3230-5U1-C6 ...... 2 sets (2-position double part no.)


The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure on the left. If the arrangement becomes complicated, specify on a manifold specification sheet.

# Manifold Options

#### How to Order Valves (With mounting screw)

Refer to page 13 for valve specifications.

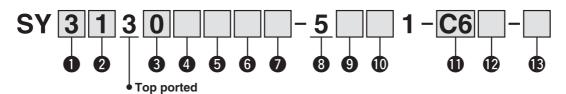

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

2-position	Single		
	Double		
3 4 3-position 5	Closed centre		
	Exhaust centre		
	Pressure centre		
*1 4-position dual 3-port	N.C./N.C.		
	N.O./N.O.		
	N.C./N.O.		
	3-position 4-position		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### Seal type

9 00.	u, po
0	Rubber seal
1	Metal seal

#### 4 Pilot type

	- · · · · · · · · · · · · · · · · · · ·
_	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)
B Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)

\*1: Only metal seal type is available for the high pressure type.

#### Coil type

_	Standard	
Т	With power saving circuit (Continuous duty type)	

- \*: Be sure to select the power saving circuit type when a valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### Bated voltage

iou voitago
24 V DC
12 V DC

\*: Only 24 V DC is available for the serial transmission type.


#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
_	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- \*: "-" is not available for the SI Unit manifold.
- \*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

Refer to the pages below for details. EX500: P.158, 160 EX600: P.172 EX250: P.180 EX260: P.188 EX126: P.196 EX120: P.204

#### Manual override

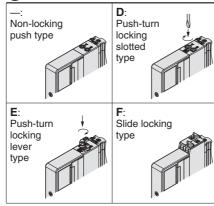

\*: Refer to page 31 for with the safety slide locking manual override.

#### A, B port size

#### Thread piping

	11 0			
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

#### One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø2	•	_	_
<b>C</b> 3	Ø 3.2	•	_	_
C4	Ø 4	•	•	_
C6	Ø 6	•		
C8	Ø 8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•

#### One-touch fitting (Inch)

one todon many (mon)				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		_	_
N3	Ø 5/32"	•		_
N7	Ø 1/4"	•	•	
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•

#### 12 Thread type

_	71
_	Rc
F	G
N	NPT
Т	NPTF

\*: Only - is available for M5.

# 13 Type of mounting screw


_		Round head combination screw
	Hexagon socket head cap screw	
K Round head combination screw (Falling-out		Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

Refer to page 244 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

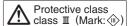

Dimensions: Series SY5000

Plug-in Type 12/Top Ported
Connector Connecting Base Mixed Mounting Type

Type 12/Top Ported

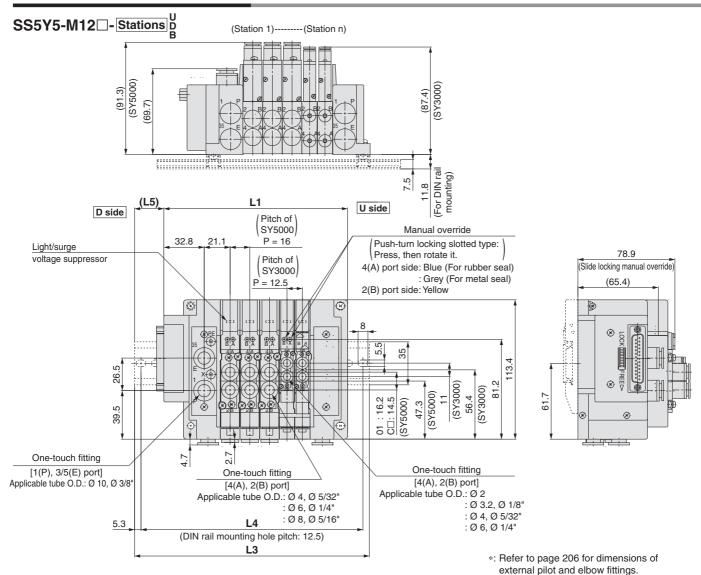

#### Calculation formula for dimensions with D-sub connector <IP40>, Flat ribbon cable and PC wiring

 $L1 = 12.5 \times n1 + 16 \times n2 + 76.4$ 

 $L2 = 12.5 \times n1 + 16 \times n2 + 48$ 

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
EX500 Gateway Decentralized System 2 (128 Points)	88.7	_	_
EX500 Gateway Decentralised System (64 Points)	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

#### Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ 

 $L2 = 12.5 \times n1 + 16 \times n2 \times 48$ 

M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$ 

L4 = L3 - 10.5

L5 = (L3 - L1)/2


 $L6 = b \times n3 + c$ 


- n1: Number of valve stations of the SY3000
- n2: Number of valve stations of the SY5000
- n3: Number of I/O Units or input block stations
- \*: Refer to pages 166 and 167 for dimensions of the EX600 serial transmission with I/O Unit and page 177 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.



Plug-in Type 12/Top Ported
Connector Connecting Base Mixed Mounting Type

Dimensions: Series SY7000

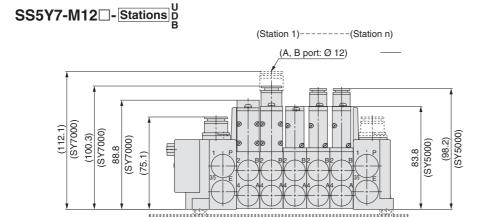


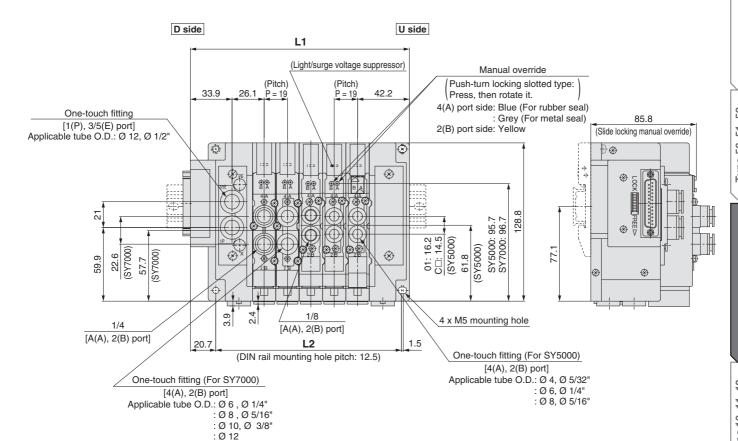


- \*: Refer to page 207 for dimensions of external pilot and elbow fittings.
- \*: Refer to the below pages for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.


Dimensions of Type 12/Top ported: P. 212 D-sub connector <IP40> : P. 102 D-sub connector <IP67> : P. 105 Flat ribbon cable : P. 108 : P. 120 Terminal block box : P. 130 Lead wire Circular connector : P. 140 EX500 (128 points) : P. 150 EX500 (64 points) : P. 156 : P. 168, 169 FX600 : P. 178 EX250 EX260 : P. 186 EX126 : P. 194 EX120 : P. 202

# Series SY3000/5000/7000 Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

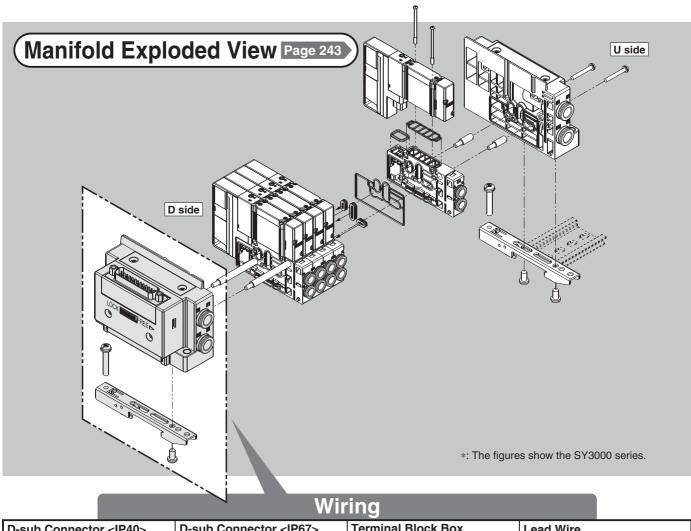

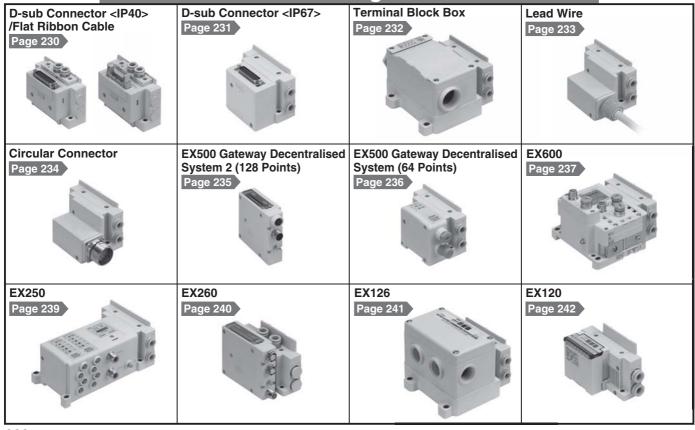


#### Wiring

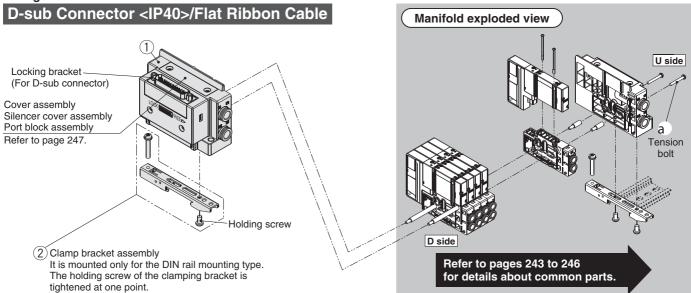

#### Manifold Parts No.

(Tightening torque of holding screw: 1.4 N·m)

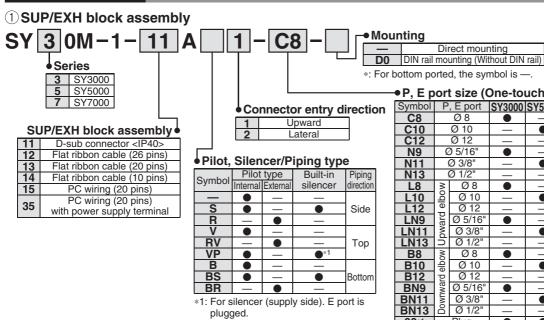

# SUP/EXH block assembly (D side)

docessories and the number of docessories				
Accessories	SY3000	SY5000 SY7000		
a Tension bolt	None*1	3 pcs.		

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### (2) Clamp bracket assembly


-	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.


		t size (C				Note
Symbol	Р	, E port	SY3000	SY5000	SY/000	
C8		Ø8				Side/Bottom/
C10		Ø 10	_		_	Top ported
C12		Ø 12	_			Metric size
N9		ð 5/16"		_	_	Side/Bottom/
N11	9	Ø 3/8"	_		_	Top ported
N13	(	Ø 1/2"	_	_		Inch size
L8	Ν	Ø 8	•	_	_	Cido portod
L10	elbow	Ø 10	_	•	_	Side ported Metric size
L12		Ø 12		_	•	Metric Size
LN9	Upward	Ø 5/16"	•	_	_	Cide norted
LN11	Š	Ø 3/8"	_		_	Side ported Inch size
LN13		Ø 1/2"	_	_	•	IIICII SIZE
B8	elbow	Ø 8	•	_	_	Cido portod
B10	qe	Ø 10	_		_	Side ported Metric size
B12		Ø 12	_	_		Metric Size
BN9	wa	Ø 5/16"	•	_	_	0:-1
BN11	Downward	Ø 3/8"	_	•	_	Side ported Inch size
BN13	Do	Ø 1/2"	_	_	•	inch size
<b>00</b> *1		Plug				P/E port entry on one
00U*2		Plug				side or Top ported

- \*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.
- \*2: "00U" is available only for the D-sub connector type and it has an inch size locking bracket.

<sup>\*: &</sup>quot;B" for bottom ported can be selected for the SY5000/7000 series.

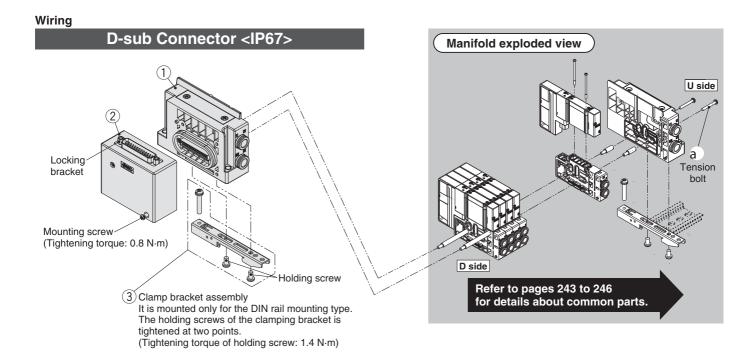

#### Manifold Parts No.

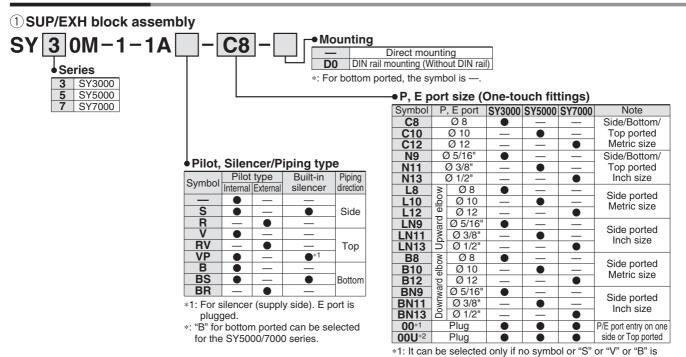

# SUP/EXH block assembly (D side) accessories and the number of accessories

acceptance and the name of acceptance				
Accessories	SY3000	SY5000 SY7000		
a <b>Tension bolt</b>	None*1	3 pcs.		

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### 2 D-sub connector block assembly <IP67>

Part no.	Connector direction	Locking bracket	
SY30M-14-9A1	Тор	Metric size	
SY30M-14-9A2	Side		
SY30M-14-9A1U	Тор	Inch size	
SY30M-14-9A2U	Side		

#### 3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

selected for the pilot and the piping.

\*2: "00U" has an inch size locking bracket.



<sup>\*:</sup> Part number is for one assembly.

# Wiring **Terminal Block Box** Manifold exploded view (Tightening torque: 0.8 N·m) U side Tension bolt Mounting screw for D side Holding connecting parts (Tightening torque: 0.8 N·m) screw Refer to pages 243 to 246 for details about common parts. (4) Clamp bracket assembly It is mounted only for the DIN rail mounting type.

The holding screws of the clamping bracket is tightened at two points.

(Tightening torque of holding screw: 1.4 N·m)


#### Manifold Parts No.

(Tightening torque: 1.4 N·m)

DIN rail holding screw

Mounting screw

(Tightening torque: 1.4 N·m)

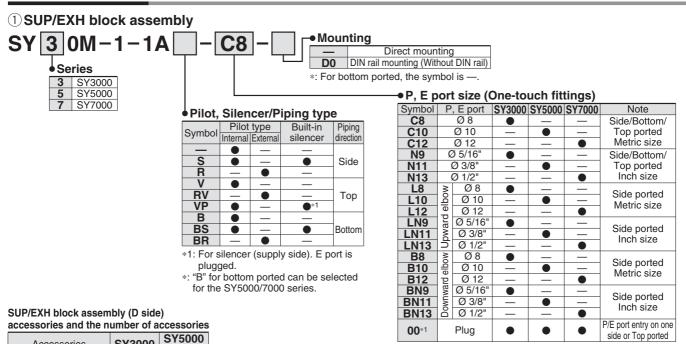

None\*1 \*1: Since the nuts are embedded in the SUP/EXH block.

SY3000

2 Terminal block box housing assembly

#### VVQC1000-T0-1

3 Clamp bracket assembly for terminal block box

SY7000

3 pcs.

# SY30M-15-4A

Accessories

a Tension bolt

\*: Part number is for one assembly

#### 4 Clamp bracket assembly


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

selected for the pilot and the piping.


\*1: It can be selected only if no symbol or "S" or "V" or "B" is

<sup>\*:</sup> Part number is for one assembly.



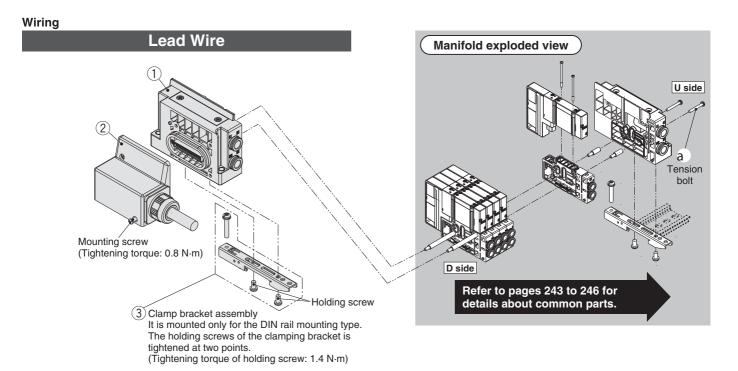

#### Manifold Parts No.

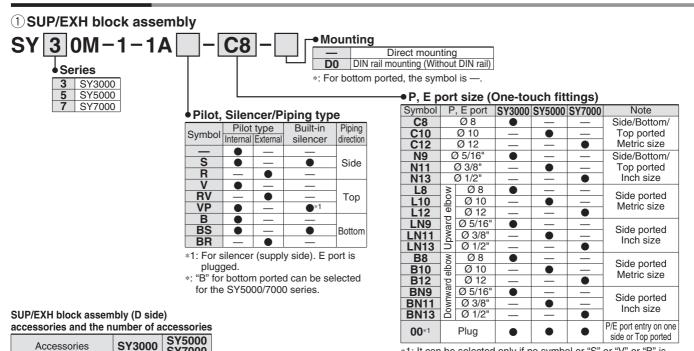

\*1: It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

## 2 Lead wire connector block assembly SY30M-14-4A-Number of cores Lead wire length [m] 0.6

SY7000

3 pcs.


#### 3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.


a Tension bolt

None\*1 \*1: Since the nuts are embedded in the SUP/EXH block.

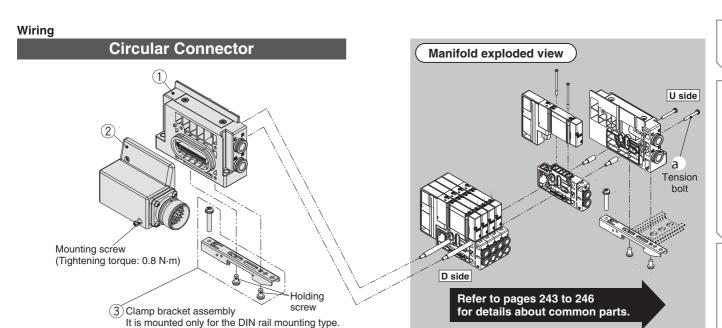

#### Manifold Parts No.

SY7000

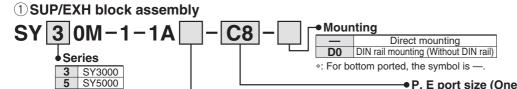

The holding screws of the clamping bracket is

(Tightening torque of holding screw: 1.4 N·m)

tightened at two points.

Pilot, Silencer/Piping type

Cumbal	Pilot	type	Built-in	Piping
Symbol	Internal	External	silencer	direction
_		_		
S		_		Side
R	_		_	
V		_		
RV	_			Top
VP	•	_	<b>●</b> *1	
В		_	_	
BS			•	Bottom
BR	_	•	_	

<sup>\*1:</sup> For silencer (supply side). E port is plugged.

# SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### 2 Circular connector block assembly

# SY30M-14-5A

\*: 26 pins

#### 3 Clamp bracket assembly


<u> </u>	,
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.


<b>-</b> ●P, E p	P, E port size (One-touch fittings)						
Symbol	Р	, E port	SY3000	SY5000	SY7000	Note	
C8		Ø 8		_	_	Side/Bottom/	
C10		Ø 10	_	•	_	Top ported	
C12		Ø 12	_	_		Metric size	
N9	Q	5/16"		_	_	Side/Bottom/	
N11	,	Ø 3/8"	_	•	_	Top ported	
N13	9	Ø 1/2"	_	_		Inch size	
L8	Š	Ø 8		_	_	Side ported	
L10	elbow	Ø 10	_		_	Metric size	
L12		Ø 12	_	_		Wellie Size	
LN9	Upward	Ø 5/16"		_	_	Side ported	
LN11	8	Ø 3/8"	_		_	Side ported Inch size	
LN13		Ø 1/2"	_	_		111011 3126	
B8	elbow	Ø 8		_	_	Side ported	
B10	용	Ø 10	_		_	Metric size	
B12	5	Ø 12	_	_		Metric Size	
BN9	×	Ø 5/16"		_	_	Side ported	
BN11	Downward	Ø 3/8"	_		_	Inch size	
BN13	മ	Ø 1/2"	_	_		IIIOII SIZE	
00*1		Plug	•	•	•	P/E port entry on one side or Top ported	

<sup>\*1:</sup> It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

<sup>\*: &</sup>quot;B" for bottom ported can be selected for the SY5000/7000 series.

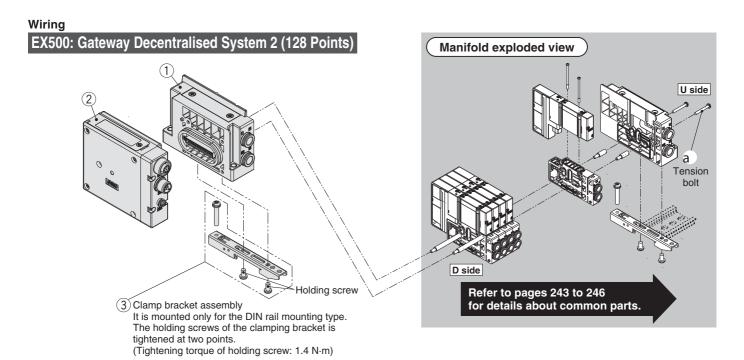

#### Manifold Parts No.

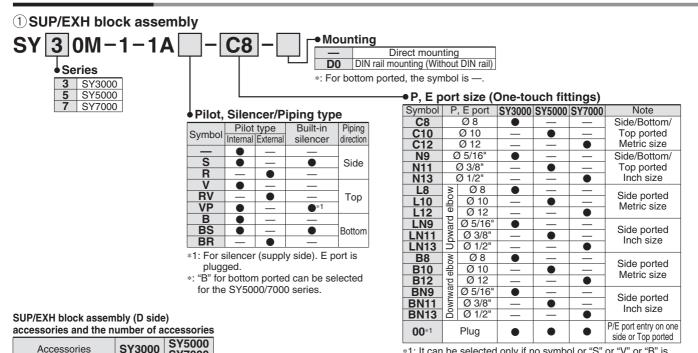

\*1: It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

SY7000

#### 2 EX500 SI Unit

a Tension bolt

#### EX500-S103

#### (3) Clamp bracket assembly

<u></u>				
Series	Part no.			
SY3000	SY30M-15-1A			
SY5000/7000	SY50M-15-1A			

<sup>\*:</sup> Part number is for one assembly.

None\*1 \*1: Since the nuts are embedded in the SUP/EXH block.

for details about common parts.

•

Inch size

Side ported

Metric size

Side ported Inch size

Side ported

Metric size

Side ported

Inch size

P/E port entry on one

side or Top ported

Ø 1/2

Upward

LN9

BN9

00\*1

Ø 8

Ø 10

Ø 12

Ø 5/16'

Ø 3/8" Ø 1/2" Ø 8

Ø 10

Ø 12

Ø 5/16'

Ø 3/8

Ø 1/2"

selected for the pilot and the piping.

Plug

•

\*1: It can be selected only if no symbol or "S" or "V" or "B" is

# Wiring EX500: Gateway Decentralised System (64 Points) Manifold exploded view U side Tension bolt Mounting screw (Tightening torque: 0.8 N·m) D side Holding screw Refer to pages 243 to 246


#### Manifold Parts No.

(3) Clamp bracket assembly

tightened at two points.

It is mounted only for the DIN rail mounting type. The holding screws of the clamping bracket is

(Tightening torque of holding screw: 1.4 N·m)

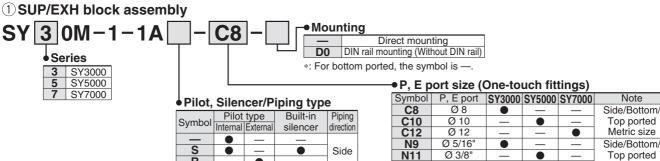


- ,	internai	Externai	silencer	airection
_		_	_	
S	•	_	•	Side
R	_	•	_	
V		_	_	
RV	_	•	_	Top
VP		_	<b>●</b> *1	
В			_	
BS		_		Bottom
BR	_		_	
*1: For silencer (supply side). E port is				

plugged.

#### SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

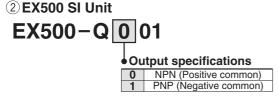


#### (3) Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


<sup>\*:</sup> Part number is for one assembly.



<sup>&</sup>quot;B" for bottom ported can be selected for the SY5000/7000 series.

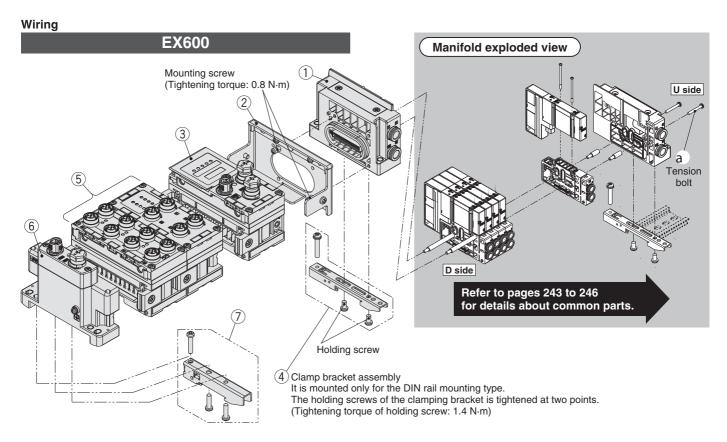

#### Manifold Parts No.

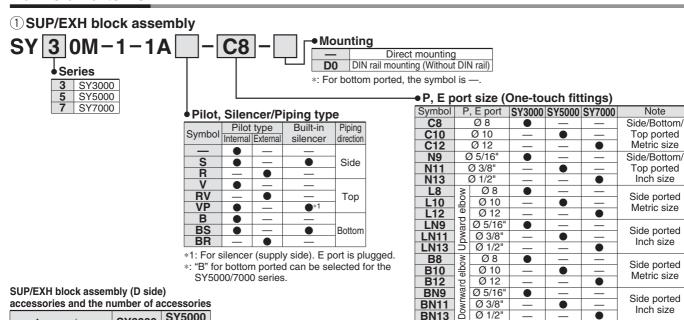

#### SUP/EXH block assembly (D side) accessories and the number of accessories

2 Valve plate

**EX600-ZMV2** 

\*: With mounting screws

Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### ③ EX600 SI Unit

EX600-S PR

Protocol <b>♦</b>
Description
PROFIBUS DP
DeviceNet™
CC-Link
EtherNet/IP™*1
EtherCAT®*1
PROFINET*1

<sup>\*1:</sup> Cannot be communicated with the EX600-HT1-□.

\*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping

Side ported

Inch size

P/E port entry on one

side or Top ported

#### Version Symbol Description When MJ, EN, EC or PN is selected When PR or DN is selected

Ø 5/16

Ø 3/8'

Ø 1/2

Plug

BN9

**BN11** 

Output type

BN13

Symbol	Description	Condition
1	PNP (Negative common)	Can be selected by all protocols.
2	NPN (Positive common)	Can be selected by all protocols.
3	PNP (Negative common) EtherNet/IP (2 ports)	Can be selected in the case of EN.
4	NPN (Positive common) EtherNet/IP (2 ports)	Can be selected in the case of EN.

#### (4) Clamp bracket assembly

(2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

<u> </u>				
Series	Part no.			
SY3000	SY30M-15-1A			
SY5000/7000	SY50M-15-1A			

<sup>\*:</sup> Part number is for one assembly.

#### Manifold Parts No.


#### 5 EX600 Digital Input Unit

# EX600-DX P B

en circuit detection, and connector Connector


D-sub connector (25 pins)\*1\*2 Spring type terminal block (32 pins)\*1\*2

ını	put type	•	INUIII	iber of imp	uis, open d	arcuit detection, and connect
Symbol	Description		Symbol	Number of inputs	Open circuit detection	Connector
Р	PNP		В	8	No	M12 connector (5 pins) 4 pcs.
N	NPN		С	8	No	M8 connector (3 pins) 8 pcs.
			C1	8	Yes	M8 connector (3 pins) 8 pcs.
			D	16	No	M12 connector (5 pins) 8 pcs.

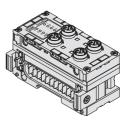

#### **5 EX600 Digital Output Unit**


EX600-DY|P|B

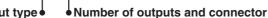

Out	Output type		
Symbol	Description		
Р	PNP		
N	NPN		

The state of the s		
Symbol Number of outputs		Connector
В	8	M12 connector (5 pins) 4 pcs.
E	16	D-sub connector (25 pins)*1*2
F	16	Spring type terminal block (32 pins)*1*2

No

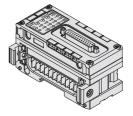

#### **5 EX600 Digital Input/Output Unit**


EX600-DM P

Input/	Output	type •
--------	--------	--------

Number of inputs/outputs and connector

_		P 0.1 1)  P 0
	Symbol	Description
	Р	PNP
	N	NPN

Symbol	Number of inputs	Number of outputs	Connector
Е	8	8	D-sub connector (25 pins)*1*2
F	8	8	Spring type terminal block (32 pins)*1*2

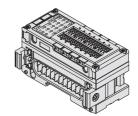

#### **5 EX600 Analog Input/Output Unit**


**EX600-**

Ar

nalog input/output ♦	<ul> <li>Number of input channels and connecto</li> </ul>		
Symbol Description	Symbol Number of input channels	Connector	

Symbol	Description
AX	Analog input
AY	Analog output

Symbol	Number of input channels	Connector		
Α	2 channels	M12 connector (5 pins) 2 pcs.*3		
*3: Refer to *1 and *2 below for AY.				

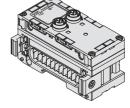


#### **5 EX600 Analog Input/Output Unit**

#### EX600-AMB

Analog input/output

• Number of inputoutput charmers and connector			s and connector
Symbol	Number of input channels	Number of output channels	Connector
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.*1*2

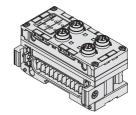


#### 6 EX600 end plate

**EX600-ED** 


	WCI COIIIICOLOI 9
Symbol	Connector
2	M12 (5 pins)
3	7/8 inch (5 pins)

Symbol	Description
_	Without DIN rail mounting bracket
3	With DIN rail mounting bracket

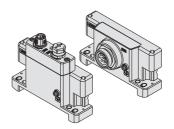

#### Oclamp bracket for EX600

# EX600-ZMA3

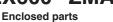



Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.



<sup>\*2:</sup> Cannot be connected with the EX600-SPR1, EX600-SPR2, EX600-SDN1, or EX600-SDN2.



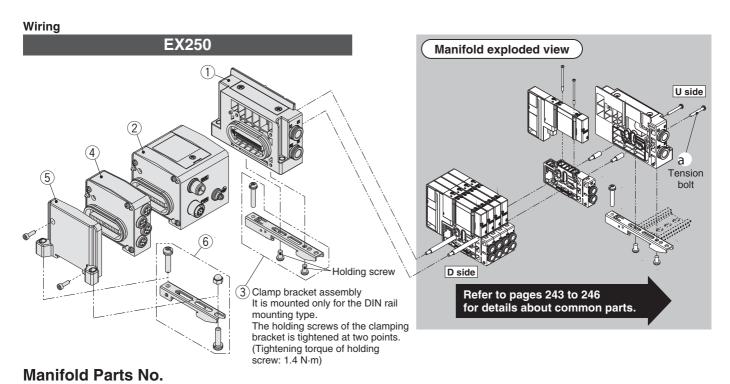

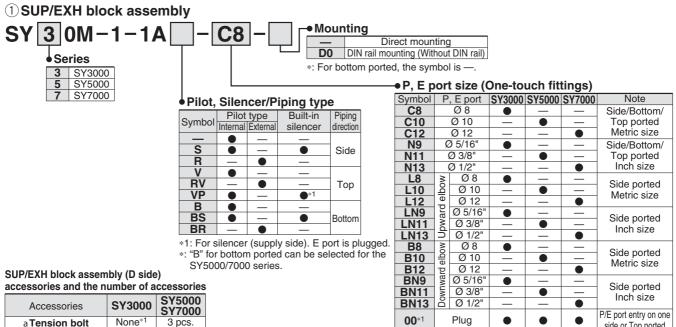

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### 2 EX250 SI Unit

EX250-S DN1

#### Communication protocol

DN1	DeviceNet™ (Negative common)
PR1	PROFIBUS DP (Negative common)
MJ2	CC-Link (Positive common)
AS3	AS-Interface (8 in/8 out, 31 slave modes, 2 isolated common type) (Negative common)
AS5	AS-Interface (4 in/4 out, 31 slave modes, 2 isolated common type) (Negative common)
AS7	AS-Interface (8 in/8 out, 31 slave modes, 1 common type) (Negative common)
AS9	AS-Interface (4 in/4 out, 31 slave modes, 1 common type) (Negative common)
CA1A	CANopen (Negative common)
EN1	EtherNet/IP™ (Negative common)

#### ③ Clamp bracket assembly

Series	Part no.		
SY3000	SY30M-15-1A		
SY5000/7000	SY50M-15-1A		

<sup>\*:</sup> Part number is for one assembly.

#### 4 Input block

EX250-IE

# Block type

selected for the pilot and the piping.

	7
1	M12 connector, 2 inputs
2	M12 connector, 4 inputs
3	M8 connector, 4 inputs

\*1: It can be selected only if no symbol or "S" or "V" or "B" is

side or Top ported

#### 5 EX250 end plate assembly

#### EX250-EA1

\*: With mounting screws (2 pcs. of M3 x 10)

#### 6 Clamp bracket assembly for EX250 SI Unit

#### SY30M-15-3A

\*: Part number is for one assembly.




Note

Side/Bottom/

# EX260 Manifold exploded view U side Tension bolt It is mounted only for the DIN rail mounting type. The holding screws of the clamping bracket is tightened Refer to pages 243 to 246 for details about common parts.

#### Manifold Parts No.



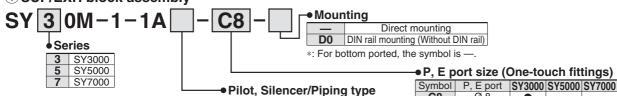

at two points. (Tightening torque of holding screw: 1.4 N·m)

			1 3 71	
Symbol	Pilot	type External	Built-in	Piping
Symbol	Internal	External	silencer	direction
_			_	
S		_	•	Side
R	_		_	
V		_	_	
RV	_	•	_	Тор
VP		_	<b>●</b> *1	
В			<u> </u>	
BS		_	•	Bottom
BR			_	

SUP/EXH block assembly (D side) accessories and the number of accessories

Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

- \*1: Since the nuts are embedded in the SUP/EXH block.
- \*1: For silencer (supply side). E port is plugged.
- \*: "B" for bottom ported can be selected for the SY5000/7000 series.

C10		Ø 10	_		_	l op ported	
C12		Ø 12	_	_	•	Metric size	
N9	Q	ð 5/16"		_	_	Side/Bottom/	
N11		Ø 3/8"	_	•	_	Top ported	
N13	!	Ø 1/2"	_	_	•	Inch size	
L8	Š	Ø8		_	_	Side ported	
L10	elbow	Ø 10	_		_	Metric size	
L12		Ø 12	_	_	•	Wietric Size	
LN9	Upward	Ø 5/16"		_		Cida namad	
LN11	8	Ø 3/8"	_		_	Side ported Inch size	
LN13	_	Ø 1/2"	_	_	•	IIICII SIZE	
B8	elbow	Ø8		_	_	Cido portod	
B10	g	Ø 10	_	•	_	Side ported Metric size	
B12		Ø 12	_	_	•	Wietric Size	
BN9	wa	Ø 5/16"	•	_		Cido ported	
BN11	Downward	Ø 3/8"	_		_	Side ported Inch size	
BN13	2	Ø 1/2"	_	_	•	inch size	
00*1		Plug	•	•	•	P/E port entry on one side or Top ported	

\*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

#### 2 EX260 SI Unit

# EX260-S PR1

#### • Communication protocol

COII	IIIIuIIICalio	ii pro	locoi								
Symbol	Protocol	Number of outputs	SI Unit output polarity	Communication connector	Manifold symbol	Symbol	Protocol	Number of outputs	SI Unit output polarity	Communication connector	Manifold symbol
DN1		32	Source/PNP (Negative common)		QAN	EC1		32	Source/PNP (Negative common)		DAN
DN2	DeviceNet™	32	Sink/NPN (Positive common)	N440	QA	EC2	EtherCAT®	32	Sink/NPN (Positive common)	Mao	DA
DN3	Devicemet	16	Source/PNP (Negative common)	M12	QBN	EC3	EllierCAT®	10	Source/PNP (Negative common)	M12	DBN
DN4		16	Sink/NPN (Positive common)		QB	EC4		16	Sink/NPN (Positive common)		DB
PR1		32	Source/PNP (Negative common)		NAN	PN1		32	Source/PNP (Negative common)		FAN
PR2	1	32	Sink/NPN (Positive common)	M12	NA	PN2	PROFINET	32	Sink/NPN (Positive common)	M12	FA
PR3	1 [	16	Source/PNP (Negative common)		NBN	PN3		10	Source/PNP (Negative common)		FBN
PR4 PR5	PROFIBUS DP		Sink/NPN (Positive common)		NB	PN4		16	Sink/NPN (Positive common)		FB
PR5	PROFIBUS DP	20	Source/PNP (Negative common)		NCN	EN1		32	Source/PNP (Negative common)		EAN
PR6		32	Sink/NPN (Positive common)	D	NC	EN2	EtherNet/IP™		Sink/NPN (Positive common)	1440	EA
PR7		40	Source/PNP (Negative common)	D-sub*1	NDN	EN3	16	Source/PNP (Negative common)	M12	EBN	
PR8		16	Sink/NPN (Positive common)	1	ND	EN4		16	Sink/NPN (Positive common)		EB
MJ1		32	Source/PNP (Negative common)		VAN						
MJ2	CC-Link	32	Sink/NPN (Positive common)	MAO	VA						
MJ3	CC-LINK	16	Source/PNP (Negative common)	M12	VBN						

<sup>\*1:</sup> Enclosure is IP40 when the communication connector is D-sub.

Sink/NPN (Positive common)


#### ③ Clamp bracket assembly

16


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly



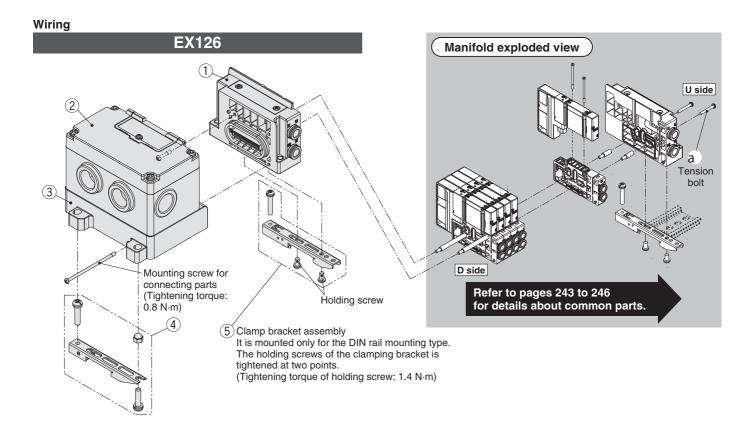

# Manifold Parts No.

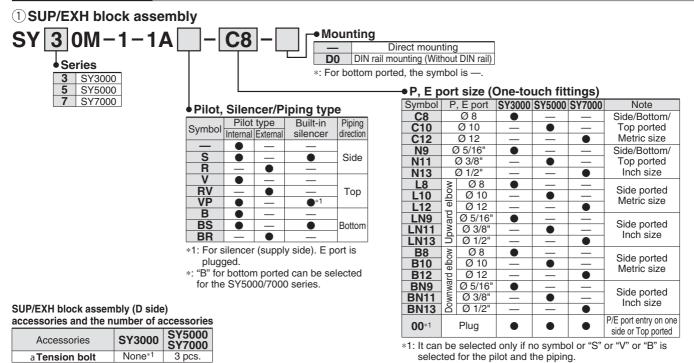

st1: Since the nuts are embedded in the SUP/EXH block.

2 EX126 SI Unit

EX126D-SMJ1

\*: CC-Link (Positive common)

③ Terminal block plate assembly

VVQC1000-74A-2

# **④** Clamp bracket assembly for EX126 SI Unit **SY30M** − **15** − **4 A**

\*: Part number is for one assembly.

#### **5** Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

<sup>\*:</sup> Part number is for one assembly.



Note

Side/Bottom/

Top ported

Metric size

Side/Bottom/

Top ported

Inch size

Side ported

Metric size

Side ported

Inch size

Side ported

Metric size

Side ported

Inch size


# Wiring **EX120** Manifold exploded view U side Tension bolt D side Refer to pages 243 to 246 for details about common parts. (3) Clamp bracket assembly

#### Manifold Parts No.



SY7000

tightened at one point.

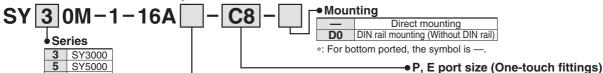

It is mounted only for the DIN rail mounting type. The holding screw of the clamping bracket is

(Tightening torque of holding screw: 1.4 N·m)

♦ Pilot, Silencer/Piping type

Curahal	Pilot type		Built-in	Piping
Symbol	Internal	External	silencer	direction
_			_	
S		_	•	Side
R	_		_	
V			_	
RV	_		_	Top
VP			<b>●</b> *1	
В			_	
BS			•	Bottom
BR	_		_	

\*1: For silencer (supply side). E port is p \*: "B" for bottom ported can be selected SY5000/7000 series.

7	LIZ	-
	LN9	pwarc
ו	LN11	Š
	LN13	5
lugged.	B8	8
for the	B10	elbow
	B12	ard
	DNO	ď

Symbol

**C8** 

N9

N11 N13

08

Ø 10

Ø 12

Ø 5/16

Ø 3/8

Ø 1/2

Ø8

Ø 10 Ø 12

Ø 5/16'

Ø 3/8'

Ø 1/2'

Ø 8

Ø 10

Ø 12 Ø 5/16'

Ø 3/8

00*1		Plug	•	•	•	P/E port entry on one side or Top ported	
*1: It can be selected only if no symbol or "S" or "V" or "B" is							
selected for the pilot and the piping.							

P, E port | SY3000 SY5000 SY7000

•

#### SUP/EXH block assembly (D side) accessories and the number of accessories

	Accessories	SY3000	SY5000 SY7000
Г	a Tension bolt	None*1	3 pcs.

<sup>\*1:</sup> Since the nuts are embedded in the SUP/EXH block.

#### 2 EX120 SI Unit

# EX120-S DN1

#### Communication protocol

DN1	DeviceNet™ (Positive common)							
CS1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common)							
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)							
MJ1	CC-Link (Positive common)							
CM1	CompoNet™ NPN (Positive common)							
CM3	CompoNet™ PNP (Negative common)							
	·							


#### ③ Clamp bracket assembly

Series	Part no.		
SY3000	SY30M-15-1A		
SY5000/7000	SY50M-15-1A		

<sup>\*:</sup> Part number is for one assembly.



# Manifold Exploded View (Common Parts)

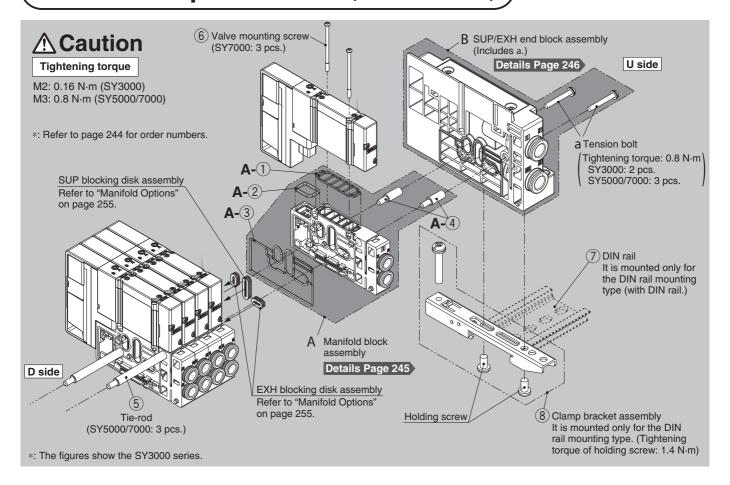

#### Type 10, 11, 12: How to Increase Connector Type Manifold

- $\fbox{1}$  Loosen the U-side tension bolt a, and remove the B SUP/EXH end block assembly.
- 2 Screw in 4 tie-rods for additional stations to the 5 tie-rod of the manifold.


Screw them in until there is no gap between the tie-rods.

3 Connect the (A) manifold block assembly and (B) SUP/EXH end block assembly to be added, and tighten the tension bolt (a).

Tightening torque for tension bolt @ (M3): 0.8 N·m

#### **⚠** Caution

- Be sure to shut off the power and air supplies before disassembly.
  - Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the tension bolt is inadequate.

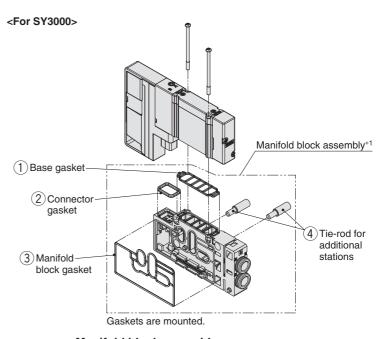

\*1: Manifold block assembly

	······································									
No.	Description	Quantity	Note							
123	Gasket	3	For base, connector and manifold block							
4	Tie-rod for additional stations	SY3000 2 pcs. SY5000 3 pcs. SY7000 3 pcs.								

Refer to page 244 for ordering single unit.



#### For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.		Description		SY3000	SY5000	SY7000	Note	
<b>A-</b> ①	embly	Base gasket (for connector connecting base)		SY30M-9-1A	SY50M-9-1A	SY70M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)	
<b>A-</b> ②	em	Conne	ctor gasket			SX3000-146-2		Supplied individually.
<b>A-</b> ③	ass	Manifo	ld block gasket		SY30M-9-2	SY50M-9-2	SY70M-9-2	Supplied individually.
	block		SY3000/5000/70	00	<b>SY30M-49-2-A</b> (10.5 mm pitch)	<b>SV2000-55-2A-A</b> (16 mm pitch)	<b>SY70M-49-2-A</b> *2 (19 mm pitch)	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
<b>A-</b> ④	Manifold	Tie-rod for additional stations *1	For mixed mountin SY3000 A, B port s			<b>SV2000-55-2A-A</b> (16 mm pitch)		3 pcs. supplied.
	Ma	Tie- add stat	For mixed mounting SY3000 except A, B	of SY3000/5000: port size Ø 8, Ø 5/16"	<b>SY50M-49-2-A</b> (12.5 mm pitch)		_	3 pcs. supplied.
			SY3000/5000/7000		VVQC1000-TR-□ (10.5 mm pitch)         SV2000-55-1-□-A (16 mm pitch)		SY70M-49-1-□-A (19 mm pitch)	□: Manifold stations (2 stations to 24 stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
5	Tie	e-rod			<b>SY50M-49-1-</b> □- <b>A</b> *3*4 (12.5 mm pitch)		_	
		Mixed mounting type manifold		SS5Y5-M**	<b>SV2000-55-1-</b> □ <b>-A</b> *5 (16 mm pitch)		_	☐: Manifold stations (2 stations to 24 stations) 3 pcs. supplied.
				SS5Y7-M**			<b>9-1-</b> □- <b>A</b> * <sup>2</sup> n pitch)	
6	valve		Round head combination screw		<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are as follows. SY3000/5000: for 10 valves (20 pcs. included)
			head cap screw	<b>SY3000-222-1A</b> (M2 x 32)			SY7000: for 10 valves (30 pcs. included)	
7	DIN rail		VZ1000	-11-1-□	VZ1000-11-4-□	Refer to page 249.		
8	Clamp bracket assembly (for connector connecting base)		SY30M-15-1A SY50M-15-1A			Supplied individually.		

<sup>\*1:</sup> The manifold of the SY3000 (SS5Y3-10/11/12) can be assembled by connecting the tie-rods for additional stations for the number of manifold stations. However, the manifold of the SY5000 or SY7000 (SS5Y5/7-10/11/12 including mixed mounting) cannot be assembled by connecting the tie-rods for additional stations for the number of manifold stations.

<sup>\*2:</sup> When mounting with the SY5000.


<sup>\*3:</sup> When mounting only the SY3000 (12.5 mm pitch except A, B port size Ø 8, Ø 5/16").

<sup>\*4:</sup> The port sizes except A, B port size Ø 8, Ø 5/16" are the following: Ø 2, Ø 3.2, Ø 4, Ø 6, Ø 1/8", Ø 5/32", Ø 1/4".

<sup>\*5:</sup> When mounting only the SY3000 (16 mm pitch A, B port size Ø 8, Ø 5/16").

#### Manifold Parts No.




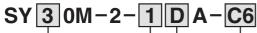



# Piping direction 1 Side/Top ported 2 Bottom ported

\*: "2" for bottom ported can be selected for the

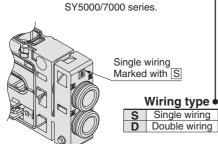

A, B port size (One-touch fittings)

Symbol	A, B port	SY3000	SY5000	SY7000	Note
C2	Ø2		_	_	
C3	Ø 3.2		_	_	Side/
C4	Ø 4			_	Bottom
C6	Ø6				ported
C8	Ø 8	*1	•	•	Metric
C10	Ø 10	_	_		size
C12	Ø 12	_	_		
N1	Ø 1/8"	•	_	_	Side/
N3	Ø 5/32"			_	Bottom
N7	Ø 1/4"				ported
N9	Ø 5/16"	*1			Inch
N11	Ø 3/8"	_	_		size
*1: Re	efer to mixed	d mounti	na type i	for Ø 8.	Ø 5/16".

	Symbol	P	A, B port	SY3000	SY5000	SY7000	Note
	L4		Ø 4			_	Cida
	L6	_	Ø 6	•	•	•	Side ported
n	L8	Š	Ø 8	*1			Metric
П	L10	elp	Ø 10	_	_	•	size
	L12	ō	Ø 12	_	_		3126
	LN3	pward	Ø 5/32"	•	_	_	Side
	LN7	ď	Ø 1/4"	•	•	_	ported
٦	LN9	$\square$	Ø 5/16"	*1		_	Inch
١	LN11		Ø 3/8"	_	_	•	size
П	B4		Ø 4	•	•	_	0:-1-
	B6	pow	Ø 6	•	•	•	Side
	B8		Ø 8	*1			ported Metric
	B10	е	Ø 10	_	_		size
•	B12	ard	Ø 12	_	_	•	3126
	BN <sub>3</sub>	ownw	Ø 5/32"		_	_	Side
	BN7	Ĭ	Ø 1/4"			_	ported
	BN9	ŏ	Ø 5/16"	*1			Inch
	<b>BN11</b>		Ø 3/8"	_	_		size
	00		Plug				Top ported

#### A Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000

SY50M-2-3 DA-C6


# Piping direction

3 Side/Top ported Bottom ported

> Wiring type Single wiring Double wiring

#### A. B port size (One-touch fittings)

						,
Symbol	A, B port	Note	Symbol	A	A, B port	Note
C2	Ø2	Side/Bottom	L4	elbow	Ø 4	Side ported
C3	Ø 3.2	ported	L6		Ø6	Metric size
C4	Ø 4	Metric size	LN <sub>3</sub>	pward	Ø 5/32"	Side ported
C6	Ø6	WELLIC SIZE	LN7		Ø 1/4"	Inch size
N1	Ø 1/8"	Side/Bottom	<b>B</b> 4	bow	Ø 4	Side ported
N3	Ø 5/32"	ported	B6	<u>a</u>	Ø6	Metric size
N7	Ø 1/4"	Inch size	BN <sub>3</sub>	nward	Ø 5/32"	Side ported
			BN7	õ	Ø 1/4"	Inch size
			00		Plug	Top ported

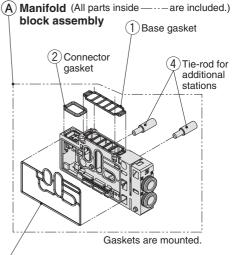

## A Mixed mounting of the SY3000/5000

Manifold block assembly for mounting the SY3000 for Ø 8, Ø 5/16" 3 Manifold block gasket (A manifold block assembly for mounting the SY3000 valves on the

SY5000 manifolds at A, B port size: Ø 8, Ø 5/16")

# SY50M-2-5 D

#### Piping direction Side ported Bottom ported

Wiring type Single wiring D Double wiring

#### A, B port size (One-touch fittings)

Symbol	Α,	B port	Note		
C8		Ø 8	Side/Bottom ported Metric size		
N9	Ø	5/16"	Side/Bottom ported Inch size		
L8	Upward	Ø 8	Side ported Metric size		
LN9	elbow	Ø 5/16"	Side ported Inch size		
B8	Downward	Ø 8	Side ported Metric size		
BN9	elbow	Ø 5/16"	Side ported Inch size		

#### Manifold block assembly accessories and the number of accessories

Accessories	Accessories SY3000 SY500				
(1) Base gasket	1 pc.				
2 Connector gasket	1 pc.				
3 Manifold block gasket	1 pc.				
4 Tie-rod assembly for additional stations	ations 2 pcs. 3 pcs.				

<sup>\*1:</sup> Including mixed mounting type

#### A Mixed mounting of the SY5000/7000 Manifold block assembly for mounting the SY5000

SY70M-2-3 D A-C10

Piping direction Side/Bottom ported Bottom ported


> Wiring type Single wiring Double wiring

#### ♣ A, B port size (One-touch fittings)

Symbol	A, B port	Note	Symbol	F	A, B port	Note	Symbol	A	A, B port	Note			
C6	Ø6	Side/Bottom	L6	>	Ø 6		<b>B6</b>	×	Ø 6				
C8	Ø8			ported	L8	8	Ø8	Side ported	<b>B8</b>	alpc	Ø 8	Side ported	
C10	Ø 10	Metric size	L10		Ø 10	Metric size	<b>B10</b>	5	Ø 10	Metric size			
C12	Ø 12	IVICUIC SIZE	L12	arc	Ø 12		<b>B12</b>	Wa	wa	wa	Wa	Ø 12	
N7	Ø 1/4"	Side/Bottom	LN11	ğ	Ø 3/8"	Side ported	BN11	Ň	Ø 3/8"	Side ported			
N9	Ø 5/16"	ported	LIVII		10 3/0	Inch size	DIVII	മ്	W 3/0	Inch size			
N11	Ø 3/8"	Inch size					00		Plug	Top ported			

#### Manifold Parts No.



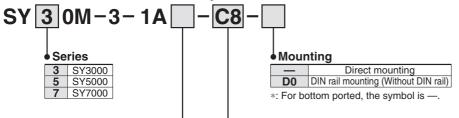


◆ Pilot,	Silenc	er/Pipi	ng type	
Symbol	Pilot	type External	Built-in	Piping
Symbol	Internal	External	silencer	direction
	• -		_	
S		_	•	Side
R	R —		_	
V		_	_	
RV	_	•	_	Top
VP •		_	●*1	
В		_	_	
BS		_	•	Bottom
DD				1

- \*1: For silencer (supply side). E port is plugged.
- \*: "B" for bottom ported can be selected for the SY5000/7000 series.

#### P, E port size (One-touch fittings)

Symbol	Р	, E port	SY3000	SY5000	SY7000	Note
C8		Ø8		_	_	Side/Bottom/Top ported
C10		Ø 10	_		_	Metric size
C12		Ø 12	_	_		Wettic Size
N9		ð 5/16"			_	Side/Bottom/Top ported
N11	- (	Ø 3/8"	_		_	Inch size
N13		Ø 1/2"	_			ITICIT SIZE
L8	elbow	Ø 8			_	Side ported
L10	g	Ø 10	_		_	Metric size
L12		Ø 12	_	_		Wettic Size
LN9	Upward	Ø 5/16"		_	_	Side ported
LN11	ΛC	Ø 3/8"	_		_	Inch size
LN13		Ø 1/2"	_	_		ITICIT SIZE
B8	elbow	Ø 8		_	_	Side ported
B10	elp	Ø 10	_		_	Metric size
B12		Ø 12				WIGHTO SIZE
BN9	Downward	Ø 5/16"		_	_	Side ported
BN11	W	Ø 3/8"			_	Inch size
BN13	ă	Ø 1/2"	_	_		IIICII SIZE
00*1	Plug		•	•	•	P/E port entry on one side or Top ported

\*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

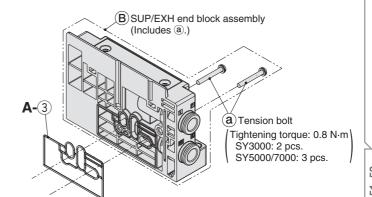


SUP/EXH end block assembly accessories and the number of accessories

Accessories	SY3000	SY5000/7000		
Tension bolt	2 pcs.	3 pcs.		
A-3 Manifold block gasket	1 pc.			

Gasket is mounted.

#### Manifold Parts No.

■ Cover assembly/Silencer cover assembly/Port block assembly for SUP/EXH (end) block assembly

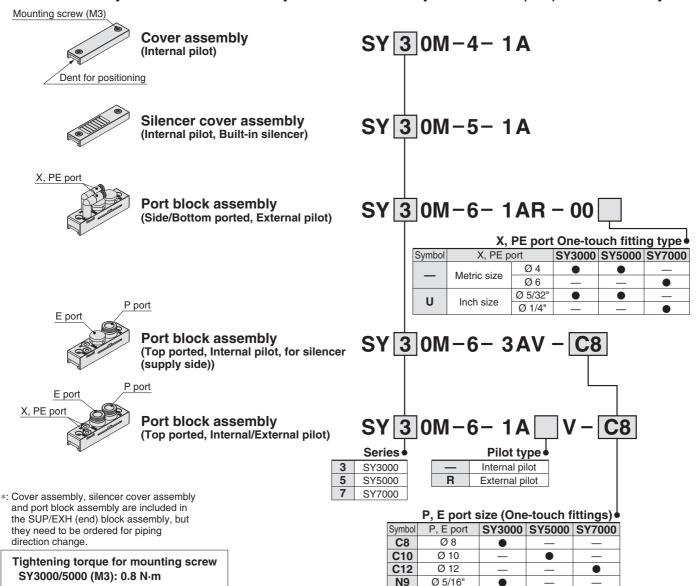

#### **⚠** Caution

SY7000 (M4): 1.4 N·m

- Be sure to shut off the power and air supplies before disassembly.
  - Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.

Ø 3/8"

Ø 1/2

Plug

N11

**N13** 

00\*1

<sup>\*1:</sup> Cannot be selected for the SY□0M-6-3AV-□ and SY□0M-6-1ARV-□.

# Series SY3000/5000/7000 One-touch Fittings and Plug Assembly/Part No.

Refer to "Changing One-touch Fittings" on page 272 for replacement method.

#### ■ One-touch fittings

		Port size	е	SY3000	SY5000	SY7000
		Ø2		VVQ1000-50A-C2	_	<u> </u>
		Ø 3.2		VVQ1000-50A-C3	_	_
		Ø 4		VVQ1000-50A-C4	VVQ1000-51A-C4	_
		Ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
		Ø8	3	_	VVQ1000-51A-C8	VVQ2000-51A-C8
		Ø 10		_	_	VVQ2000-51A-C10
		Ø 12		_	_	KQ2H12-17-X224
	Metric size	Ø 4		SZ3000-73-1A-L4	SZ3000-74-1A-L4	_
	<u>i</u>	Ø6		SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6
	letr	Ø8	Elbow type	_	SZ3000-74-1A-L8	SZ3000-83-1A-L8
	Σ –	Ø 10	j ''	_	_	SZ3000-83-1A-L10
		Ø 12		_	_	KQ2L12-17N-X224
	-	Ø 4		SZ3000-73-2A-L4	SZ3000-74-2A-L4	_
-		Ø 6		SZ3000-73-2A-L6	SZ3000-74-2A-L6	SZ3000-83-2A-L6
port*1	-	Ø 8	Long elbow type	——————————————————————————————————————	SZ3000-74-2A-L8	SZ3000-83-2A-L8
A, B p	-	Ø 10			—	SZ3000-83-2A-L10
	-	Ø 12	-		_	KQ2W12-17N-X224
		Ø 1/8"		VVQ1000-50A-N1	_	— —
	Inch size	Ø 5/32"	-	VVQ1000-50A-N3	VVQ1000-51A-N3	
		Ø 1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
		Ø 5/16"			VVQ1000-51A-N9	VVQ2000-51A-N9
		Ø 3/8"	-		- V Q 1000-31A-N9	VVQ2000-51A-N11
		Ø 5/32"		KJL03-95-X224	_	V V Q 2000-31A-1111
		Ø 1/4"		KJL07-95-X224	KQ2L07-14-X224	<del></del>
		Ø 5/16"	Elbow type	KJL07-95-X224	KQ2L07-14-X224 KQ2L09-14-X224	<del>_</del>
		Ø 3/8"	-		KQ2L09-14-X224	 KQ2L11-14-X224
	-	Ø 5/32"		 KJL03-95-X225	_	NQ2L11-14-X224
	-		-			
	-	Ø 1/4"	Long elbow type	KJL07-95-X225	KQ2L07-14-X225	<del>_</del>
	-	Ø 5/16"	-		KQ2L09-14-X225	
		Ø 3/8"			_	KQ2L11-14-X225
	-	Ø 8		VVQ1000-51A-C8		
	-	Ø 10	Straight type		VVQ2000-51A-C10	
	a la	Ø 12			_	VVQ4000-50B-C12
	Si	Ø 8	├ <b>_</b>	SZ3000-74-1A-L8		_
	Metric size	Ø 10	Elbow type	<del>_</del>	SZ3000-83-1A-L10	
	Me	Ø 12				KQ2L12-19N-X224
	-	Ø 8		SZ3000-74-2A-L8		_
port	-	Ø 10	Long elbow type	<u> </u>	SZ3000-83-2A-L10	<u> </u>
Ερ		Ø 12		<u> </u>	_	KQ2W12-19N-X224
Р, Е	-	Ø 5/16"		VVQ1000-51A-N9		_
	-	Ø 3/8"	Straight type	_	VVQ2000-51A-N11	
	Ø.	Ø 1/2"			_	VVQ4000-50B-N13
	Inch size	Ø 5/16"	<u> </u>	KQ2L09-14-X224	_	
	ر ا	Ø 3/8"	Elbow type		KQ2L11-14-X224	
	Ĕ	Ø 1/2"			_	KQ2L13-19N-X224
		Ø 5/16"		KQ2L09-14-X225	_	
		Ø 3/8"	Long elbow type		KQ2L11-14-X225	
		Ø 1/2"		<u> </u>	_	KQ2W13-19N-X224

<sup>\*1</sup>: A and B ports (Ø 8 and Ø 5/16") of the SY3000 and 5000 mixed mounting type are the same as those of the SY5000.

#### ■ Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A

<sup>\*:</sup> Purchasing order is available in units of 10 pieces.




<sup>\*:</sup> Purchasing order is available in units of 10 pieces. Additionally, when performing the piping in the same orientation using the elbow type, please order "elbow type" or "long elbow type" appropriately.

# Series SY3000/5000/7000 Manifold Options

# ■ DIN rail dimensions/weight for the SY3000 Plug-in metal base and the SY3000/5000 Plug-in connector connecting base

#### VZ1000-11-1-□

\*: After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

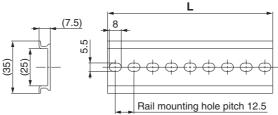


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
No. L dimension	38 573	39 585.5	40 598	41 610.5	42 623	43 635.5	44 648	45 660.5	46 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	56 798
	573													-					
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 103.1	585.5 105.4	598 107.6	610.5	623 112.1	635.5	648 116.6	660.5	673 121.1	685.5 123.4	698 125.6	710.5	723 130.1	735.5 132.4	748 134.6	760.5	773	785.5	798

# ■ DIN rail dimensions/weight for the SY5000/7000 Plug-in metal base and the SY7000 Plug-in connector connecting base

#### **VZ1000-11-4-**□

\*: After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

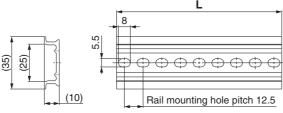

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
No. L dimension	38 573	39 585.5	40 598	41 610.5	42 623	43 635.5	44 648	45 660.5	46 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	56 798
	573													-				785.5	
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 145 57	585.5 148.1	598 151.3	610.5 154.5	623 157.6	635.5	648 163.9	660.5	673 170.3	685.5 173.4	698 176.6	710.5 179.8	723 182.9	735.5 186.1	748 189.2	760.5	773	785.5	798

# Manifold Options Series SY3000/5000/7000

#### **.**↑.Caution


Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)


#### **Manifold Options**


\*: Refer to pages 260, 262, 264 for dimensions.

How to Order Blanking Plate Assembly

#### ■ Blanking plate assembly [With two mounting screws (3 pcs. for the SY7000)] Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting Mounting screws from sliding.

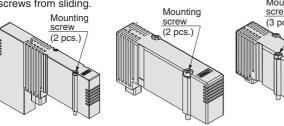

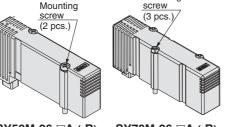

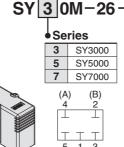

Option for mounting With mounting screw (Round head combination screw) With mounting screw В (Hexagon socket head cap screw)

Base type

1 For plug-in connector connecting base For plug-in metal base

SY30M-26-□A (-B)

SY50M-26-□A (-B)

SY70M-26-□A (-B)


(EA) (P) (EB) Circuit diagram

#### ■ Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

\*: When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

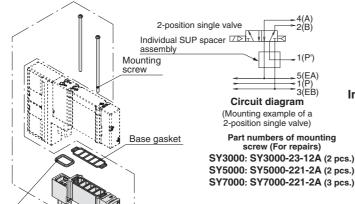

#### ■ Individual EXH spacer assembly


Connector gasket

Connector gasket


[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

\*: When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

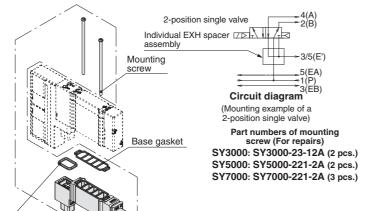

#### How to Order Individual SUP/EXH Spacer Assembly

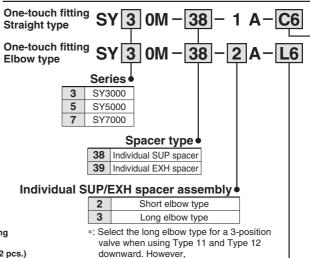

downward. However,

Type 11 of the SY3000 series for the mixed mounting of connector connecting bases cannot be used downward.

#### Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
L4	Ø 4			_
L6	Ø 6	•	•	
L8	Ø 8	_	•	•
L10	Ø 10	_	_	
L12	Ø 12	_	_	•
	L4 L6 L8 L10	L4 Ø 4 L6 Ø 6 L8 Ø 8 L10 Ø 10	L4 Ø 4	L4       Ø4       ●         L6       Ø6       ●         L8       Ø8       —         L10       Ø10       —

#### Port size (Inch/One-touch fittings)

		1				
Symbol	P, E port	SY3000	SY5000	SY7000		
LN3	Ø 5/32"		_			
LN7	Ø 1/4"	•	•	_		
LN9	Ø 5/16"	_	•			
LN11	Ø 3/8"	_	_			

#### Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
C2	Ø2	•	_	_
C3	Ø3	•	_	_
C4	Ø 4	•	•	_
C6	Ø6	•	•	•
C8	Ø 8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•

#### Port size (Inch/One-touch fittings)

	1 OIL OIL	(111011/1011	mungo	
Symbol	P, E port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	_	_
N3	Ø 5/32"	•	•	_
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•

#### **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)

#### **Manifold Options**


\*: Refer to pages 260 to 265 for dimensions.


#### SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

\*: Cannot be selected when the elbows are facing upward in A and B ports in Type 10 manifolds, since they will interfere with the piping for the spacer assembly.

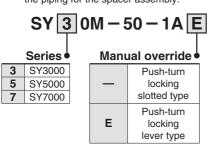

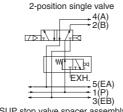

SUP stop valve spacer assembly with residual pressure release valve Circuit diagram

(Mounting example of a 2-position single valve)

# [How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly,

and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque.

Tighten the SUP stop valve mounting screw to the specified tightening torque Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve.

- \*: Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- \*: When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.
- \*: This product is only for internal pilot specifications, as the external pilot air cannot be shut off.

\*: For lever type
When locking the lever type
manual override, push the lever
down in the PUSH position with
your fingers until it stops, then
turn the lever 90° clockwise.
(PUSH → LOCK)
Turning the lever without
pushing it down until it stops can

pushing it down until it stops can cause damage to the manual override and other problems such as air leakages.

To unlock the manual override, turn the lever counterclockwise. (LOCK  $\rightarrow$  PUSH)

Valve mounting screw

Part numbers of mounting screw (For repairs) SY3000: SY30M-56-1 A (2 pcs.) SY5000: SY50M-56-1 A (2 pcs.) SY7000: SY70M-56-1 A (3 pcs.)

Tightening torque:
Series SY3000: 0.16 N·m
Series SY5000/7000: 0.8 N·m
For Hexagon socket head cap screws
Nominal wrench size:
Series SY3000: 1.5
Series SY5000/7000: 2.5


Valve

SUP stop valve spacer
assembly with residual pressure

Plate type nu

SUP stop valve mounting screw
Tightening torque:
Series SY3000: 0.16 N·m

Series SY5000/7000: 0.8 N·m

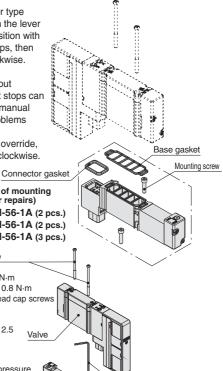

Hexagon wrench

Nominal wrench size: Series SY3000: 1.3


Series SY5000/7000: 2

# ■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported) [With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust centre valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve. Operating pressure range: 0.1 to 1.0 MPa

\*: When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

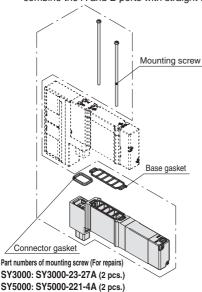

SY7000: SY7000-221-4A (3 pcs.)

251

es of elbows facility downward						
Series	Part no.					
SY3000	SY30M-60-1A					
SY5000	SY50M-60-1A					
SY7000	SY70M-60-1A					


	Intermediate stop	Drop prevention
Applicable valve	SY <sup>3</sup> <sub>5</sub> 40 <sup>0</sup> <sub>1</sub>	SY <sup>31</sup> <sub>52</sub> 01

#### **⚠** Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Combining with 3-position closed centre or pressure centre valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.


#### <Example>

Double check spacer assembly with residual pressure release valve

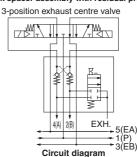

(Intermediate stop: When 3-position exhaust centre valve is mounted)

Double check spacer assembly with residual pressure release valve

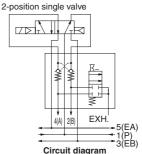

(Drop prevention: When 2-position single valve is mounted)

will

**SMC** 

Manifold Options Series SY3000/5000/7000

# **.** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

# **Manifold Options**


\*: Refer to pages 261, 263, 265 for dimensions.


### ■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

### **How to Order**

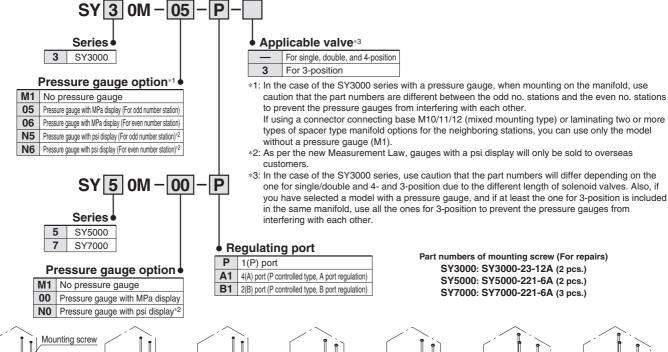

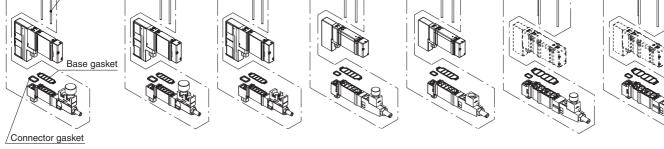

SY30M-05/N5-(With pressure gauge/

SY30M-06/N6-

Without pressure gauge

SY30M-M1-

SY50M-00/N0-□

SY50M-M1-

SY70M-00/N0-□

SY70M-M1-

(With pressure gauge/ (Without pressure gauge) (With pressure gauge) (Without pressure gauge) (With pressure gauge) (Without pressure gauge) For odd number station) For even number station)


87

# **Specifications**

Interface regula	ator model	SY30M-□-□-□	SY50M-□-□	SY70M-□-□
Applicable valv	re model*1	SY3□ <sub>3</sub> <sup>0</sup> □(R)	SY5□30□(R)	SY7□ <sub>3</sub> □(R)
Regulating port		1(P), 4(A), 2(B)		
Set pressure range		0.1 to 0.7 MPa		
Maximum operating pressure		1.0 MPa		
Fluid		Air		
Ambient and fluid temperature		-10 to 50 °C (No freezing)		1)
Weight [g]*2	With pressure gauge	33(35)* <sup>3</sup>	75	93
weight [g] 2	Without proceure gours	27/20\*3	60	07

27(29)\*3

- \*1: 3-position closed centre and pressure centre, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.
- \*2: Gasket and mounting screws are included in the weight.
- \*3: ( ): Denotes the values of SY30M-\(\subseteq\)-\(\subseteq\)-3.
- \*: Always apply pressure from 1(P) port in the base for interface regulator.

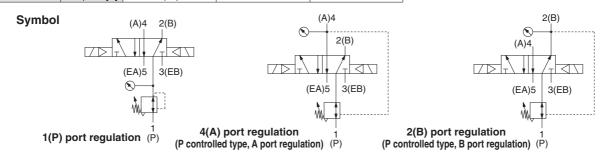

69



# **⚠** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

# **Spacer Combinations and Screw List** ①

Combination		① SY30	000 (M2)	② SY50	000 (M3)	③ SY70	00 (M3)
- Combination		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
Round head combination screw> ①: SY3000-23-24A A ②: SY5000-221-1A ③: SY7000-221-1A	\ Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-221-1A 1: SY30M-56-2A	SUP stop valve spacer assembly with residual pressure release valve	SY30M	I-56-2A	SY50M	I-56-2A	SY70M	I-56-2A
②: SY50M-56-2A ③: SY70M-56-2A	Individual SUP (EXH) spacer assembly	(2 p	ocs.)	(2 pcs.)		(3 pcs.)	
Round head combination screw> ①: SY3000-23-33A	\ Valve						
②: SY5000-221-5A ③: SY7000-221-5A	Double check spacer assembly with residual pressure release valve	<b>SY3000- 23-33A</b> (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	<b>SY7000- 221-5A</b> (3 pcs.)	_
C-	Individual SUP (EXH) spacer assembly						
Round head combination screw>  (Round head combination screw>	\ Valve						
②: SY5000-221-3A ③: SY7000-221-3A	Individual SUP (EXH) spacer assembly	<b>SY3000- 23-32A</b> (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	_	<b>SY7000- 221-3A</b> (3 pcs.)	_
C-	Individual EXH (SUP) spacer assembly						
Round head combination screw> ①: SY3000-23-24A	Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
2: SY5000-221-1A 3: SY7000-221-1A	SUP stop valve spacer assembly with residual pressure release valve						
③: SY7000-222-1A ①: SY30M-56-4A ②: SY50M-56-4A	Individual SUP (EXH) spacer assembly	<b>SY30M-56-4A</b> (2 pcs.)		<b>SY50M-56-4A</b> (2 pcs.)			<b>I-56-4A</b> ocs.)
③: SY70M-56-4A	Individual EXH (SUP) spacer assembly						

<sup>\*:</sup> Mounting onto a manifold follows the order explained above.

<sup>\*:</sup> The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

# Manifold Options Series SY3000/5000/7000

**⚠** Caution

Tightening torque for mounting screw
M2: 0.16 N·m (SY3000)
M3: 0.8 N·m (SY5000/7000)

# **Spacer Combinations and Screw List 2**

Ountination		① SY30	000 (M2)	② SY50	000 (M3)	3 SY70	00 (M3)
Combination		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
Round head combination screws  1: SY3000-23-24A  2: SY5000-221-1A  3: SY7000-221-1A	A Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
Hexagon socket head cap screws  1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve		I-56-3A	SY50N	I-56-3A	SY70M	-56-3A
①: SY30M-56-3A ②: SY50M-56-3A ③: SY70M-56-3A	Double check spacer assembly with residual pressure release valve		ocs.)	(2 p	ocs.)	(3 p	cs.)
Round head combination screw>	A Valve	<b>SY3000- 23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000- 222-1 A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000- 222-1 A</b> [for 10 valves (20 pcs.)]	<b>SY7000- 221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000- 222-1A</b> [for 10 valves (30 pcs.)]
3: SY7000-221-1A	SUP stop valve spacer assembly with residual pressure release valve						
①: SY30M-56-5A ②: SY50M-56-5A ③: SY70M-56-5A	Double check spacer assembly with residual pressure release valve		<b>I-56-5A</b> ocs.)		<b>I-56-5A</b> ocs.)	<b>SY70M</b> (3 p	
	Individual EXH (SUP) spacer assembly						
Round head combination screw> ①: SY3000-23-32A	A Valve						
②: SY5000-221-7A ③: SY7000-221-7A	Interface regulator	<b>SY3000- 23-32A</b> (2 pcs.)	_	<b>SY5000- 221-7A</b> (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
C P	Individual SUP (EXH) spacer assembly						

- \*: Mounting onto a manifold follows the order explained above.
- \*: The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.
- \*: When laminating an interface regulator with other options, only the combinations in the table above are possible.



# **<b>** Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

# **Manifold Options**

\*: Refer to pages 261, 263, 265 for dimensions.

### ■ Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a separate air supply is required, or if addition air is required for additional air flow.

Individual SUP block assembly occupies 1 station.

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example).

- \*: Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)
- \*: Electrical wiring is connected to a number of stations in the individual SUP block manifold.
- \*: When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \*: A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.


# ■ Individual EXH block assembly

On the circuit of the plug-in connector connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations.

Individual EXH block assembly occupies 1 station.

Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).

- \*: Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)
- \*: Electrical wiring is connected to a number of stations in the individual EXH block manifold.
- \*: When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \*: A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

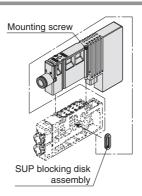

X

(A)4 2(B)

(A)4 2(B)

(A)4 2(B)

(A)4 2(B)

<Example>

(A)4 2(B)

D side

3(EB)

# How to Order Individual SUP/EXH Block Assembly One-touch fitting Straight type

One-touch fitting **78** Elbow type Series •

SY3000 3 5 SY5000 7 SY7000

U side

5(EA)

78 Individual SUP block 79 Individual EXH block

# Individual SUP/EXH block assembly Short elbow type (Type 12) Long elbow type (Type 11)

\*: Long elbow type is for the SY5000/7000 only.

# 3(EB) Port size (Metric/One-touch fittings) Syn **L** L

nbol	P, E port	SY3000	SY5000	SY7000
.4	Ø 4	•	•	_
.6	Ø 6	•	•	•
.8	Ø 8	_	•	•
				_

L10	Ø 10	_		•	
L12	Ø 12	_	_	•	
Port size (Inch/One-touch fittings					
	Port size	`			
Symbol		`	e-touch		

### LN7 Ø 1/4' LN9 Ø 5/16 LN11 Ø 3/8"

# Mounting screw EXH blocking disk assembly

D side U side
5(EA) - 5(E 1(P) - 3(EB) (A)4 2(B) (A)4 2(B) (A)4 2(B) (A)4 2(B)

Port size	(Metric/One-touch	fittings)
-----------	-------------------	-----------

				<u> </u>
Symbol	P, E port	SY3000	SY5000	SY7000
C2	Ø2		_	_
C3	Ø3	•	_	_
C4	Ø 4	•	•	_
C6	Ø6	•	•	•
C8	Ø8	_	•	•
C10	Ø 10	_	_	•
C12	Ø 12	_	_	•

### Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	_	_
N3	Ø 5/32"	•	•	_
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•



# **Manifold Options**

# ■ SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12) [SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

### [EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)



3/5 3/5

B 2

Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A
SY7000	SY70M-40-1A	SY70M-40-1A

## ■ Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

### SUP/EXH blocking disk label




Series	Part no.
Y3000	
<b>75000</b>	S.13000-155-1A


### **SUP** blocking disk label



disk label					
$\bigcap$	1				
142	/sHa	75			

**EXH** blocking

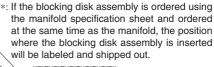

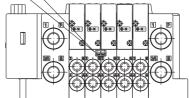

# Back pressure check valve assembly (Retrofit or pre-installed type)

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.

- \*: When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)
- \*: When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.

### <Precautions>

S S SY7000


- 1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- 2. When the back pressure check valve assembly is mounted, please contact SMC for valve flow rate characteristics.

# **Ordering Example**

SS5Y3-10F1-05B-C6.....1 set (Type 10 5-station manifold base part no.) \*SY3201-5U1------5 sets (2-position double part no.)

\*SY30M-24-1A-----5 sets (Back pressure check valve assembly part no.)

The asterisk denotes the symbol for assembly.

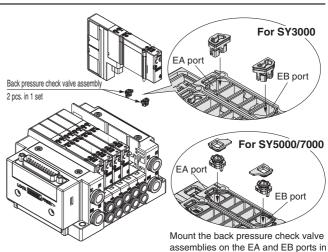

the order shown in the figure above.					
	Series	Part no.			
SY3000		SY30M-24-1A			
SY5000		SY50M-24-1A			
	SV7000	SY70M-24-1A			


# **Manifold Options**


### ■ Dual flow fitting (for connector connecting base, Type 10, side ported)


This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations.

\*: When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specification sheet.

### **How to Order Dual Flow Fitting**

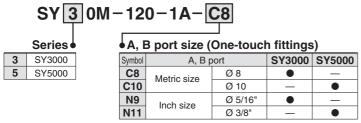

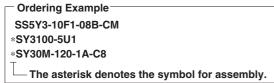

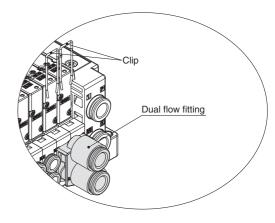



\*: Specifically for side porting for a connector connecting base. Cannot be attached to bottom or top ported, or mixed mounting types that are metal or connector connecting bases.

- \*: When adding or changing clips, push them into the very end of the manifold for each station. Also, make sure to use the clip that was packed together, as the clip and the fitting for one station differ among products that can be used with the SY5000.
- \*: Not available for the SY7000 series.



SY3000

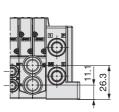

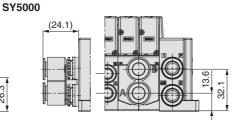


# Silencer

# (One-touch fitting connection type)

This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.


\*: Shipped together with the product.

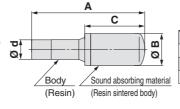

Series	Model	Effective area	Α	В	С
For SY3000 (Ø 8)	AN15-C08	20 mm <sup>2</sup>	45	13	20
For SY5000 (Ø 10)	AN20-C10	30 mm <sup>2</sup>	57.5	16.5	30.5
For SY7000 (Ø 12)	AN30-C12	41 mm <sup>2</sup>	71.5	20	43.5

# ■ Plug (White)

These are inserted in unused cylinder ports and P, E ports.

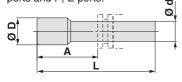

\*: Shipped together with the product.

# Dimensions

Ø d (Metric size)	Model	Α	L	ØD
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size <b>Ø d</b> (Inch size)	Model	Α	L	Ø D
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11		43	11.5
1/2"	KQ2P-13	24	46	15

# Manifold Options *Series SY3000/5000/7000*

# **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

### ■ Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported)

SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Figure 2.


\*: When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.


SS5Y3-10           -	
SS5Y5-10	
SS5Y7-(M)11	

				Moun	ting and	Option •
	Mounting option					
Symbol	Prin	ting		DIN rail		Direct
	Yes	No	With	Without	Specified length	mounting
AA	•	_	_		_	•
Α	•	_	•	_	_	_
Α0	•	_	_	•	_	_
А3	•	_	_	_	For 3 stations	_
÷	:		:	:	:	_
A24	•	_	_	_	For 24 stations	_
BA	_	•	_	_	_	•
В	_	•	•	_	_	_
В0	_	•	_	•	_	_
В3	_	•	_	_	For 3 stations	_
:	:	:	:	:	:	_
B24	_	•	_	_	For 24 stations	_


┌ Ordering Example	
SS5Y3-10F1-05UR-C6AA1 set	
*SY3200R-5U15 sets	
The asterisk denotes the symbol for assembly	


- \*: Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.
- \*: No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.

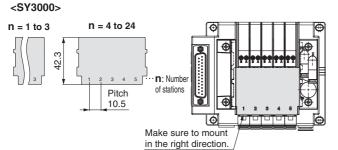

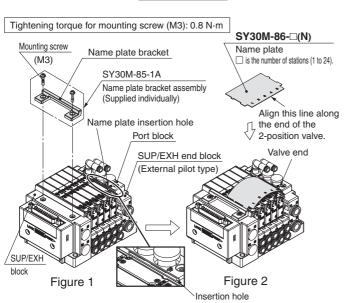

# <SY5000/7000>

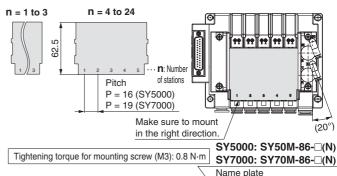

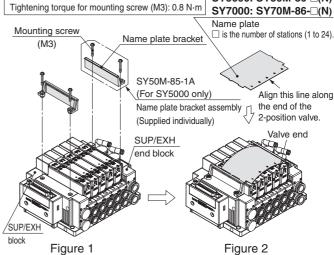

# **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

# ■ If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

## Name plate part number

Mo	odel	SS5Y3-10	SS5Y5-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-□N	SY50M-86-□N	SY70M-86-□N	☐:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

### Name plate bracket assembly part number and number of items ordered

Model		SS5Y3-10	SS5Y5-10/11
Name plate assemb	Name plate assembly part number		SY50M-85-1A
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.	
block assembly	Internal pilot double sided piping	2 pcs.	0 000
Pilot type and	External pilot U/D piping	1 pc.*1	2 pcs.
P, E port entry	External pilot double sided piping	Not required*1	

<sup>\*1:</sup> If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

# **⚠** Caution

- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.




<sup>\*:</sup> Name plate bracket assembly is not required for the SY7000.


# **Dimensions: Manifold Options/Series SY3000**

# ■ Blanking plate assembly





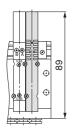


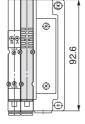


<Type 50, 51, 52>

<Type 10, 12>


# ■ Individual SUP/EXH spacer assembly (Side ported)

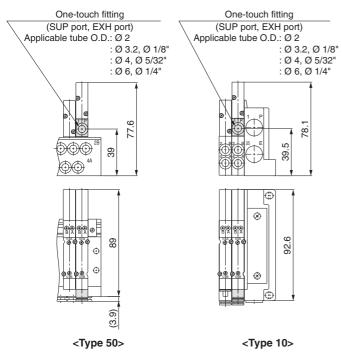

# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

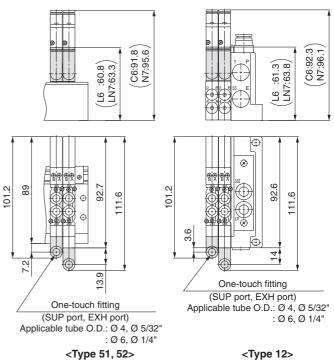


■SUP stop valve spacer assembly with residual pressure release valve

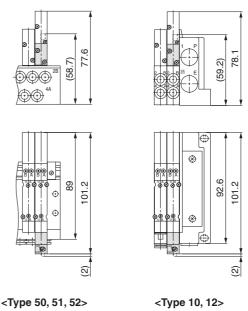



\*: The dimensions within ( ) applies to the SY30-50-1AE.


# **Dimensions: Manifold Options/Series SY3000**

# ■ Double check spacer assembly with residual pressure release valve

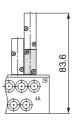

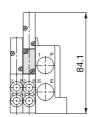

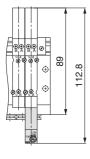


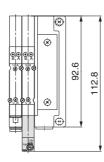

<Type 50, 51>


<Type 10>

# **■** Interface regulator

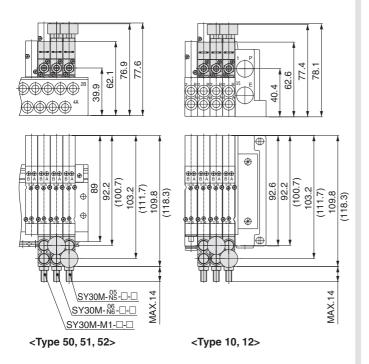


\*The dimensions within ( ) applies to the SY30M- $\square$ - $\square$ -3.


# ■ Individual SUP/EXH block assembly (Top ported)

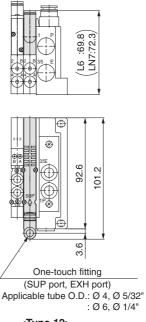

<Type 12>

# ■ Individual SUP/EXH block assembly (Side ported)

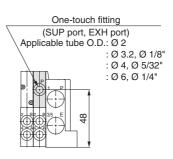

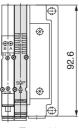

<Type 10>

90.7

127.9


3


(78.2)


# **Dimensions: Manifold Options/Series SY5000**

# ■ Blanking plate assembly



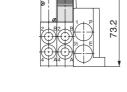

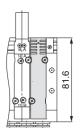


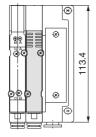


<Type 50, 51, 52>


<Type 10, 11, 12>

# ■ Individual SUP/EXH spacer assembly (Side ported)

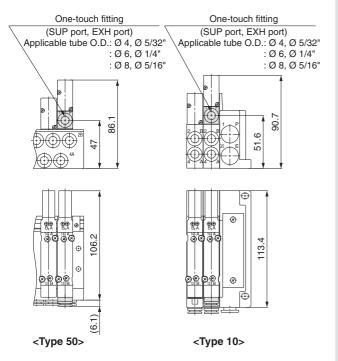


# ■Individual SUP/EXH spacer assembly (Top/Bottom ported)

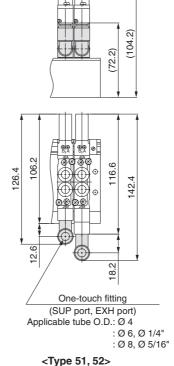

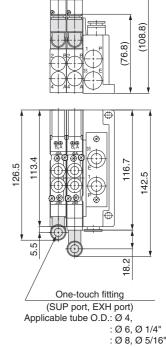

<Type 11, 12>

# ■SUP stop valve spacer assembly with residual pressure release valve

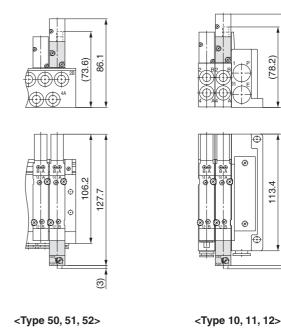



<sup>\*:</sup> The dimensions within ( ) applies to the SY50-50-1AE.





# **Dimensions: Manifold Options/Series SY5000**

# ■ Double check spacer assembly with residual pressure release valve

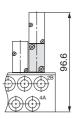

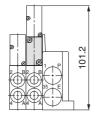

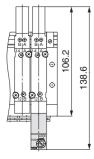


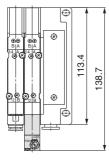


<Type 50, 51>

<Type 10, 11>

# ■ Individual SUP/EXH block assembly (Top ported)

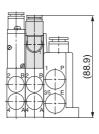

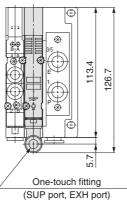


(SUP port, EXH port) Applicable tube O.D.: Ø 4 : Ø 6, Ø 1/4"

<Type 12>

# ■ Individual SUP/EXH block assembly (Side ported)


One-touch fitting (SUP port, EXH port) Applicable tube O.D.: Ø 4, Ø 5/32" : Ø 6, Ø 1/4" : Ø 8, Ø 5/16"


63.7

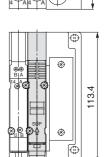



<Type 10>

# ■ Interface regulator

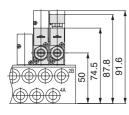

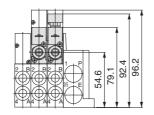

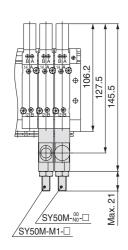

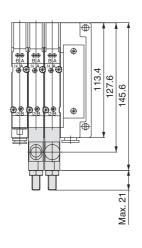



<Type 50, 51, 52>

<Type 10, 11, 12>

# ■Individual SUP/EXH block assembly (Bottom ported)

: Ø 8, Ø 5/16"

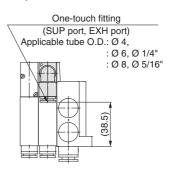


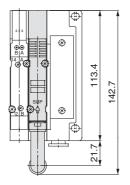


<Type 11>


# **Dimensions: Manifold Options/Series SY7000**


# ■Blanking plate assembly

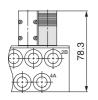

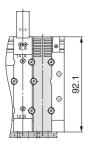


<Type 50, 51, 52>

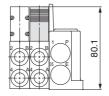

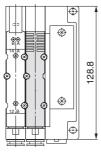


<Type 10, 11, 12>


# ■ Individual SUP/EXH spacer assembly (Side ported)

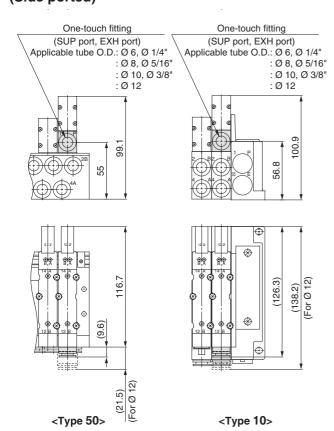

# ■ Individual SUP/EXH spacer assembly (Top/Bottom ported)

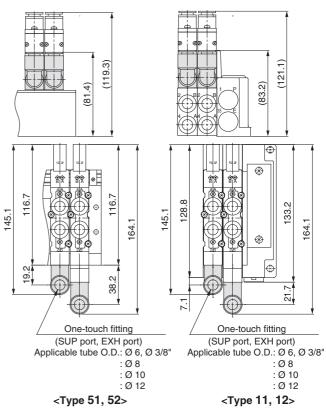


# ■ SUP stop valve spacer assembly with residual pressure release valve

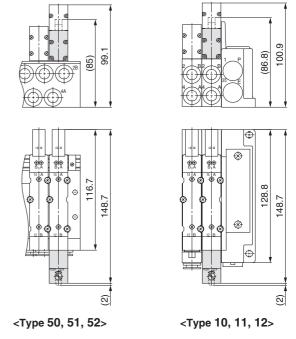


 $\ast$  : The dimensions within ( ) applies to the SY70-50-1AE.


# **Dimensions: Manifold Options/Series SY7000**


# ■ Double check spacer assembly with residual pressure release valve

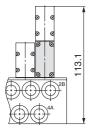

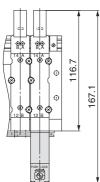


<Type 50, 51>

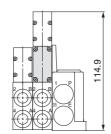


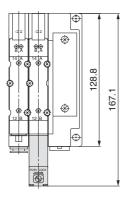

<Type 10, 11>


# ■ Individual SUP/EXH block assembly (Top ported)

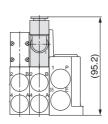


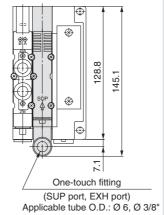

: Ø 8 : Ø 10 <Type 12> : Ø 12


# ■ Individual SUP/EXH block assembly (Side ported)

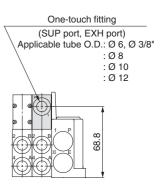

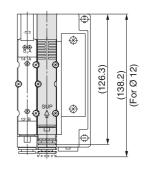


<Type 10>


# ■ Interface regulator

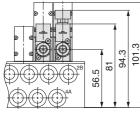




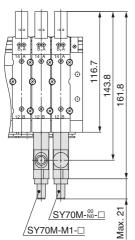


<Type 50, 51, 52>

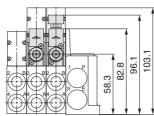


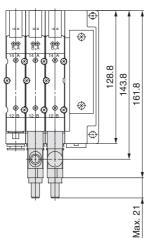

<Type 10, 11, 12>

# ■Individual SUP/EXH block assembly (Bottom ported)

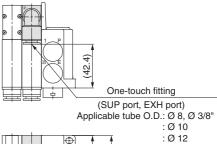

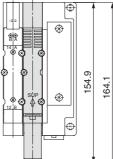

<Type 11>





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

### **Environment**

# **Marning**

- Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapor, or where there is direct contact with any of these.
- Products compliant with IP67 enclosures (based on IEC60529)
  are protected against dust and water, however, these products
  cannot be used in water. If using in an environment that is
  exposed to water and dust splashes, take measures such as
  using a protective cover.
- 3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

# **Valve Mounting**

# **⚠** Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

Series	Thread size	Tightening torque
SY3000	M2	0.16 N·m
SY5000/7000	М3	0.8 N·m

# **Manual Override**

# **⚠** Warning

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

# ■ Non-locking push type

Push down on the manual override button until it stops.



# ■ Push-turn locking slotted type [Type D]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it 90° clockwise. The manual override is then locked. To release it, turn it counterclockwise.


If it is not turned, it can be operated the same way as the non-locking type.  $\parallel$ 




# **Marning**

# ■ Push-turn locking lever type [Type E]

Push down on the manual override by finger until it stops, and then turn it  $60^{\circ}$  clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking type.

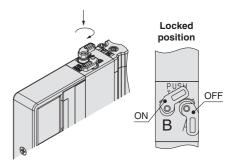

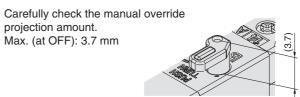


# **⚠** Caution

Do not apply excessive torque when turning the manual override.  $[0.1\ N\cdot m]$ 

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage etc.

### ■ Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

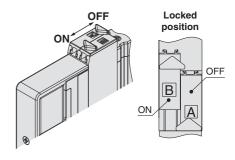



Locked position



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

### **Back Pressure Check Valve**

# **⚠** Caution

- There are two types of back pressure check valves; the one which is built into a valve (with rubber seal type only) and the one which is built in on the manifold side with connector connection. Both of them have a check valve built-in to prevent back pressure. For this reason, use caution that the valves with external pilot specification cannot be pressurised from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. Please contact SMC for details.
- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

## **Exhaust Throttle**

# **⚠** Caution

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

# Used as a 3-Port Valve

# **⚠** Caution

# ■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.

Plu	Plug position B port		A port
Type	of actuation	N.C.	N.O.
of solenoids	Single	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB)
Number of	Double	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB) (P)

# **Valve and Manifold Combination**

The SY series plug-in valve has the common configuration of the valve mounting surface between base mounted type (SY  $\frac{3}{2}$   $\square$ 0 $\square$ ) and top ported type (SY  $\frac{3}{2}$   $\square$ 3 $\square$ ), therefore, it can be mounted to all manifolds of the side ported type (Type 50 and Type 10), the bottom ported type (Type 51 and Type 11) and the top ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top ported valve to a side ported or bottom ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base mounted valve is mounted to a top ported manifold, there will be no output from the A and B port.



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

# Light/Surge Voltage Suppressor




# ■ Polar type


# Positive common

## Single solenoid

Light/surge voltage suppressor ( $\Box Z$ )

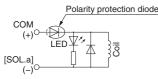


Surge voltage suppressor ( $\square S$ )

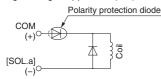


### Positive common

# Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□Z)

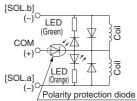


Surge voltage suppressor (□S)

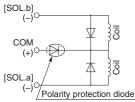


# **Negative common**

## Single solenoid

Light/surge voltage suppressor ( $\square NZ$ )

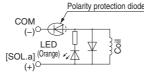


Surge voltage suppressor ( $\square NS$ )

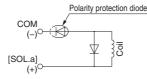


### **Negative common**

### Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□NZ)

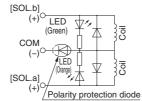


Surge voltage suppressor (□NS)

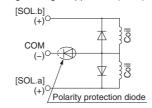


# ■ Non-polar type

### With surge voltage suppressor (□R)

### Single solenoid

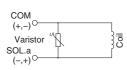

### Double solenoid

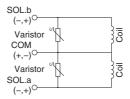


# With light/surge voltage suppressor (□U)

## Single solenoid

### COM (+,-) Varistor SOL.a


# Double solenoid

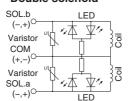

### ■ With power saving circuit


Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energised state. (Effective energising time is over 67 ms at 24 V DC.)

\*: Be careful of the energising time, as quick response and high pressure types will become operational when the energising time is over 40 ms.

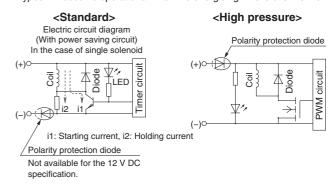

The above circuit reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below.

## <Electrical power waveform with power saving circuit>

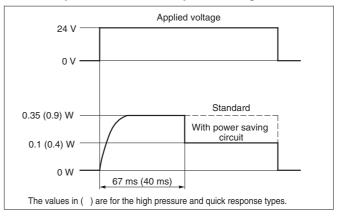

- The 12 V DC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

## Residual voltage of the surge voltage suppressor

\*: If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the below table and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 14.

### **Residual Voltage**

Surge voltage	DC			
suppressor	24 V	12 V		
S, Z	Approx. 1 V			
R, U	Approx. 47 V	Approx. 32 V		





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

### **Continuous Duty**

# **⚠** Caution

If a valve is energised continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energised continuously for a long period of time, be sure to use a valve with power saving circuit. In particular, if three or more adjacent stations on the manifold are energised simultaneously for extended periods of time or if the valves on A side and B side are energised simultaneously for a long period of time, take special care as the temperature rise will be greater.

# Countermeasure for Surge Voltage Intrusion

# ■ Sneak-in of surge voltage

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the valve in a de-energised state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

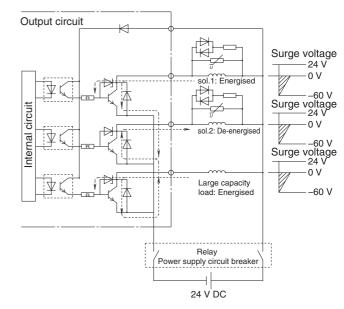


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 V DC)

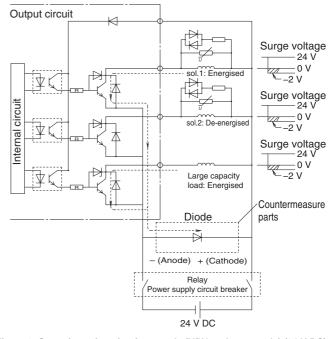


Figure 2. Surge intrusion circuit example (NPN outlet example) (24 V DC)






Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

# **Light Indication**


When equipped with indicator light and surge voltage suppressor, the light window turns orange when solenoid a is energised, and it turns green when solenoid b is energised.

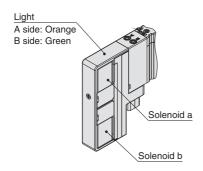

Type 5□ (Metal Base) Changing Connector Entry Direction

# **∧** Caution

Connector direction for electrical entry of D-sub connector, flat ribbon cable and PC wiring can be changed. If the directional change is required, push the lever on both sides to remove the connector and change the connector direction for electrical entry as shown in the figure. Since lead wire assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

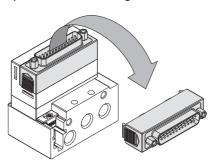


Type 1□ (Connector Connecting Base) Changing Connector Entry Direction

# **⚠** Caution

Connector direction for electrical entry of D-sub connector <IP40>, flat ribbon cable and PC wiring can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire etc., to break. Thus, refrain from using in these ways.

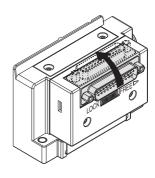


### **How to Order Manifold**

# **⚠** Caution

The letter "f" is indicated on manifold blocks for the SY series Type 1 (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-or 4-position valves cannot be used for manifolds blocks with single wiring specification ĺ.)

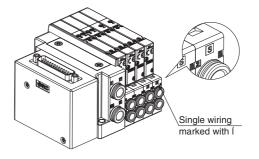





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

### **Substrate Assemblies inside Manifolds**

# **A** Caution

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

# Fixation of DIN Rail Mounting Type Manifold

# **⚠** Caution

- 1. When the manifold is fixed with bolts on a mounting surface etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.


Port Block Assembly and How to Change Piping Types between Top and Side

# **⚠** Caution


For top ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top ported type port block assembly with the side ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 247 for part numbers of port block assembly and body cover assembly.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

# **⚠** Caution

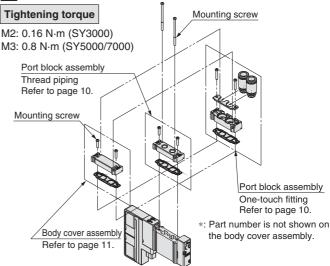

# ■ How to change while mounted on a manifold

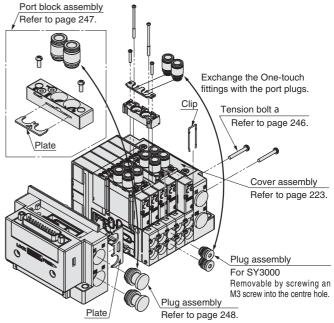





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

# **Changing One-touch Fittings**


# **⚠** Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 248 for part numbers of One-touch fittings for valve or manifold.

# ■ Valve

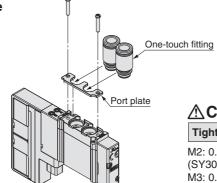


# **⚠** Caution

Tightening torque


M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

## ■ Plug-in metal base

• Side ported (Type 50)

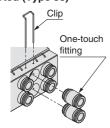

# •Bottom ported (Type 51)

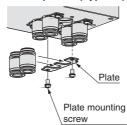

# Plate assembly part no. (10 pcs. included)

only lean times ( so leads missianaes							
Series	Part no.						
SY3000	SY30M-19-2A						
SY5000	SY50M-19-2A						
SY7000	SY70M-19-2A						


Clip part no. (10 pcs. included)

(10 poor moradou)							
Series	Part no.						
SY3000	SY30M-10-3A						
SY5000	SY50M-10-6A						
SY7000	SY70M-10-7A						

\*: Including mounting screw

# ■ Plug-in connector connecting base

•Side ported (Type 10)

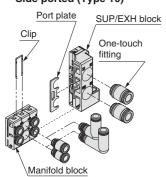

# SUP/EXH block Clip part no. (10 pcs. included)

and hand the free meaning							
Series	Part no.						
SY3000	SY30M-19-1A						
SY5000*1	SY50M-19-6A						
SY3000/5000 Mixed mounting type	SY50M-19-1A						
SY7000	SV3000-70-1A						

- \*1: A and B ports (Ø 8 and Ø 5/16") of the SY3000/5000 mixed mounting type are those for the SY5000.
- \*: If the port plate for the SUP/EXH block is required, please contact SMC.

# **Changing One-touch Fittings**

# **∆** Caution

### •Bottom ported (Type 11)

Secure enough space between the manifold blocks when the plate is detached and attached.

# Plate Manifold block

# Plate part no. (10 pcs. included)

Part no.
SY50M-10-4A
SY50M-10-5A
SY70M-10-4A

\*1: A and B ports (Ø 8 and Ø 5/16") of the SY3000/5000 mixed mounting type are those for the SY5000.

### Other Tube Brands

# **⚠** Caution

1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

1) Nylon tube within  $\pm 0.1$  mm within  $\pm 0.1$  mm within  $\pm 0.1$  mm 3) Polyurethane tube within  $\pm 0.1$  mm  $\pm 0.2$  mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

# **One-touch Fittings**

### ■ Tube attachment/detachment for One-touch fittings

## 1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

### 2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

# **One-touch Fittings**

# **⚠** Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

# Applicable Fittings: Series KQ2H, KQ2S

Corios	Model	Diningspark	Port size	Fittings	Applicable tube O.D.						
Series	iviodei	Piping port			Ø2	Ø 3.2	Ø 4	Ø6	Ø 8	Ø 10	Ø 12
SY3□30	SY3□30-□□-M5	4A, 2B	M5	KQ2H							
	3 1 3 L 3 U - L L - IVI 3			KQ2S							
		1P, 5EA, 3EB	1/8	KQ2H							
				KQ2S							
SY3000		X, PE	M5	KQ2H							
SS5Y3-50/51/52 (R)  Manifold base	SS5Y3-50/51/52 (R)			KQ2S							
		1/8	KQ2H								
		4A, 2B	1/6	KQ2S							
			M5	KQ2H							
				KQ2S							

Series Model	Model	Pining port	Piping port Por		Fittings			Applic	Applicable tube O.D.			
	iviodei	Fibility port	size	size   Fittings	Ø 2	Ø 3.2	Ø 4	Ø6	Ø 8	Ø 10	Ø 12	
0.75=00 == 04	44.00	4 (0	KQ2H									
	SY5□30-□□-01	4A, 2B	1/8	KQ2S								
		1D 5EA 2EB	4 / 4	KQ2H								
		1P, 5EA, 3EB	1/4	KQ2S								
SY5000		X, PE	M5	KQ2H								
	SS5Y5-50/51/52 (R)			KQ2S								
			1/4	KQ2H								
		4A 2B		KQ2S								
		4A, 2B	1/8	KQ2H								
				KQ2S								

Series Model		Piping port	Port	Port Fittings		Applicable tube O.D.					
		Fibility port	size	Fittings	Ø 2	Ø 3.2	Ø 4	Ø 6	Ø 8	Ø 10	Ø 12
SY7□30-□□-02	4A, 2B	1/4	KQ2H								
			KQ2S								
SY7000 SS5Y7-50/51/52 (R) Manifold base		1P, 5EA, 3EB	3/8	KQ2H							
				KQ2S							
	SS5Y7-50/51/52 (R)	X, PE	M5	KQ2H							
	Λ, ΡΕ	IVIS	KQ2S								
		4A, 2B	1/4	KQ2H							
				KQ2S							

## ■ Trademark

$$\label{eq:decomposition} \begin{split} \text{DeviceNet}^{\text{TM}} \text{ is a trademark of ODVA.} \\ \text{EtherNet}/IP^{\text{TM}} \text{ is a trademark of ODVA.} \\ \text{CompoNet}^{\text{TM}} \text{ is a trademark of ODVA.} \end{split}$$

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



# ⚠ Normas de segurança

O objectivo destas normas de segurança é evitar situações de risco e/ou danos no equipamento. Estas normas indicam o grau de perigo potencial através das etiquetas "Precaução", "Advertência" ou "Perigo". Trata-se de notas importantes para a segurança e que devem ser seguidas para além das Normas Internacionais (ISO/IEC)\*1), e os outros regulamentos de segurança.

Precaução indica um perigo com um baixo nível de Precaução: risco que, se não for evitado, pode resultar em ferimentos ligeiros ou moderados.

Advertência indica um perigo com um nível médio Advertência: de risco que, se não for evitado, pode resultar em morte ou ferimentos graves.

**⚠** Perigo:

Perigo indica um perigo com um alto nível de risco que, se não for evitado, irá provocar a morte ou ferimentos graves.

\*1) ISO 4414 : Sistemas pneumáticos – Normativa para os sistemas pneumáticos. ISO 4413 : Sistemas hidráulicos - Normativa para os sistemas hidráulicos. IEC 60204-1: Segurança de máquinas – Equipamento eléctrico de máquinas. (Parte 1: requisitos gerais)

O produto utilizado está sujeito à "Garantia limitada e renúncia" e

1. O período de garantia do produto é de 1 ano em funcionamento ou 1 ano e

O produto pode ter igualmente uma durabilidade, distância de funcionamento ou

peças de substituição especificadas. Consulte o ponto de venda mais próximo.

Em caso de falhas ou danos comunicados durante o período da garantia, e

que sejam claramente da nossa responsabilidade, será fornecido um produto

Esta garantia limitada aplica-se apenas ao nosso produto, independente-

mente, e não a quaisquer outros danos ocorridos devido à falha do produto.

3. Antes de utilizar os produtos da SMC, leia e compreenda os termos da

garantia e as renúncias indicadas no catálogo especificado para os produtos

Uma ventosa de vácuo é uma peça consumível e, por isso, a sua garantia é de um ano após a

Da mesma forma, mesmo dentro do período da garantia, o desgaste de um produto devido à

utilização da ventosa de vácuo ou falha devido à deterioração do material de borracha não está

ISO 10218-1: A manipulação dos robôs industriais - Segurança.

Garantia limitada e renúncia

Requisitos de conformidade

meio após a entrega do produto, o que ocorrer primeiro.\*2)

\*2) As ventosas de vácuo estão excluídas desta garantia de 1 ano.

aos "Requisitos de conformidade" abaixo indicados.

Antes de utilizar o produto deve lê-los e aceitá-los.

Garantia limitada e renúncia

de substituição ou as peças necessárias.

abrangido pela garantia limitada.

Requisitos de conformidade

# ⚠ Advertência

1. A compatibilidade do produto é da responsabilidade exclusiva da pessoa que desenha o equipamento ou decide as suas especificações.

Uma vez que o produto aqui especificado é utilizado em diferentes condições de trabalho, a sua compatibilidade com equipamento específico deve ser decidida pela pessoa que desenha o equipamento ou decide as suas especificações com base nas análises necessárias e resultados de testes. O desempenho e a segurança esperados do equipamento serão da responsabilidade do indivíduo que tenha determinado a sua compatibilidade com o produto. Esta pessoa deve também rever frequentemente todas as especificações do produto, consultando a última informação do catálogo para poder ter em conta qualquer possibilidade de falha do equipamento ao configurar o mesmo

2. As máquinas e equipamentos devem ser utilizados só por pessoal qualificado.

O produto aqui especificado pode tornar-se inseguro se for utilizado incorrectamente. A montagem, o funcionamento e a manutenção de máquinas ou equipamento, incluindo os nossos produtos, devem ser efectuados por pessoal qualificado e com experiência

- 3. Não realize trabalhos de manutenção nem tente substituir o produto e máquinas e equipamento sem tomar as medidas de segurança correspondentes.
  - 1. A inspecção e a manutenção da máquina/equipamento só deverão ser efectuadas quando estiverem confirmadas as medidas de prevenção de quedas ou descontrolo de objectos comandados
  - 2. Para substituir o produto, confirme que foram tomadas as medidas de segurança tal como se indica acima e que a fonte de alimentação de qualquer origem é interrompida; deve também les atentamente e compreender as precauções específicas do produto de todos os produtos relevantes.
  - 3. Antes de reiniciar o equipamento tome as medidas necessárias para prevenir um possível arrangue ou funcionamento defeituoso inesperado
- 4. Se o equipamento for utilizado nas condições ou ambiente seguintes, por favor contacte primeiro a SMC e certifique-se de que toma todas as medidas de segurança necessárias.
  - 1. As condições de aplicação fora das especificações indicadas ou se o produto for usado ao ar livre, ou num local exposto à luz directa do sol.
  - 2. Instalação do equipamento em conjunto com energia atómica, caminhos de ferro, navegação aérea, espacial, naval, veículos, militar, equipamento médico, equipamento de combustão e recreativo, ou equipamento em contacto com alimentação e bebidas, circuitos de paragem de emergência, circuitos de travagem e embraiagem em aplicações de prensagem, equipamento de segurança ou outras aplicações que não sejam adequadas às características standard descritas no catálogo do produto.
  - 3. Se o produto for usado para aplicações que possam provocar consequências negativas em pessoas, bens ou animais e requer uma análise especial de segurança.
  - 4. Se o produto for utilizado num circuito de segurança, prepare um circuito duplo de segurança com uma função de protecção mecânica para prevenir uma falha. E verifique os dispositivos periodicamente quanto ao seu normal funcionamento.

### legislação e regulamentos de segurança relevantes dos países envolvidos na transacção. Antes do envio de um produto da SMC para outro país, certifique-se de que está informado e cumpre todos os regulamentos locais que regulamentam essa exportação.

# ∕!\ Caution

1. É estritamente proibida a utilização de produtos da SMC com equipamento de produção de

2. As exportações de produtos ou tecnologia da SMC de um país para outro são regidas pela

fabrico de armas de destruição maciça (WMD) ou quaisquer outras armas.

Os produtos SMC não devem ser utilizados como instrumentos para metrologia legal.

Os instrumentos de medição que a SMC fabrica ou vende não estão qualificados por quaisquer testes de aprovação relevantes para a legislação metrológica (medição)

Assim sendo, os produtos SMC não podem ser utilizados em actividades ou certificações decretadas por qualquer legislação metrológica (medição) de cada país.

# ⚠ Precaução

1. O produto é fornecido para ser utilizado em indústrias de fabrico.

O produto descrito é fornecido, principalmente, para utilização sem falhas em indústrias de fabrico. Se considerar a utilização do produto noutras indústrias, consulte previamente a SMC e troque as características, ou o contrato, se necessário,

Se surgir qualquer dúvida, contacte o ponto de venda mais próximo.

Normas de segurança Leia "Precauções de manuseamento para os produtos da SMC" (M-E03-3) antes de usar.

específicos.

# **SMC Corporation (Europe)**

**Austria** \*\* +43 (0)2262622800 www.smc.at office@smc.at Lithuania **3**+370 5 2308118 info@smclt It www.smclt.lt Belgium **\***+32 (0)33551464 www.smcpneumatics.be info@smcpneumatics.be Netherlands **\***+31 (0)205318888 www.smcpneumatics.nl info@smcpneumatics.nl **2** +359 (0)2807670 **2** +47 67129020 Bulgaria www.smc.bg office@smc.bg Norway www.smc-norge.no post@smc-norge.no Croatia **\***+385 (0)13707288 office@smc.hr Poland **\***+48 222119600 office@smc.pl www.smc.hr www.smc.pl Portugal **\***+420 541424611 postpt@smc.smces.es Czech Republic www.smc.cz office@smc.cz **\***+351 226166570 www.smc.eu Denmark **2** +45 70252900 smc@smcdk.com Romania **2**+40 213205111 www.smcdk.com www.smcromania.ro smcromania@smcromania.ro Estonia **\***+372 6510370 www.smcpneumatics.ee smc@smcpneumatics.ee Russia **\***+7 8127185445 www.smc-pneumatik.ru info@smc-pneumatik.ru **2**+358 207513513 Finland smcfi@smc fi Slovakia **\*** +421 (0)413213212 office@smc.sk www smc fi www.smc.sk France **\***+33 (0)164761000 www.smc-france.fr info@smc-france.fr Slovenia **\*** +386 (0)73885412 www.smc.si office@smc.si Germany **2** +49 (0)61034020 www.smc.de info@smc.de Spain **\***+34 902184100 www.smc.eu post@smc.smces.es Greece **\*** +30 210 2717265 www.smchellas.gr sales@smchellas.gr Sweden **\***+46 (0)86031200 www.smc.nu post@smc.nu Switzerland Hungary **\***+36 23511390 www.smc.hu office@smc.hu **\*** +41 (0)523963131 www.smc.ch info@smc.ch Ireland **2** +353 (0)14039000 www.smcpneumatics.ie sales@smcpneumatics.ie Turkey 212 489 0 440 **212** 489 0 440 www.smcpnomatik.com.tr info@smcpnomatik.com.tr Italy **\***+39 0292711 www.smcitalia.it mailbox@smcitalia.it UK **\*** +44 (0)845 121 5122 www.smcpneumatics.co.uk sales@smcpneumatics.co.uk Latvia ★+371 67817700 info@smclv.lv www.smclv.lv

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362