

Compact 5000 I/O Field Potential Distributor

Catalog Number 5069-FPD

| Topic | Page |
|---|------|
| Module Overview | 5 |
| Install a System | 5 |
| Required Components | 5 |
| System Power Considerations | 6 |
| Install the Removable Terminal Block | 8 |
| Install the Field Potential Distributor | 8 |
| Install the End Cap | 9 |
| Wire the Removable Terminal Block | 9 |
| Use a Cable Tie | 12 |
| Power the System | 12 |
| Remove the Module | 12 |
| Specifications | 13 |
| Additional Resources | 14 |

The 5069-FPD field potential distributor breaks field-side power distribution in a CompactLogix™ 5380 control system or a Compact 5000™ I/O system and creates a new SA power bus to the right of the field potential distributor from which Compact 5000 I/O modules can draw current.

The following are example application conditions that require you to use a field potential distributor:

- Configure a system such that groups of module types are isolated as necessary, for example, separate digital modules from analog modules.
- Provide additional SA power bus current in a system when I/O modules collectively draw more than 10 A current from an SA power bus.

For more information on how to use a 5069-FPD field potential distributor, see [Additional Resources on page 14](#).

Summary of Changes

This publication contains new and updated information as indicated in the following table.

| Topic | Page(s) |
|---|---------|
| Updated graphics that show the lower hook that can be used with a cable tie | 5 and 6 |
| Updated module height dimension | 6 |
| Updated information about how to install an end cap | 9 |
| Description of how to use a cable tie | 12 |
| Updates to the specifications | 13 |



ATTENTION: Read this document and the documents listed in the Additional Resources section about installation, configuration and operation of this equipment before you install, configure, operate or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

注意：在安装、配置、操作和维护本产品前，请阅读本文档以及“其他资源”部分列出的有关设备安装、配置和操作的相应文档。除了所有适用规范、法律和标准的相关要求之外，用户还必须熟悉安装和接线说明。

安装、调整、投运、使用、组装、拆卸和维护等各项操作必须由经过适当训练的专业人员按照适用的操作规范实施。

如果未按照制造商指定的方式使用该设备，则可能会损害设备提供的保护。

ATENCIÓN: Antes de instalar, configurar, poner en funcionamiento o realizar el mantenimiento de este producto, lea este documento y los documentos listados en la sección Recursos adicionales acerca de la instalación, configuración y operación de este equipo. Los usuarios deben familiarizarse con las instrucciones de instalación y cableado y con los requisitos de todos los códigos, leyes y estándares vigentes.

El personal debidamente capacitado debe realizar las actividades relacionadas a la instalación, ajustes, puesta en servicio, uso, ensamblaje, desensamblaje y mantenimiento de conformidad con el código de práctica aplicable.

Si este equipo se usa de una manera no especificada por el fabricante, la protección provista por el equipo puede resultar afectada.

ATENÇÃO: Leia este e os demais documentos sobre instalação, configuração e operação do equipamento que estão na seção Recursos adicionais antes de instalar, configurar, operar ou manter este produto. Os usuários devem se familiarizar com as instruções de instalação e fiação além das especificações para todos os códigos, leis e normas aplicáveis.

É necessário que as atividades, incluindo instalação, ajustes, colocação em serviço, utilização, montagem, desmontagem e manutenção sejam realizadas por pessoal qualificado e especializado, de acordo com o código de prática aplicável.

Caso este equipamento seja utilizado de maneira não estabelecida pelo fabricante, a proteção fornecida pelo equipamento pode ficar prejudicada.

ВНИМАНИЕ: Перед тем как устанавливать, настраивать, эксплуатировать или обслуживать данное оборудование, прочитайте этот документ и документы, перечисленные в разделе «Дополнительные ресурсы». В этих документах изложены сведения об установке, настройке и эксплуатации данного оборудования. Пользователи обязаны ознакомиться с инструкциями по установке и прокладке соединений, а также с требованиями всех применимых норм, законов и стандартов.

Все действия, включая установку, наладку, ввод в эксплуатацию, использование, сборку, разборку и техническое обслуживание, должны выполняться обученным персоналом в соответствии с применимыми нормами и правилами.

Если оборудование используется не предусмотренным производителем образом, защита оборудования может быть нарушена.

注意：本製品を設置、構成、稼働または保守する前に、本書および本機器の設置、設定、操作についての参考資料の該当箇所に記載されている文書に目を通してください。ユーザは、すべての該当する条例、法律、規格の要件に加えて、設置および配線の手順に習熟している必要があります。

設置調整、運転の開始、使用、組立て、解体、保守を含む諸作業は、該当する実施規則に従って訓練を受けた適切な作業員が実行する必要があります。

本機器が製造メーカーにより指定されていない方法で使用されている場合、機器により提供されている保護が損なわれる恐れがあります。

ACHTUNG: Lesen Sie dieses Dokument und die im Abschnitt „Weitere Informationen“ aufgeführten Dokumente, die Informationen zu Installation, Konfiguration und Bedienung dieses Produkts enthalten, bevor Sie dieses Produkt installieren, konfigurieren, bedienen oder warten. Anwender müssen sich neben den Bestimmungen aller anwendbaren Vorschriften, Gesetze und Normen zusätzlich mit den Installations- und Verdrahtungsanweisungen vertraut machen.

Arbeiten im Rahmen der Installation, Anpassung, Inbetriebnahme, Verwendung, Montage, Demontage oder Instandhaltung dürfen nur durch ausreichend geschulte Mitarbeiter und in Übereinstimmung mit den anwendbaren Ausführungsvorschriften vorgenommen werden.

Wenn das Gerät in einer Weise verwendet wird, die vom Hersteller nicht vorgesehen ist, kann die Schutzfunktion beeinträchtigt sein.

ATTENTION : Lisez ce document et les documents listés dans la section Ressources complémentaires relatifs à l'installation, la configuration et le fonctionnement de cet équipement avant d'installer, configurer, utiliser ou entretenir ce produit. Les utilisateurs doivent se familiariser avec les instructions d'installation et de câblage en plus des exigences relatives aux codes, lois et normes en vigueur.

Les activités relatives à l'installation, le réglage, la mise en service, l'utilisation, l'assemblage, le démontage et l'entretien doivent être réalisées par des personnes formées selon le code de pratique en vigueur.

Si cet équipement est utilisé d'une façon qui n'a pas été définie par le fabricant, la protection fournie par l'équipement peut être compromise.

주의：본 제품 설치, 설정, 작동 또는 유지 보수하기 전에 본 문서를 포함하여 설치, 설정 및 작동에 관한 참고 자료 섹션의 문서들을 반드시 읽고 숙지하십시오. 사용자는 모든 관련 규정, 법규 및 표준에서 요구하는 사항에 대해 반드시 설치 및 배선 지침을 숙지해야 합니다.

설치, 조정, 가동, 사용, 조립, 분해, 유지보수 등 모든 작업은 관련 규정에 따라 적절한 교육을 받은 사용자를 통해서만 수행해야 합니다.

본 장비를 제조사가 명시하지 않은 방법으로 사용하면 장비의 보호 기능이 손상될 수 있습니다.

ATTENZIONE Prima di installare, configurare ed utilizzare il prodotto, o effettuare interventi di manutenzione su di esso, leggere il presente documento ed i documenti elencati nella sezione "Altre risorse", riguardanti l'installazione, la configurazione ed il funzionamento dell'apparecchiatura. Gli utenti devono leggere e comprendere le istruzioni di installazione e cablaggio, oltre ai requisiti previsti dalle leggi, codici e standard applicabili.

Le attività come installazione, regolazioni, utilizzo, assemblaggio, disassemblaggio e manutenzione devono essere svolte da personale adeguatamente addestrato, nel rispetto delle procedure previste.

Qualora l'apparecchio venga utilizzato con modalità diverse da quanto previsto dal produttore, la sua funzione di protezione potrebbe venire compromessa.

DIKKAT: Bu ürünün kurulumu, yapılandırılması, işletilmesi veya bakımı öncesinde bu dokümanı ve bu ekipmanın kurulumu, yapılandırılması ve işletimi ile ilgili İlavə Kaynaklar bölümünde yer listelenmiş dokümanları okuyun. Kullanıcılar yürürlükteki tüm yönetmelikler, yasalar ve standartların gereksinimlerine ek olarak kurulum ve kablolama talimatlarını da öğrenmek zorundadır.

Kurulum, ayarlama, hizmet alma, kul lanma, parçaları birleştirme, parçaları sökme ve bakım gibi aktiviteler sadece uygun eğitimleri almış kişiler tarafından yürürlükteki uygulama yönetmeliklerine uygun şekilde yapılabilir.

Bu ekipman üretici tarafından belirlenmiş amaç dışında kullanılırsa, ekipman tarafından sağlanan koruma bozulabilir.

注意事項：在安装、設定、操作或維護本產品前，請先閱讀此文件以及列於「其他資源」章節中有關安裝、設定與操作此設備的文件。使用者必須熟悉安裝和配線指示，並符合所有法規、法律和標準要求。

包括安裝、調整、交付使用、使用、組裝、拆卸和維護等動作都必須交由已經過適當訓練的人員進行，以符合適用的實作法規。

如果將設備用於非製造商指定的用途時，可能會造成設備所提供的保護功能受損。

POZOR: Než začnete instalovat, konfigurovat či provozovat tento výrobek nebo provádět jeho údržbu, přečtěte si tento dokument a dokumenty uvedené v části Dodatečné zdroje ohledně instalace, konfigurace a provozu tohoto zařízení. Uživatelé se musejí vedle požadavků všech relevantních vyhlášek, zákonů a norem nutně seznámit také s pokyny pro instalaci a elektrické zapojení.

Činnosti zahrnující instalaci, nastavení, uvedení do provozu, užívání, montáž, demontáž a údržbu musí vykonávat vhodně proškolený personál v souladu s příslušnými prováděcími předpisy.

Pokud se toto zařízení používá způsobem neodpovídajícím specifikaci výrobce, může být narušena ochrana, kterou toto zařízení poskytuje.

UWAGA: Przed instalacją, konfiguracją, użytkowaniem lub konserwacją tego produktu należy przeczytać niniejszy dokument oraz wszystkie dokumenty wymienione w sekcji Dodatkowe źródła omawiające instalację, konfigurację i procedury użytkowania tego urządzenia. Użytkownicy mają obowiązek zapoznać się z instrukcjami dotyczącymi instalacji oraz oprezwodowania, jak również z obowiązującymi kodeksami, prawami i normami.

Działania obejmujące instalację, regulację, przekazanie do użytkowania, użytkowanie, montaż, demontaż oraz konserwację muszą być wykonywane przez odpowiednio przeszkolony personel zgodnie z obowiązującym kodeksem postępowania.

Jeśli urządzenie jest użytkowane w sposób inny niż określony przez producenta, zabezpieczenie zapewniane przez urządzenie może zostać ograniczone.

OBST Läs detta dokument samt dokumentet, som står listat i avsnittet Övriga resurser, om installation, konfigurering och drift av denna utrustning innan du installerar, konfigurerar eller börjar använda eller utföra underhållsarbete på produkten. Användare måste bekanta sig med instruktioner för installation och kabeldragning, förutom krav enligt gällande koder, lagar och standarder.

Åtgärder som installation, justering, service, användning, montering, demontering och underhållsarbete måste utföras av personal med lämplig utbildning enligt lämpligt bruk.

Om denna utrustning används på ett sätt som inte anges av tillverkaren kan det hända att utrustningens skyddsanordningar försätts ur funktion.

LET OP: Lees dit document en de documenten die genoemd worden in de paragraaf Aanvullende informatie over de installatie, configuratie en bediening van deze apparatuur voordat u dit product installeert, configureert, bedient of onderhoudt. Gebruikers moeten zich vertrouwd maken met de installatie en de bedradinginstructies, naast de vereisten van alle toepasselijke regels, wetten en normen.

Activiteiten zoals het installeren, afstellen, in gebruik stellen, gebruiken, monteren, demonteren en het uitvoeren van onderhoud mogen uitsluitend worden uitgevoerd door hiervoor opgeleid personeel en in overeenstemming met de geldende praktijkregels.

Indien de apparatuur wordt gebruikt op een wijze die niet is gespecificeerd door de fabrikant, dan bestaat het gevaar dat de beveiliging van de apparatuur niet goed werkt.

Waste Electrical and Electronic Equipment (WEEE)



At the end of its life, this equipment should be collected separately from any unsorted municipal waste.

Environment and Enclosure



ATTENTION: This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in IEC 60664-1), at altitudes up to 2000 m (6562 ft) without derating.

This equipment is not intended for use in residential environments and may not provide adequate protection to radio communication services in such environments.

This equipment is supplied as open-type equipment for indoor use. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present and appropriately designed to prevent personal injury resulting from accessibility to live parts. The enclosure must have suitable flame-retardant properties to prevent or minimize the spread of flame, complying with a flame spread rating of 5VA or be approved for the application if nonmetallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain more information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

In addition to this publication, see the following:

- Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for more installation requirements.
- NEMA Standard 250 and EN/IEC 60529, as applicable, for explanations of the degrees of protection provided by enclosures.

North American Hazardous Location Approval

| The following information applies when operating this equipment in hazardous locations: | Informations sur l'utilisation de cet équipement en environnements dangereux: |
|---|--|
| <p>Products marked "CL I, DIV 2, GP A, B, C, D" are suitable for use in Class I Division 2 Groups A, B, C, D, Hazardous Locations and nonhazardous locations only. Each product is supplied with markings on the rating nameplate indicating the hazardous location temperature code. When combining products within a system, the most adverse temperature code (lowest "T" number) may be used to help determine the overall temperature code of the system. Combinations of equipment in your system are subject to investigation by the local Authority Having Jurisdiction at the time of installation.</p> | <p>Les produits marqués "CL I, DIV 2, GP A, B, C, D" ne conviennent qu'à une utilisation en environnements de Classe I Division 2 Groupes A, B, C, D dangereux et non dangereux. Chaque produit est livré avec des marquages sur sa plaque d'identification qui indiquent le code de température pour les environnements dangereux. Lorsque plusieurs produits sont combinés dans un système, le code de température le plus défavorable (code de température le plus faible) peut être utilisé pour déterminer le code de température global du système. Les combinaisons d'équipements dans le système sont sujettes à inspection par les autorités locales qualifiées au moment de l'installation.</p> |
| <div data-bbox="164 1230 261 1316" data-label="Image"> </div> <p>WARNING: Explosion Hazard</p> <ul style="list-style-type: none"> • Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous. • Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product. • Substitution of components may impair suitability for Class I, Division 2. • If this product contains batteries, they must be changed only in an area known to be nonhazardous. | <div data-bbox="821 1230 919 1316" data-label="Image"> </div> <p>AVERTISSEMENT Risque d'Explosion</p> <ul style="list-style-type: none"> • Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement. • Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit. • La substitution de composants peut rendre cet équipement inadapté à une utilisation en environnement de Classe I, Division 2. • S'assurer que l'environnement est classé non dangereux avant de changer les piles. |

European Hazardous Location Approval

The following applies to products marked ,  II 3 G. Such modules:

- Are Equipment Group II, Equipment Category 3, and comply with the Essential Health and Safety Requirements relating to the design and construction of such equipment given in Annex II to Directive 2014/34/EU. See the EC Declaration of Conformity at <http://www.rockwellautomation.com/products/certification> for details.
 - The type of protection is "Ex nA IIC T4 Gc" according to EN 60079-15.
 - The 5069-FPD field potential distributor complies to standards: EN 60079-0:2012+A11:2013, EN 60079-15:2010 when used at or below 125V AC, reference certificate number DEMKO 15 ATEX 1455X.
 - Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification according to ATEX directive 2014/34/EU.
-

IEC Hazardous Location Approval

The following applies to products with IECEx certification: Such modules:

- Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification to IEC 60079-0.
 - The type of protection is "Ex nA IIC T4 Gc" according to IEC 60079-15.
 - The 5069-FPD field potential distributor complies to standards IEC 60079-0:6th Edition, IEC-60079-15:4th Edition when used at or below 125V AC, reference IECEx certificate number IECEx UL 15.0007X.
-

Special Conditions for Safe Use:



WARNING:

- This equipment is not resistant to sunlight or other sources of UV radiation.
 - This equipment shall be mounted in an ATEX/IECEx Zone 2 certified enclosure with a minimum ingress protection rating of at least IP54 (as defined in EN/IEC 60529) and used in an environment of not more than Pollution Degree 2 (as defined in EN/IEC 60664-1) when applied in Zone 2 environments. The enclosure must be accessible only by the use of a tool.
 - This equipment shall be used within its specified ratings defined by Rockwell Automation.
 - Provision shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 140% of the rated voltage when applied in Zone 2 environments.
 - The instructions in the user manual shall be observed.
 - This equipment must be used only with ATEX/IECEx certified Rockwell Automation backplanes.
 - Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.
 - Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.
 - Earthing is accomplished through mounting of modules on rail.
 - Devices shall be used in an environment of not more than Pollution Degree 2.
-

Prevent Electrostatic Discharge



ATTENTION: This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
 - Wear an approved grounding wriststrap.
 - Do not touch connectors or pins on component boards.
 - Do not touch circuit components inside the equipment.
 - Use a static-safe workstation, if available.
 - Store the equipment in appropriate static-safe packaging when not in use.
-

Electrical Safety Considerations





ATTENTION:

- Do not wire more than 1 conductor on any single RTB terminal.
- SELV-listed power supplies must be used for SA power if there are Functional Safety modules connected to the 5069-FPD Module system.
- In case of malfunction or damage, no attempts at repair should be made. The module should be returned to the manufacturer for repair. Do not dismantle the module.
- This equipment is certified for use only within the surrounding air temperature range of 0...60 °C (32...140 °F) The equipment must not be used outside of this range.
- Use only a soft dry anti-static cloth to wipe down equipment. Do not use any cleaning agents.

IMPORTANT Any illustrations, charts, sample programs, and layout examples shown in this publication are intended solely for the purposes of example. Since there are many variables and requirements associated with any particular installation, Rockwell Automation does not assume responsibility or liability for actual use based upon the examples shown in this publication.

Module Overview

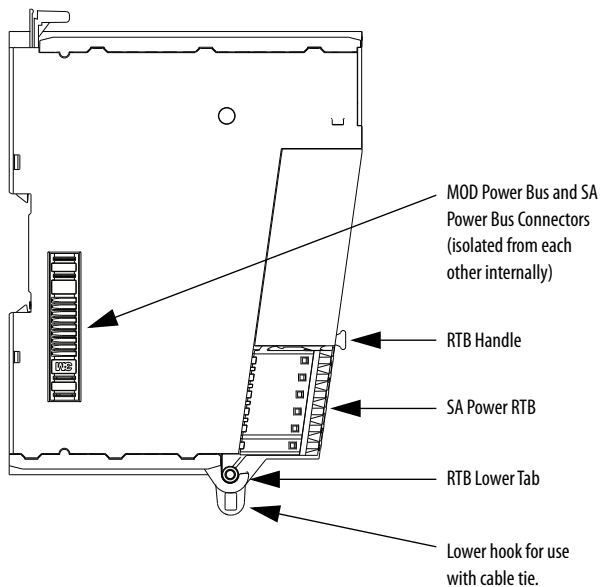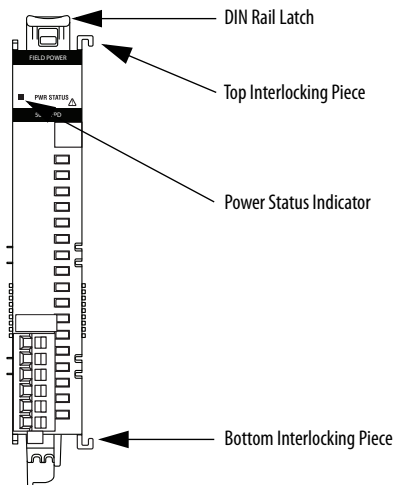

Install a System

Based on your application design, you must install a CompactLogix 5380 controller or Compact 5000 I/O EtherNet/IP adapter before you can install the 5069-FPD field potential distributor.



For more information on how to install these components, see the publications that are listed in the [Additional Resources on page 14](#).

Required Components

To install the module, you need these components.

| Component | Description |
|--|--|
| Removable terminal blocks | One of the following RTB types: <ul style="list-style-type: none"> • 5069-RTB6-SCREW RTB • 5069-RTB6-SPRING RTB IMPORTANT: You must order RTBs separately. RTBs do not ship with Compact 5000 I/O modules. We recommend that you order only the RTB type that your system requires. |
| External power supply for field-side power | A power supply that is adequately sized to provide field-side power for devices that some Compact 5000 I/O modules power. For more information, see System Power Considerations on page 6 |
| End cap | An end cap ships with the CompactLogix 5380 controllers and the Compact 5000 I/O EtherNet/IP adapters. |
| Tools | The following tools are needed: <ul style="list-style-type: none"> • Screwdriver • Wire stripper • Wires For more information on available wire sizes and wire insulation stripping length, see Specifications on page 13 . |

Dimensions

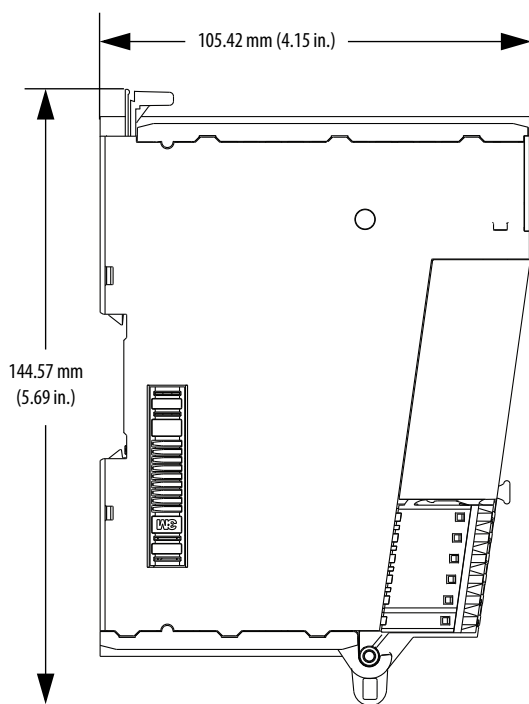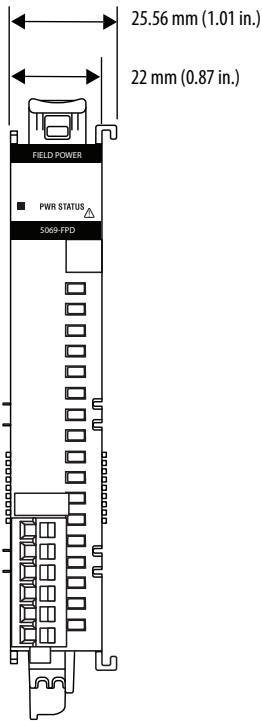

Ground Considerations

You must ground DIN rails according to the Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#)



ATTENTION: This product is grounded through the DIN rail to chassis ground. Use zinc-plated yellow-chromate steel DIN rail to assure proper grounding. The use of other DIN rail materials (for example, aluminum or plastic) that can corrode, oxidize, or are poor conductors, can result in improper or intermittent grounding. Secure DIN rail to mounting surface approximately every 200 mm (7.8 in.) and use end-anchors appropriately. Be sure to ground the DIN rail properly. Refer to Industrial Automation Wiring and Grounding Guidelines, Rockwell Automation® publication [1770-4.1](#) for more information.

You can use the EN50022 - 35 x 7.5 mm (1.38 x 0.30 in.) DIN rail with Compact 5000 I/O modules.

System Power Considerations

A CompactLogix 5380 controller or Compact 5000 I/O EtherNet/IP adapter provides power to a system.

The following power types are available:

- **Module (MOD) power** - System-side power that is required to operate the Compact 5000 I/O system. MOD power is provided through the MOD power RTB and passed across the MOD power bus.
- **Sensor/Actuator (SA) power** - Field-side power that is used to power field-side devices. SA power is provided through the SA power RTB and passed across the SA power bus.

The first component in the system, that is, the controller or the adapter, establishes an SA power bus.

Some Compact 5000 I/O modules draw current from the SA power bus and pass the remaining current to the next module. Some Compact 5000 I/O modules only pass current along the SA power bus to the next module.

A system can have multiple SA power buses. You use 5069-FPD field potential distributors to establish a new SA power bus. SA power buses are isolated from each other.

New SA Power Bus

The 5069-FPD field potential distributor establishes a new SA power bus in a system.

The field potential distributor blocks the current that passes across the SA power bus to the left of the field potential distributor. It then provides current to Compact 5000 I/O modules to the right on a new SA power bus.

Remember the following when you use a 5069-FPD field potential distributor in a system:

- You **must use** SELV/PELV power supplies for SA power if there are any Compact 5000 I/O safety modules that are installed to the right of the 5069-FPD field potential distributor.
- You **can use** standard power supplies for SA power if only standard Compact 5000 I/O modules are installed to the right of the 5069-FPD field potential distributor.
- You can connect a 24V DC or 120/240V AC power supply.
 - If the SA power source that is connected to the 5069-FPD field potential distributor is DC voltage, you must limit the SA power source to 10 A, max at 0...32V DC.
 - If the SA power source that is connected to the 5069-FPD field potential distributor is AC voltage, you must limit the SA power source to 10 A, max at 0...240V AC.
- We recommend that you use an external power supply that is adequately sized for the total SA power bus current draw on an individual bus.

For example, if the total SA power current draw is 4 A, you can use an SA power supply that is limited to 4 A.

You must consider **current inrush requirements** when you calculate the total SA power bus current draw on a specific bus.

- If a system includes Compact 5000 I/O modules that use AC SA power and modules that use DC SA power, you must install them on separate SA power buses.

To keep the modules on separate SA Power buses, complete the following steps.

- a. Install the modules that use one type of SA power, for example AC, to the right of the controller or adapter, that is, the first SA Power bus.
 - b. Install the 5069-FPD field potential distributor to establish a second SA Power bus.
 - c. Install the modules that use the other type of SA power, for example DC, on the second SA Power bus.
- Not all Class 2/SELV-listed power supplies are certified for use in all applications, for example, nonhazardous and hazardous environments.

IMPORTANT We recommend that you use separate external power supplies for MOD power and SA power respectively. This practice can help to prevent unintended consequences that can result if you use one supply.

If you use separate external power supplies, the loss of power from one external power supply does not affect the availability of power from the other supply. For example, if separate external power supplies are used and SA power is lost, MOD power remains available for the Compact 5000 I/O modules.

For more information on MOD power and SA power, see the publications that are listed in the [Additional Resources on page 14](#).


Install the Removable Terminal Block



WARNING: If you connect or disconnect the Removable Terminal Block (RTB) with power applied, an electrical arc can occur. This could cause an explosion in hazardous location installations.

The Removable Terminal Block (RTB) does not support "Removal and Insertion Under Power" (RIUP) capability. Do not connect or disconnect the Removable Terminal Block (RTB) while power is applied. Be sure that power is removed before proceeding.

1. Hook the bottom of the RTB on the field potential distributor.
2. Push the RTB against the field potential distributor until the RTB clicks into place.

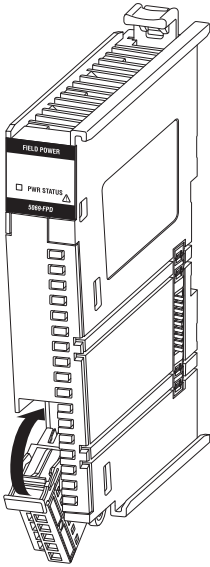

3. Push the RTB handle against the RTB until you hear another click.

Install the Field Potential Distributor



WARNING: If you insert or remove the module while backplane power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations.

The module does not support "Removal and Insertion Under Power" (RIUP) capability. Do not connect or disconnect the module while power is applied. Be sure that power is removed before proceeding.

1. Confirm that MOD power and all sources of SA power are turned off.


In addition to the risks that are described previously, if you remove the module with power applied, the system MOD power bus and SA power bus are affected. For example, you can interrupt MOD power to the other modules in the system. Unintended consequences can occur as a result.

2. If an end cap is installed on the right-most module that is installed in the system, remove it and keep for later use.




ATTENTION: Do not discard the end cap. Use this end cap to cover the exposed interconnections on the last module on the DIN rail. Failure to do so could result in equipment damage or injury from electric shock.

3. Confirm that the DIN rail latch is closed.
4. If the DIN rail latches are open, gently push the rear latch back until the front latch pops up and clicks.

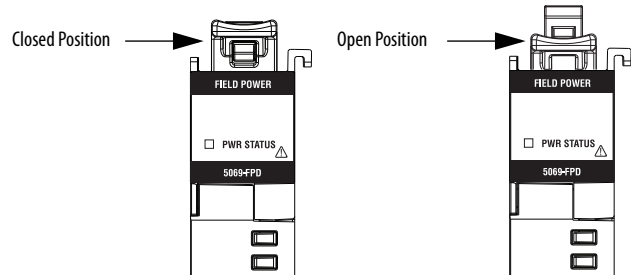

5. Align the interlocking pieces of the field potential distributor with the device on the left. The top interlocking pieces engage first.
6. Push the field potential distributor toward the DIN rail until a click indicates that the field potential distributor is locked in place.

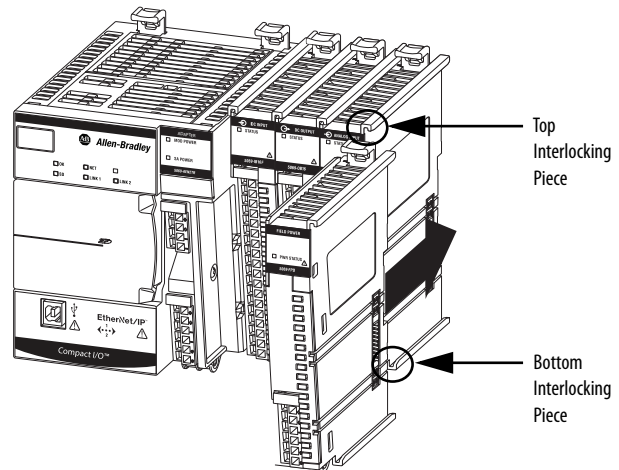

7. Verify that the field potential distributor is installed in one of the following ways:
 - If the field potential distributor is installed on the right side of a controller or adapter, the front of the field potential distributor is set back slightly from the front of the controller or adapter.

Typically, the 5069-FPD field potential distributor is not installed on the right side of a controller or adapter.
 - If you install the 5069-FPD field potential distributor on the right side of a Compact 5000 I/O module, the fronts of the modules are flush.



Install the End Cap

You must install an end cap on the last module in your system. Typically, the 5069-FPD field potential distributor is not the last module in the system

IMPORTANT You install the end cap after the last module is installed on the DIN rail. This design helps to prevent the end cap from going beyond the locked position.

If you push the end cap beyond the locked position or insert it from the backwards direction, you can damage the MOD power bus and SA power bus connector.

1. Align the end cap with the interlocking pieces on the field potential distributor.
2. Push the end cap toward the DIN rail until it locks in place.

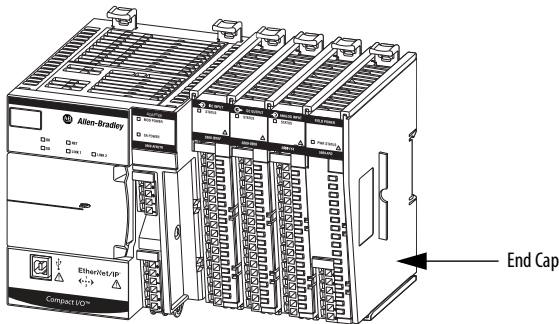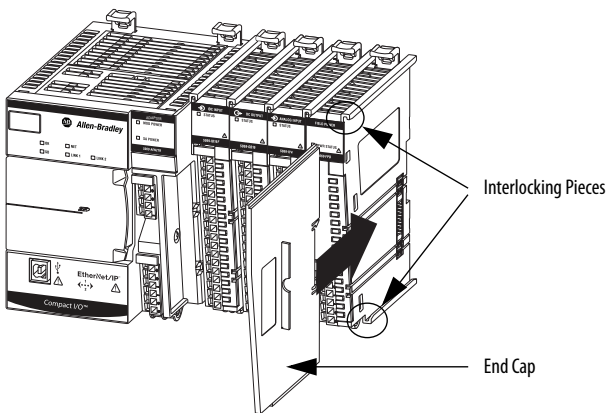

Wire the Removable Terminal Block



WARNING: If you connect or disconnect wiring while power is applied, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

You can connect DC or AC power to the SA power RTB.

Connect SA DC Power

Before you connect an external DC power source to the SA power RTB, make sure that the SA power source is properly sized. For example, if the total SA power current draw is 7 A, you can use an SA power supply that is limited to 7 A.





WARNING: If you connect or disconnect wiring while the field-side power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

1. Confirm that MOD power and all sources of SA power are turned off.
2. Strip insulation from the wires that you connect to the RTB.

| RTB Type | Action |
|----------|--|
| Screw | Strip 12 mm (0.47 in.) of insulation from the wires. |
| Spring | Strip 10 mm (0.39 in.) of insulation from the wires. |

3. Connect the DC(+) wire from the external DC power supply to the first SA (+) terminal.


| RTB Type | Action |
|----------|--|
| Screw | <ol style="list-style-type: none"> 1. Insert the wire into the terminal. 2. Turn the screwdriver to close the terminal on the wire. Torque the screw to 0.4 N·m (3.5 lb·in). |
| Spring | Push the wire into the terminal. If the wire is too thin, crimp a wire ferrule on the wire and insert it. |

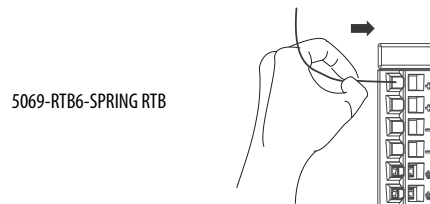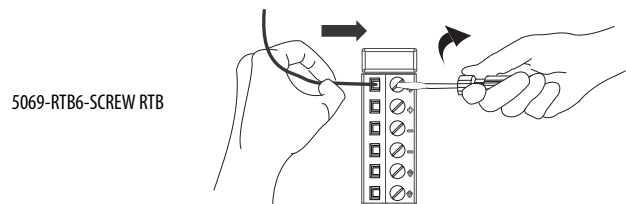


- Connect the DC(—) wire from the external SA DC power supply to the first SA(—) terminal.

| RTB Type | Action |
|----------|--|
| Screw | 1. Insert the wire into the terminal. 2. Turn the screwdriver to close the terminal on the wire. Torque the screw to 0.4 N·m (3.5 lb·in). |
| Spring | Push the wire into the terminal. If the wire is too thin, crimp a wire ferrule on the wire and insert it. |

5069-RTB6-SCREW RTB

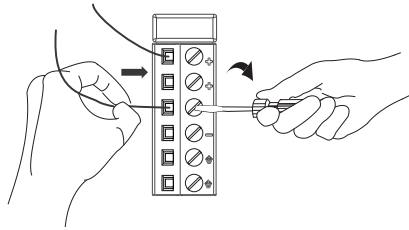


5069-RTB6-SPRING RTB

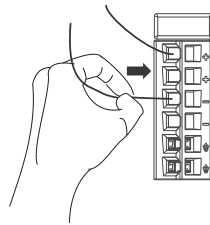


- Connect a wire from an earth ground location to the first ground (⏏) on the RTB. The earth ground location can be the external SA power supply, the DIN rail, or other earth ground location.

| RTB Type | Action |
|----------|--|
| Screw | 1. Insert the wire into the terminal. 2. Turn the screwdriver to close the terminal on the wire. Torque the screw to 0.4 N·m (3.5 lb·in). |
| Spring | Push the wire into the terminal. If the wire is too thin, crimp a wire ferrule on the wire and insert it. |

5069-RTB6-SCREW RTB

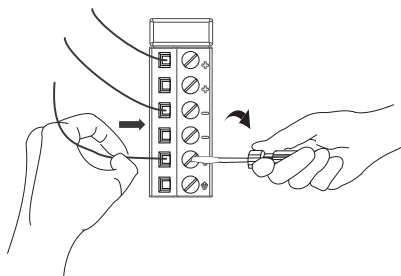

5069-RTB6-SPRING RTB

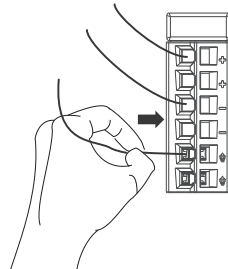

TIP

This ⏏ symbol denotes an earth ground terminal that provides a low impedance path between electrical circuits and earth for safety purposes and provides noise immunity improvement. This connection must be made for safety purposes.

Connect AC Power

Before you connect an external AC power source to the SA power RTB, make sure that the SA power source is properly sized. For example, if the total SA power current draw is 7 A, you can use an SA power supply that is limited to 7 A.



WARNING: If you connect or disconnect wiring while the field-side power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.


- Verify that the external power supply is not powered on.
- Strip insulation from the wires that you connect to the RTB.

| RTB Type | Action |
|----------|--|
| Screw | Strip 12 mm (0.47 in.) of insulation from the wires. |
| Spring | Strip 10 mm (0.39 in.) of insulation from the wires. |


- Connect the L1/AC(+) wire from the external SA AC power source to the first SA (+) terminal.

| RTB Type | Action |
|----------|--|
| Screw | 1. Insert the wire into the terminal. 2. Turn the screwdriver to close the terminal on the wire. Torque the screw to 0.4 N·m (3.5 lb·in). |
| Spring | Push the wire into the terminal. If the wire is too thin, crimp a wire ferrule on the wire and insert it. |

5069-RTB6-SCREW RTB


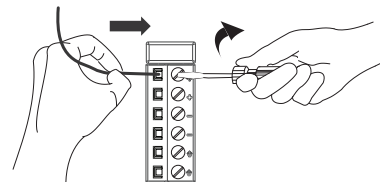


5069-RTB6-SPRING RTB

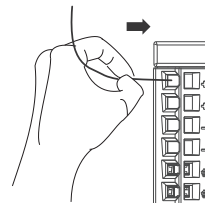



- Connect the L2/N/AC (—) wire from the external SA AC power source to the first SA (—) terminal.

| RTB Type | Action |
|----------|--|
| Screw | <ol style="list-style-type: none"> Insert the wire into the terminal. Turn the screwdriver to close the terminal on the wire. Torque the screw to 0.4 N·m (3.5 lb·in). |
| Spring | Push the wire into the terminal. If the wire is too thin, crimp a wire ferrule on the wire and insert it. |

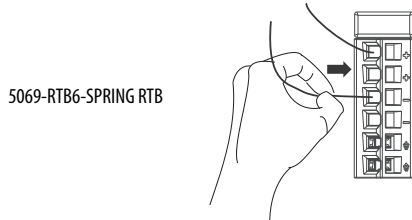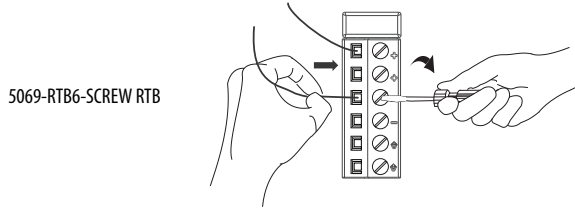

- Connect a wire from an earth ground location to the first ground (⏏) on the RTB. The earth ground location can be the external SA power supply, the DIN rail, or other earth ground location.

| RTB Type | Action |
|----------|--|
| Screw | <ol style="list-style-type: none"> Insert the wire into the terminal. Turn the screwdriver to close the terminal on the wire. Torque the screw to 0.4 N·m (3.5 lb·in). |
| Spring | Push the wire into the terminal. If the wire is too thin, crimp a wire ferrule on the wire and insert it. |

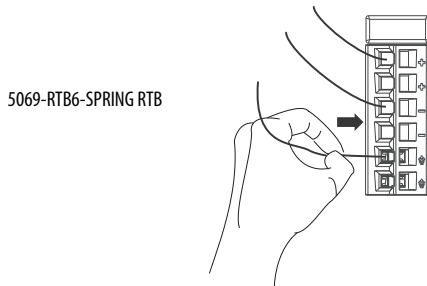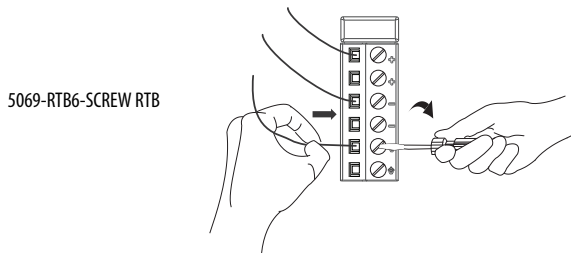

TIP

This ⏏ symbol denotes an earth ground terminal that provides a low impedance path between electrical circuits and earth for safety purposes and provides noise immunity improvement. This connection must be made for safety purposes.



Disconnect Wires from the RTB



WARNING: If you connect or disconnect wiring while the field-side power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

If necessary, disconnect wires from the RTB.

| RTB Type | Action |
|----------|--|
| Screw | <ol style="list-style-type: none"> Turn the screwdriver counter-clockwise to open the terminal. Remove the wire. |
| Spring | <ol style="list-style-type: none"> Insert and hold a screwdriver in the right-side terminal. Remove the wire. Pull out the screwdriver. |

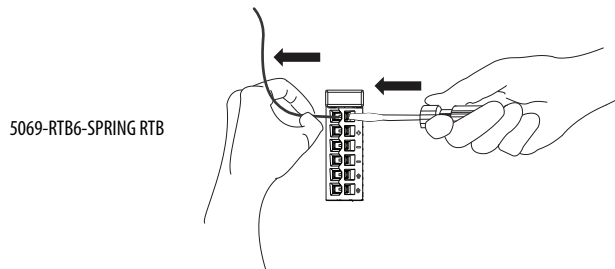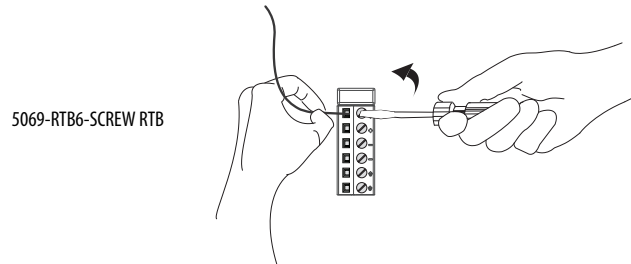

Use a Cable Tie

After you connect the required wires to the RTB, you can use a cable tie to bundle the wires. There is a lower hook at the bottom of the module that you use to secure the tied bundle to the module.

1. Make sure that you have a cable tie long enough to contain the wires that are connected to the module.
The maximum width of the cable tie is 4.5 mm (0.18 in).
2. Gather the wires at the bottom of the module.
3. Thread the cable tie through the lower hook at the bottom of the RTB.
4. Wrap the cable tie around the wires and secure it.

Power the System

After you install all Compact 5000 I/O modules, you can turn on MOD power and, if used, SA power to the system.

For more information on MOD power and SA power, see [System Power Considerations on page 6](#).

Remove the Module



ATTENTION: Do not remove or replace the module while power is applied. Interruption of the backplane can result in unintentional operation or machine motion.

1. Turn off MOD power and SA power to the system.

IMPORTANT Before you remove power from the MOD power RTB and, if used, SA power RTB, consider the effect on your system.

When you remove MOD power from the controller or adapter, you shut down power to all modules in the Compact 5000 I/O system. That is, all system-side is removed. When you remove SA power from the adapter, all field-side power that is provided by the adapter is removed.



We strongly recommend that you take the appropriate actions to help prevent unintended consequences that can result from a system power shutdown before removing MOD power or SA power.

Despite the removal of SA power, the 5069-OB16 and 5069-OB16F continue to receive field-side power from external power source that is connected to the LA (+) and LA (-) terminals on the module.

2. If necessary, remove the end cap from the right side of the field potential distributor.
3. If desired, disconnect wires from the RTB as described on [page 11](#).

IMPORTANT The graphics in this section show a 5069-FPD field potential distributor with wires that are disconnected from the RTB. You can leave the wires connected to the RTB and remove the RTB from the system.

4. Press the DIN rail latch down until it clicks and let go of the latch.
5. Pull the module off the DIN rail.

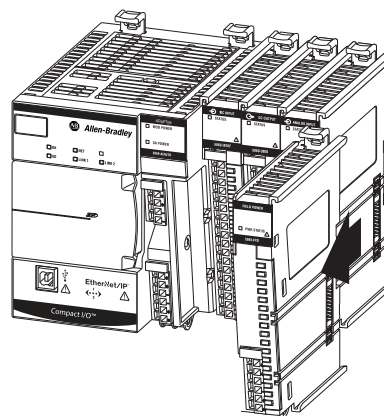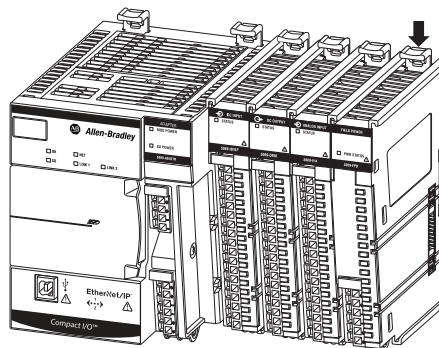

6. To replace the 5069-FPD field potential distributor, follow the steps that are described beginning at [Install the Field Potential Distributor on page 8](#).

Specifications

This table lists a subset of specifications for the 5069-FPD field potential distributor. For a complete list of specifications, see the Compact 5000 I/O Modules and EtherNet/IP Adapters Technical Data, publication [5069-TD001](#).

| Attribute | 5069-FPD |
|--|--|
| Temperature, operating <ul style="list-style-type: none"> • IEC 60068-2-1 (Test Ad, Operating Cold), • IEC 60068-2-2 (Test Bd, Operating Dry Heat), • IEC 60068-2-14 (Test Nb, Operating Thermal Shock) | 0...60 °C (32...140 °F) |
| Temperature, surrounding air, max | 60 °C (140 °F) |
| Enclosure type rating | None (open-style) |
| Voltage and current ratings | |
| MOD Power (Passthrough) | 9.55 A @ 18...32V DC |
| SA Power | 10 mA @ 0...32V DC 25 mA @ 0...240V AC, 47...63 Hz ATEX/IECEX, 125V AC, max |
| SA Power (Passthrough) | 9.99 A @ 0...32V DC 9.975 A @ 0...240V AC, 47...63 Hz ATEX/IECEX, 125V AC, max |
| Do not exceed 10 A MOD or SA Power (Passthrough) current draw | |
| Isolation voltage | 300V (continuous), Basic Insulation Type Type tested at 1500V AC for 60 s |
| Wire size | |
| 5069-RTB6-SCREW connections | 0.5...1.5 mm ² (22...16 AWG) solid or stranded shielded copper wire rated at 105 °C (221 °F), or greater, 3.5 mm (0.14 in.) max diameter including insulation, single wire connection only. |
| 5069-RTB6-SPRING connections | 0.5...1.5 mm ² (22...16 AWG) solid or stranded shielded copper wire rated at 105 °C (221 °F), or greater, 2.9 mm (0.11 in.) max diameter including insulation, single wire connection only. |
| Insulation stripping length | |
| 5069-RTB6-SCREW connections | 12 mm (0.47 in.) |
| 5069-RTB6-SPRING connections | 10 mm (0.39 in.) |
| RTB torque specifications (5069-RTB6-SCREW RTB only) | 0.4 N-m (3.5 lb-in) |
| North American Temp Code | T4 |
| ATEX Temp Code | T4 |
| IECEX Temp Code | T4 |

Additional Resources

For more information on the products that are described in this publication, use these resources.

| Resource | Description |
|--|---|
| CompactLogix 5380 Controllers User Manual, publication 5069-UM001 | Describes how to use CompactLogix 5380 controllers. |
| EtherNet/IP Communication Modules in 5000 Series Systems User Manual, publication ENET-UM004 | Describes how to use the Compact 5000 I/O EtherNet/IP adapters. |
| Compact 5000 I/O Modules and EtherNet/IP Adapters Technical Data, publication 5069-TD001 | Provides Compact 5000 I/O modules and EtherNet/IP adapters specifications. |
| Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1 | Provides general guidelines for installing a Rockwell Automation industrial system. |
| Product Certifications website, http://ab.com | Provides declarations of conformity, certificates, and other certification details. |

You can view or download publications at <http://www.rockwellautomation.com/literature/>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

Notes:

Rockwell Automation Support

Use the following resources to access support information.

| | | |
|---|---|---|
| Technical Support Center | Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates. | https://rockwellautomation.custhelp.com/ |
| Local Technical Support Phone Numbers | Locate the phone number for your country. | http://www.rockwellautomation.com/global/support/get-support-now.page |
| Direct Dial Codes | Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer. | http://www.rockwellautomation.com/global/support/direct-dial.page |
| Literature Library | Installation Instructions, Manuals, Brochures, and Technical Data. | http://www.rockwellautomation.com/global/literature-library/overview.page |
| Product Compatibility and Download Center (PCDC) | Get help determining how products interact, check features and capabilities, and find associated firmware. | http://www.rockwellautomation.com/global/support/pcdc.page |

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-e.pdf.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, Compact 5000, CompactLogix, Rockwell Automation, and Rockwell Software are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 5069-IN001C-EN-P - November 2017

Supersedes Publication 5069-IN001B-EN-P - October 2015

PN-469208

Copyright © 2017 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.