




Safety relays

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.

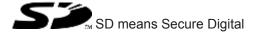

Introduction	4
Validity of documentation	4
Using the documentation	4
Definition of symbols	4
Safety	5
Intended use	5
Safety regulations	5
Safety assessment	5
Use of qualified personnel	6
Warranty and liability	6
Disposal	6
For your safety	6
Unit features	7
Safety features	7
Block diagram/terminal configuration	7
Type: AC/DC	7
Type: DC	8
Function Description	8
Operating modes	8
Timing diagram	9
Installation	9
Wiring	10
Preparing for operation	11
	10
Operation	12
Status indicators	13
- 11 1 1 1	40
Faults - Interference	13
Disconsions in man	40
Dimensions in mm	13
Tankainal dataila	4.4
Technical details	14
Safety characteristic data	17
Cumulama más mudata	40
Supplementary data	18
Service life graph	19
Oudou vofovonoo	20
Order reference	20
EC declaration of conformity	20

Introduction

Validity of documentation

This documentation is valid for the product PNOZ X5. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special fea-

Safety

Intended use

The safety relay PNOZ X5 provides a safety-related interruption of a safety circuit.

The safety relay meets the requirements of EN 60947-5-1, EN 60204-1 and VDE 0113-1 and may be used in applications with

- ▶ E-STOP pushbuttons
- Safety gates
- Light grids and safety switches with detection of shorts across contacts

The following is deemed improper use in particular:

- Any component, technical or electrical modification to the product
- Use of the product outside the areas described in this manual
- Use of the product outside the technical details (see Technical details [4] 14]).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Safety regulations

Safety assessment

Before using a unit it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- Are familiar with the basic regulations concerning health and safety / accident prevention,
- Have read and understood the information provided in this description under "Safety"
- Have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended
- Damage can be attributed to not having followed the guidelines in the manual
- Operating personnel are not suitably qualified
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

Disposal

- In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

Unit features

- Positive-guided relay outputs:
 - 2 safety contacts (N/O), instantaneous
- Connection options for:
 - E-STOP pushbuttons
 - Safety gate limit switches
 - Start buttons
 - Light grids and safety switches with detection of shorts across contacts
- LED display for:
 - Supply voltage
 - Switch status of the safety contacts
- See order reference for unit types

Safety features


The safety relay meets the following safety requirements:

- The circuit is redundant with built-in self-monitoring.
- The safety function remains effective in the case of a component failure.
- The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.

Block diagram/terminal configuration

Type: AC/DC


U_B: 24 VAC/DC; Order no. 774325

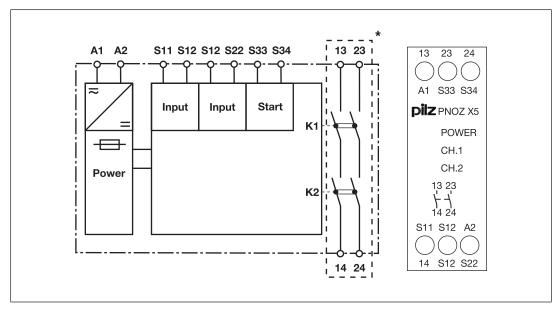

^{*}Insulation between the non-marked area and the relay contacts: Basic insulation (over-voltage category III), Protective separation (overvoltage category II)

Type: DC

U_B: 12 VDC; Order no. 774326

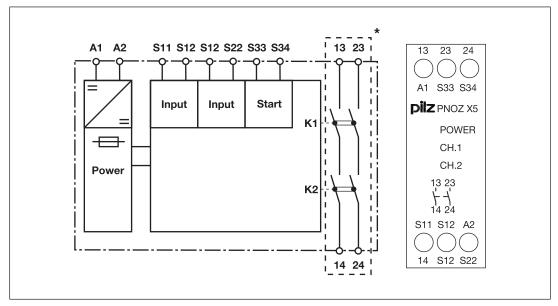

^{*}Insulation between the non-marked area and the relay contacts: Basic insulation (over-voltage category III), Protective separation (overvoltage category II)

Function Description

The safety relay PNOZ X5 provides a safety-oriented interruption of a safety circuit. When supply voltage is supplied the "POWER" LED is lit. The unit is ready for operation when the start circuit S33-S34 is closed.


- Input circuit is closed (e.g. E-STOP pushbutton not operated):
 - The LEDs "CH.1" and "CH.2" are lit.
 - Safety contacts 13-14 and 23-24 are closed. The unit is active.
- Input circuit is opened (e.g. E-STOP pushbutton operated):
 - The LEDs "CH.1" and "CH.2" go out.
 - Safety contacts 13-14 and 23-24 are redundantly opened.

Operating modes

- Single-channel operation: No redundancy in the input circuit, earth faults in the start and input circuit are detected.
- Dual-channel operation without detection of shorts across contacts: Redundant input circuit, detects PNOZ X5
 - earth faults in the start and input circuit,
 - short circuits in the input circuit.
- Automatic start: Unit is active once the input circuit has been closed.
- Manual start: Unit is active once the input circuit and the start circuit are closed.
- Increase in the number of available contacts by connecting contact expander modules or external contactors/relays.

PNOZ X5 PILZ

Timing diagram

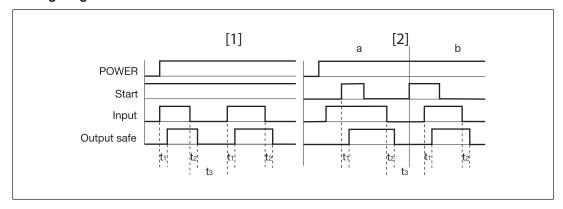

Legend

Power: Supply voltage

Start: Start circuitInput: Input circuit

Output safe: Safety contacts

[1]: Automatic start

[2]: Manual start

a: Input circuit closes before start circuit

b: Start circuit closes before input circuit

t₁: Switch-on delay

t₂: Delay-on de-energisation

t₃: Recovery time

Installation

- The unit should be installed in a control cabinet with a protection type of at least IP54.
- Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).
- When installed vertically: Secure the unit by using a fixing element (e.g. retaining bracket or end angle).

Wiring

Please note:


- Information given in the "Technical details [14]" must be followed.
- ▶ The outputs 13-14, 23-24 are safety contacts.
- To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [4]).
- Calculation of the max. cable length I_{max} in the input circuit:

$$I_{max} = \frac{R_{lmax}}{R_l / km}$$

 R_{lmax} = max. overall cable resistance (see Technical details [14]) R_{l} / km = cable resistance/km

- Use copper wire that can withstand 60/75 °C.
- Sufficient fuse protection must be provided on all output contacts with capacitive and inductive loads.
- Do not switch low currents using contacts that have been used previously with high currents.
- When connecting magnetically operated, reed proximity switches, ensure that the max. peak inrush current (on the input circuit) does not overload the proximity switch.
- The power supply must comply with the regulations for extra low voltages with protective electrical separation (SELV, PELV) in accordance with VDE 0100, Part 410.
- ▶ Ensure the wiring and EMC requirements of EN 60204-1 are met.

Preparing for operation

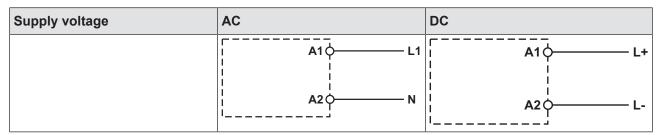

Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts	S11 0 S12 0 S12 0 S22 0	S11 0 S1 7-1 S1 7-1 S12 0 S12 0 S22 0 S22 0
Safety gate without detection of shorts across contacts	S11 0 S12 0 S12 0 S22 0 S22 0	S11 O S1 S2 S12 O S22 O
Light guard or safety switch, detection of shorts across contacts via ESPE (only when U _B = 24 VDC)		24 V DC A10 A2 S12 GND



NOTICE

With single-channel wiring the safety level of your machine/plant may be lower than the safety level of the unit (see Safety characteristic data [17]).



NOTICE

Operation with a light guard or safety switch

It must not be possible to switch off the supply voltage for the PNOZ X5 separately from the supply voltage for the light guard or safety switch.


Start circuit	Automatic start	Manual start
	S33 ¢	S33 O S34 O



NOTICE

In the event of an automatic start or manual start with bridged start contact (fault):

The unit starts up automatically when the safeguard is reset, e.g. when the E-STOP pushbutton is released. Use external circuit measures to prevent an unexpected restart.

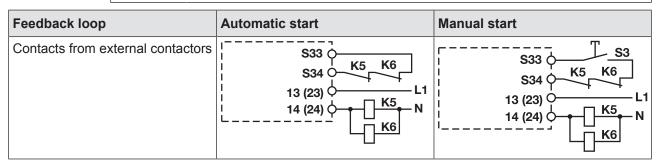

Legend

> S1/S2: E-STOP/safety gate switch

> S3: Reset button

► 1: Switch operated

: Gate open

: Gate closed

Operation

When the relay outputs are switched on, the mechanical contact on the relay cannot be tested automatically. Depending on the operational environment, measures to detect the non-opening of switching elements may be required under some circumstances.

When the product is used in accordance with the European Machinery Directive, a check must be carried out to ensure that the safety contacts on the relay outputs open correctly. Open the safety contacts (switch off output) and start the device again, so that the internal diagnostics can check that the safety contacts open correctly

- for SIL CL 3/PL e at least 1x per month
- for SIL CL 2/PL d at least 1x per year



NOTICE

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

Status indicators

LEDs indicate the status and errors during operation:



POWER

Supply voltage is present.


CH.1
Safety contacts of channel 1 are closed.

Safety contacts of channel 2 are closed.

Faults - Interference

- Earth fault: The supply voltage fails and the safety contacts open. Once the cause of the respective fault has been rectified and the supply voltage is switched off for approx. 1 minute, the unit is ready for operation again.
- Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.
- LED "POWER" does not light: Short circuit or no supply voltage.

Dimensions in mm

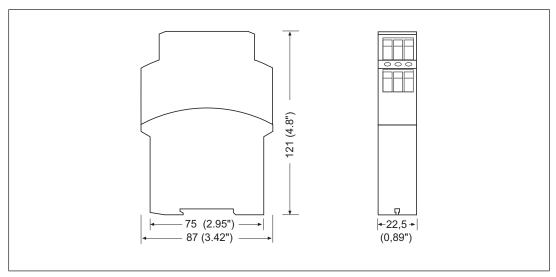

Technical details

General	774325	774326
Approvals	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	774325	774326
Supply voltage		
Voltage	24 V	12 V
Kind	AC/DC	DC
Voltage tolerance	-15 %/+10 %	-20 %/+20 %
Output of external power supply (AC)	4 VA	_
Output of external power supply (DC)	2 W	2,5 W
Frequency range AC	50 - 60 Hz	_
Residual ripple DC	160 %	20 %
Duty cycle	100 %	100 %
Max. inrush current impulse		
Current pulse, A1	1,7 A	2,6 A
Pulse duration, A1	1,5 ms	0,5 ms
Inputs	774325	774326
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Start circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Input circuit DC	55 mA	70 mA
Start circuit DC	55 mA	90 mA
Feedback loop DC	55 mA	90 mA
Min. input resistance at power-on	95 Ohm	24 Ohm
Max. overall cable resistance RI-max		
Single-channel at UB DC	50 Ohm	20 Ohm
Single-channel at UB AC	150 Ohm	=
Dual-channel without detection of shorts across contacts at UB DC	100 Ohm	35 Ohm
Dual-channel without detection of shorts across contacts at UB AC	250 Ohm	_
Relay outputs	774325	774326
Number of output contacts		
Safety contacts (N/O), instant- aneous	2	2
Max. short circuit current IK	1 kA	 1 kA

Relay outputs	774325	774326
Utilisation category		
In accordance with the standard	EN 60947-4-1	EN 60947-4-1
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Min. current	0.01 A	0,01 A
Max. current	6 A	6 A
Max. power	1500 VA	1500 VA
DC1 at	24 V	24 V
Min. current	0,01 A	0,01 A
Max. current	4 A	4 A
	100 W	100 W
Max. power	100 44	100 44
Utilisation category	EN 00047 F 4	EN 600 47 E 4
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	5 A	5 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	4 A	4 A
Utilisation category in accordance with UL		
Voltage	240 V AC G. P.	240 V AC G. P.
With current	6 A	6 A
Voltage	24 V DC Resistive	24 V DC Resistive
With current	4 A	4 A
Pilot Duty	C300, R300	B300, R300
External contact fuse protection, safety contacts		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Max. melting integral	240 A ² s	100 A²s
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	4 A	4 A
Blow-out fuse, gG	6 A	6 A
Circuit breaker 24V AC/DC,		
characteristic B/C	4 A	4 A
Conventional thermal current	6 A	6 A
Contact material	AgSnO2 + 0,2 µm Au	AgSnO2 + 0,2 μm Au

Times	774325	774326
Switch-on delay		
With automatic start typ.	115 ms	125 ms
With automatic start max.	180 ms	230 ms
With automatic start after power		
on typ.	120 ms	125 ms
With automatic start after power		
on max.	190 ms	230 ms
With manual start typ.	40 ms	80 ms
With manual start max.	180 ms	230 ms
Delay-on de-energisation		
With E-STOP typ.	15 ms	12 ms
With E-STOP max.	30 ms	20 ms
With power failure typ.	110 ms	20 ms
With power failure max.	160 ms	30 ms
Recovery time at max. switching frequency 1/s		
After E-STOP	50 ms	40 ms
After power failure	200 ms	70 ms
Supply interruption before de-ener-		
gisation	20 ms	10 ms
Simultaneity, channel 1 and 2 max.	∞	∞
Environmental data	774325	774326
Environmental data Climatic suitability	774325 EN 60068-2-78	774326 EN 60068-2-78
Climatic suitability		
Climatic suitability Ambient temperature	EN 60068-2-78	EN 60068-2-78
Climatic suitability Ambient temperature Temperature range	EN 60068-2-78	EN 60068-2-78
Climatic suitability Ambient temperature Temperature range Storage temperature	EN 60068-2-78 -10 - 55 °C	EN 60068-2-78 -10 - 55 °C
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range	EN 60068-2-78 -10 - 55 °C	EN 60068-2-78 -10 - 55 °C
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability	EN 60068-2-78 -10 - 55 °C -40 - 85 °C	EN 60068-2-78 -10 - 55 °C -40 - 85 °C
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration In accordance with the standard	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration In accordance with the standard Frequency	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration In accordance with the standard Frequency Amplitude	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration In accordance with the standard Frequency Amplitude Airgap creepage	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II
Climatic suitability Ambient temperature Temperature range Storage temperature Temperature range Climatic suitability Humidity Condensation during operation EMC Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2	EN 60068-2-78 -10 - 55 °C -40 - 85 °C 93 % r. h. at 40 °C Not permitted EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2

Environmental data	774325	774326
Protection type		
Housing	IP40	IP40
Terminals	IP20	IP20
Mounting area (e.g. control cab-		
inet)	IP54	IP54
Mechanical data	774325	774326
Mounting position	Any	Any
Mechanical life	10,000,000 cycles	10,000,000 cycles
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Тор	PPO UL 94 V0	PPO UL 94 V0
Connection type	Screw terminal	Screw terminal
Mounting type	Fixed	Fixed
Conductor cross section with screw terminals		
1 core flexible	0,2 - 4 mm², 24 - 10 AWG	0,2 - 4 mm², 24 - 10 AWG
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp con-	, , ,	, , ,
nectors	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG
Torque setting with screw terminals	0,6 Nm	0,6 Nm
Dimensions		
Height	87 mm	87 mm
Width	22,5 mm	22,5 mm
Depth	121 mm	121 mm
Weight	190 g	210 g

Where standards are undated, the 2017-01 latest editions shall apply.

Safety characteristic data



NOTICE

You must comply with the safety-related characteristic data in order to achieve the required safety level for your plant/machine.

Operating Mode	EN ISO 13849-1:	EN ISO 13849-1:	EN 62061 SIL CL	EN 62061 PFH _D [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1:
	2015	2015	0.2 02		0.1		2015
	PL	Category					T _м [year]
_	PL e	Cat. 4	SIL CL 3	2,31E-09	SIL 3	2,03E-06	20

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

Supplementary data



CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.


The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

Unit type with UB 12 VDC

U_B: 12 VDC; Order no. 774326

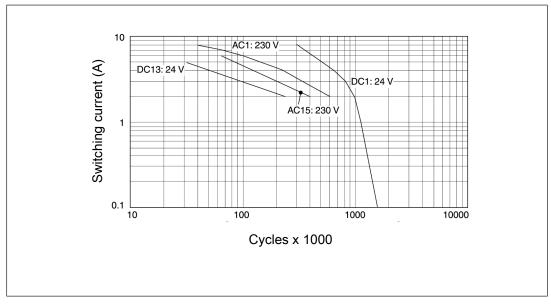

Example

Inductive load: 2 A

Utilisation category AC15


Contact service life: 400 000 cycles

Provided the application to be implemented requires fewer than 400 000 cycles, the PFH value (see Technical details) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Unit type with UB 24 VAC/DC

U_B: 24 VAC/DC; Order no. 774325

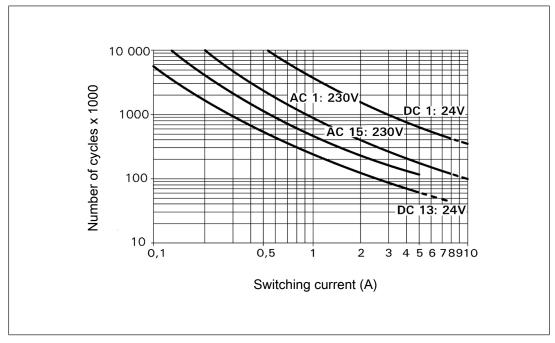

Example

Inductive load: 0.2 A

Utilisation category: AC15

Contact service life: 4 000 000 cycles

Provided the application to be implemented requires fewer than 4 000 000 cycles, the PFH value (see Technical details) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Order reference

Product type	Features	Connection type	Order no.
PNOZ X5	24 VAC/DC	Screw terminals	774 325
PNOZ X5	12 V DC	Screw terminals	774 326

EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/support/downloads.

Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

SafayEYE®, SafetyNET p® THE SPIRIT OF SAFETY® are registered and protected trademarks of Pliz GmbH & Co. KG in some countries. We would point out that product features mit from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.

InduraNET p°, PAS4000°, PAScall°, PASconiig°, Pilz°, PIlz°, PUD°, PMCprinc°, PMCprotego°, PMCtendo°, PMD°, PMI°, PNI0z°, Prino°, PSENº, PSS°, PVIS°, SafetyBUS



Technical support is available from Pilz round the clock.

Ame	erio	cas

Brazil

+55 11 97569-2804

Canada

+1 888-315-PILZ (315-7459)

Mexico

+52 55 5572 1300

USA (toll-free)

+1 877-PILZUSA (745-9872)

Asia

China

+86 21 60880878-216

Japan

+81 45 471-2281

South Korea

+82 31 450 0680

Australia

+61 3 95600621

Europe

Austria

+43 1 7986263-0

Belgium, Luxembourg

+32 9 3217575

France

+33 3 88104000

Germany

+49 711 3409-444

Ireland

+353 21 4804983

Italy, Malta

+39 0362 1826711

Scandinavia

+45 74436332

Spain

+34 938497433

Switzerland

+41 62 88979-30

The Netherlands

+31 347 320477

Turkey

+90 216 5775552

United Kingdom

+44 1536 462203

You can reach our international hotline on:

+49 711 3409-444

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies.

Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.











Pilz GmbH & Co. KG
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Tel.: +49 711 3409-0
Fax: +49 711 3409-133
info@pilz.com
www.pilz.com

