

Molded Case Circuit Breaker Specifications

Bulletin Number 140U-D

Topic	Page
Product Line Overview	2
Specifications	3
Trip Curves	4
Approximate Dimensions	6

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

Resource	Description
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications website, http://www.ab.com	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at <http://www.rockwellautomation.com/literature/>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.










Frame Reference	D-Frame
Max. Current I_n	30 A
Current Range	0.5...30 A
Thermal Magnetic	✓
Rotary Operators	✓
Internal Control Modules (Field installed)	✓
Standards Compliance (For information regarding specific breakers, please consult www.ab.com . Standards compliance varies by catalog number.)	
UL 489	✓
UL File Nos.	E334037, E33916
CSA C22.2, No. 5	✓
IEC 60947-2	✓
CE	✓


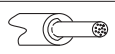
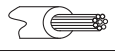


General Data

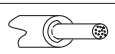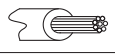



Attribute	140U-D
Number of Poles	2 and 3
Rated Insulation Voltage U_i	
IEC / EN [V]	690
UL, CSA [V]	600
Ratings	HACR
Suitable for continuous operation at 100 percent of rating only if used in cubicle space for	0.5...10 A, cubicle space 250 x 175 x 150 mm (10 x 7 x 6 inches).
Rated Impulse Withstand Voltage U_{imp}	
Pollution degree	3
Main circuits U_{imp} /Overvoltage Category	6 kV/III
Auxiliary circuits U_{imp} /Overvoltage Category	6 kV/III
Safe separation between main and auxiliary circuits	up to 400V
Rated Frequency [Hz]	50/60
Utilization Category	
IEC 60947-2 (Circuit breaker)	A
Life Span	
Mechanical [operations]	100 000
Electrical (I_e max.) [operations]	10 000
Switching Frequency [operations/h]	max. 25
Ambient Temperature	
Storage [°C]	-40...+80
Operation [°C]	-25...+60 (70 with 15 % I_n current reduction)
Climatic resistance	
Moisture change climate (600068-2-30)	23 °C / 83 % relative humidity and 40 °C / 92 % relative humidity, 56 cycles
Dry heat (60086-2-2)	100 °C, relative humidity <50 %, 7 days
Moisture heat (60068-2-3)	40 °C, relative humidity 93 %, 56 days
Site Altitude [m]	to 2000 N.N.
Protection Class	IP2X, when wired
Resistance to Shock , Transport (60068-2-27)	30 g, 11 ms, all axes
Resistance to Vibration , Operation (60068-2-6)	18 g
Overload Protection [°C]	Yes acc. IEC/EN 60947-2, UL489, CSA 22.2, Ambient Temperature Compensation -25...+60
Phase-loss Protection	No phase loss protection
Short circuit protection (Magnetic)	fixed setting 15...20 x I_n
Total Power loss P_v	
@ I_n max. [W]	7.5
Main Disconnect Switch Application	Yes, with accessories
Application Conditions	For utilization outside North America, Assemblies (of products) shall comply to the IEC61439-1 requirements 140U circuit breakers are intended for use in closed areas without hazardous operating conditions such as dust or explosive or corrosive gases. Enclosures of appropriate manner need to be in place to protect devices in such environments.
Standards	UL489; CSA C22.2 No. 5; IEC / EN 60947-1, -2
Certifications	CE; cULus listed Circuit Breaker, File No. E334037 and E33916 (accessories)

Terminal Specifications 140U-D

Attribute	140U-D...
Use 75°C Cu wire only	
Terminal Parts	
Type of terminals	
Screwdriver	Pozidriv No. 2 / Blade No. 3
 1. conductor [mm ²] / [AWG] 2. conductor [mm ²] / [AWG]	1...6/— 1...4/—
 1. conductor [mm ²] / [AWG] 2. conductor [mm ²] / [AWG]	1...6/— 1...6/—
 1. conductor [mm ²] / [AWG] 2. conductor [mm ²] / [AWG]	—/No. 18...10 —/No. 18...10
 1. conductor [mm ²] / [AWG] 2. conductor [mm ²] / [AWG]	1...6/No. 18...10 1...6/No. 18...10
Tightening torque [N•m] / [lb•in]	2...2.5 / 18...22

Terminal specification 140U-D

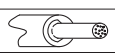
Cat. No.			140U-D...
Use 75°C Cu wire only			
Terminal Parts Type of terminals			
Screwdriver			Pozidriv No. 2 / Blade No. 3
 1. conductor [mm ²]/[AWG] 2. conductor [mm ²]/[AWG]			1...6/— 1...4/—
 1. conductor [mm ²]/[AWG] 2. conductor [mm ²]/[AWG]			1...6/— 1...6/—
 1. conductor [mm ²]/[AWG] 2. conductor [mm ²]/[AWG]			—/No. 18...10 —/No. 18...10
 1. conductor [mm ²]/[AWG] 2. conductor [mm ²]/[AWG]			1...6/No. 18...10 1...6/No. 18...10
Tightening torque	[N•m]/[lb•in]	2...2.5/18...22	

Cat. No.			140U-D-WTE	140U-D-W
Use 75°C Cu wire only				
Rated Thermal Current I_{th}	[A]	64		64
 1. conductor [mm ²]/[AWG]			2.5...25/14...4	—
 1. conductor [mm ²]/[AWG]			2.5...25/14...4	—
 1. conductor [mm ²]/[AWG]			2.5...25/14...4	—
 1. conductor [mm ²]/[AWG]			2.5...25/14...4	—
Tightening torque	[N•m]/[lb•in]	3...3.5/27...31		—

Weights


Description	Weight [g]	Cat.No.
Circuit Breakers	395	140U-D...

Time-Current Characteristic

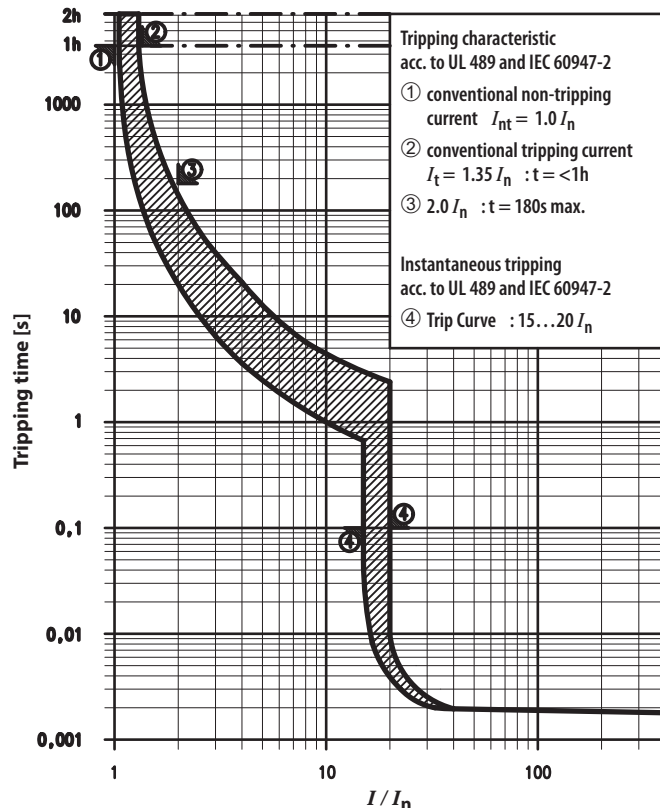


Bulletin 140U-D Molded Case Circuit Breakers (Maximum Cut-Off Current)

140U-D6D...
Max. Cut-Off Current, $U_e = 480V$ at 60 Hz



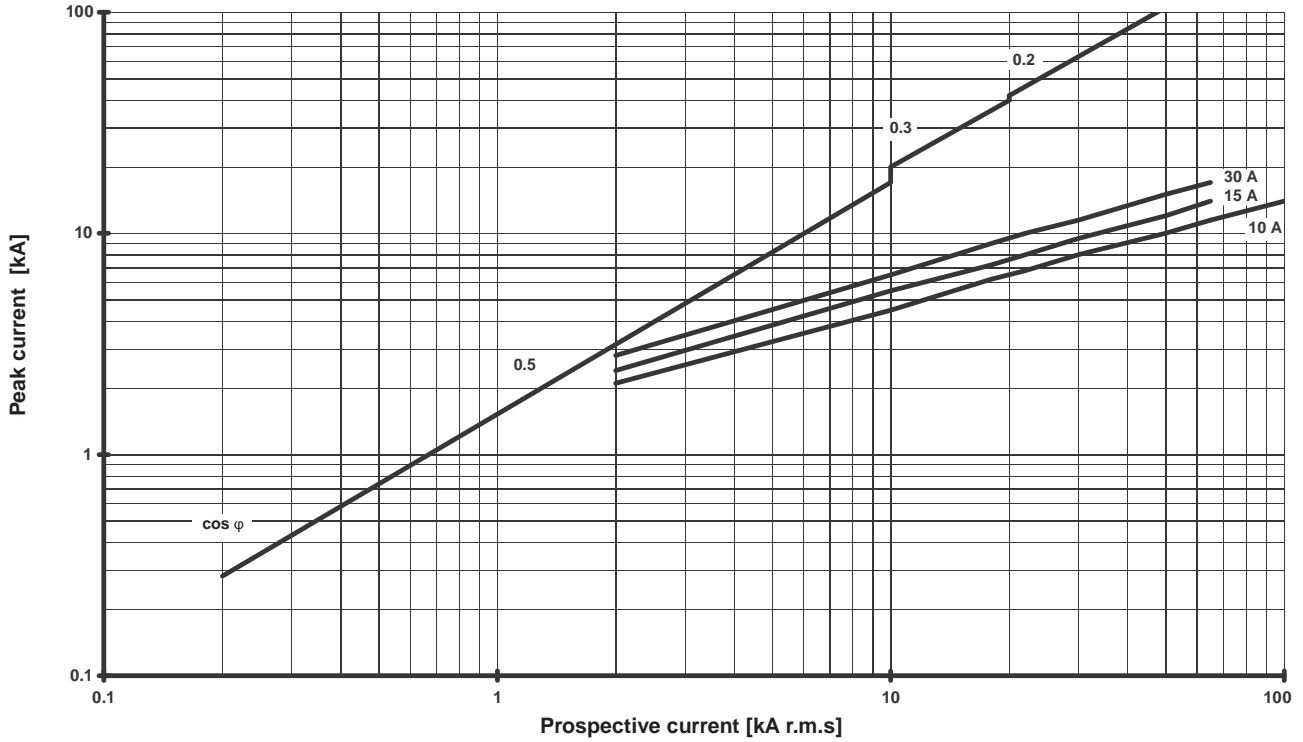


Bulletin 140U-D Molded Case Circuit Breakers (Maximum Let-Through-Energy)

140U-D6D...
Max. Let-Through-Energy, $U_e = 480V$

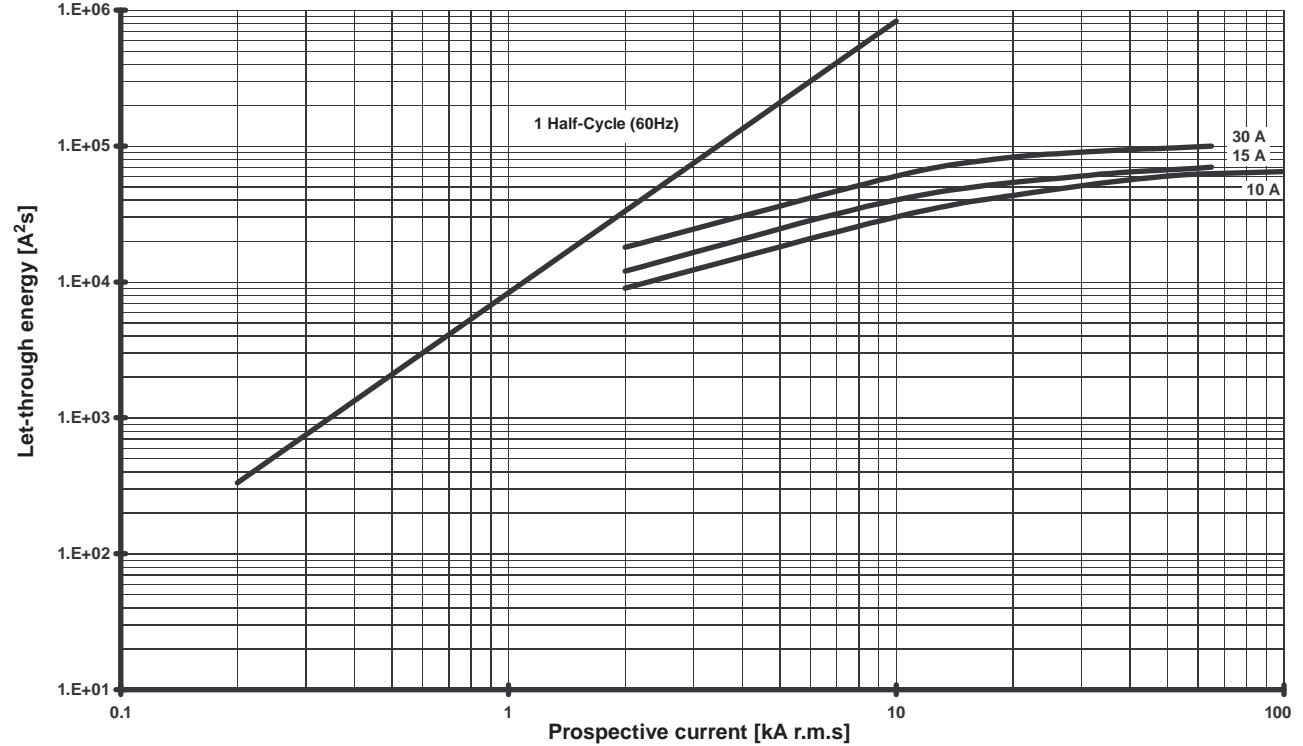


Dimensions are shown in millimeters (inches). Dimensions are not intended to be used for manufacturing purposes.

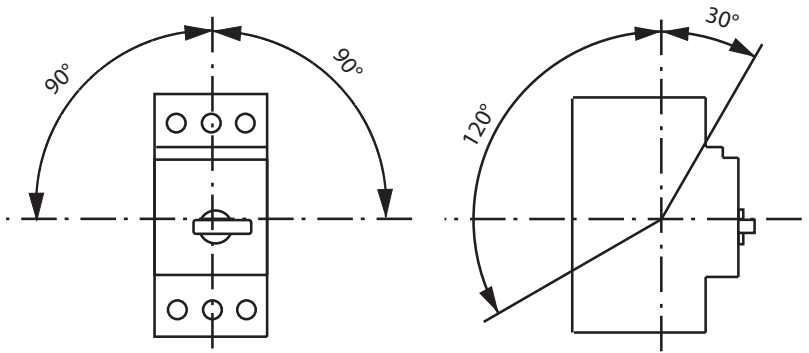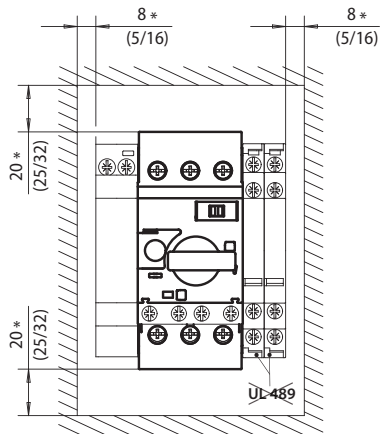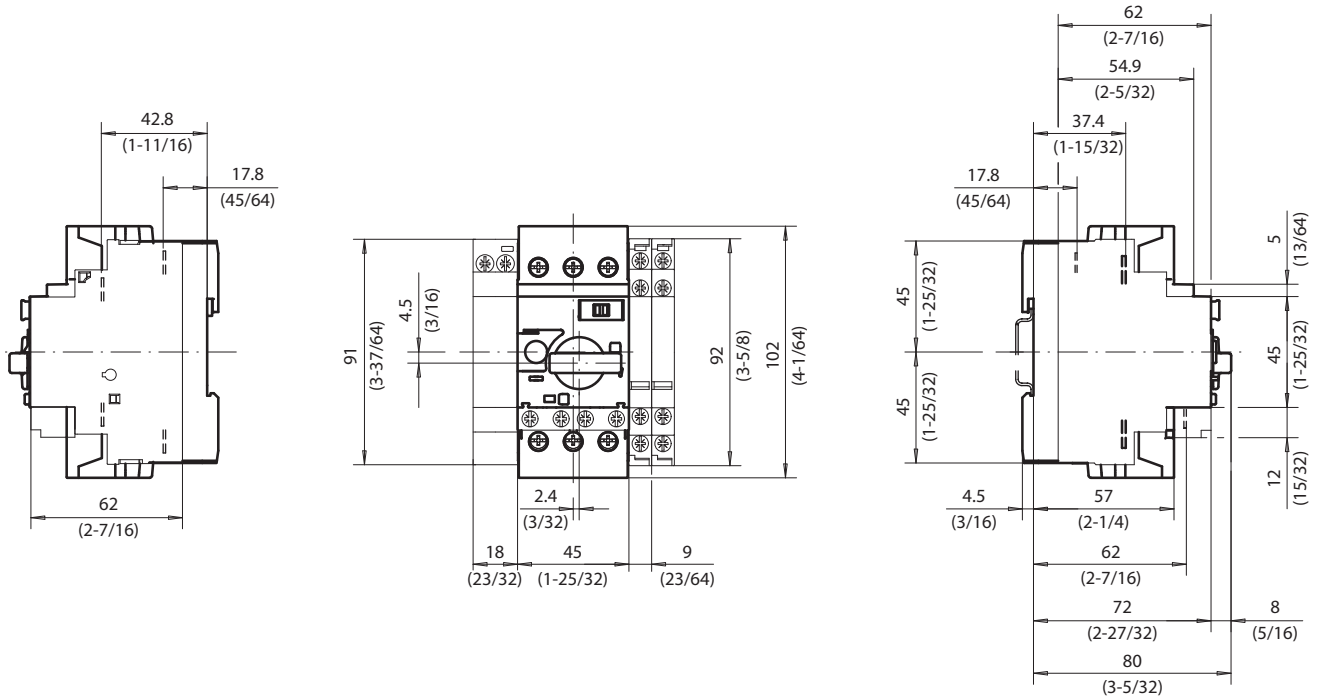

Mounting position

* Minimum distance to grounded parts or walls

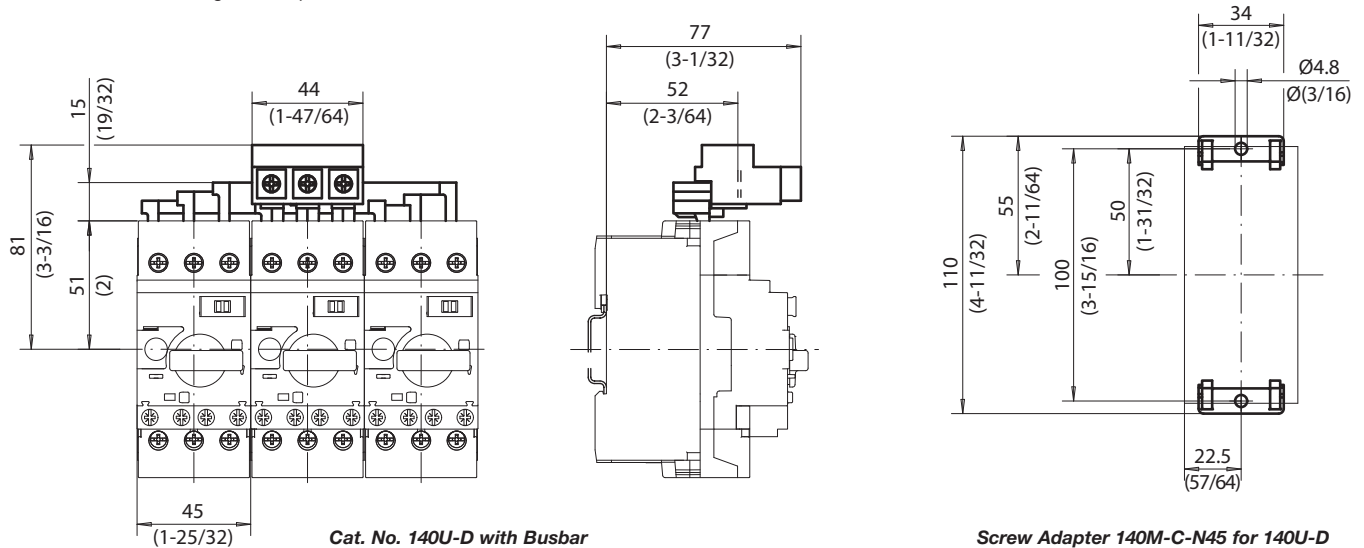

Cat. No. 140U-D with Busbar

Screw Adapter 140M-C-N45 for 140U-D

Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete this form, publication [RA-DU002](#), available at <http://www.rockwellautomation.com/literature/>.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, Rockwell Software, Rockwell Automation, and LISTEN. THINK. SOLVE are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 140U-TD005B-EN-P - October 2015

Supersedes Publication 140U-TD005A-EN-P - October 2014

Copyright © 2015 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.